

TECHNICAL MANUAL

**UNIT AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR**

**PETROLEUM LABORATORY,
SEMI-TRAILER MOUNTED
NSN 6640-00-538-2736**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

*This manual supersedes TM 10-6640-215-23P, dated 30 June 1993.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
28 FEBRUARY 1997**

TECHNICAL MANUAL
NO. 10-6640-215-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 28 February 1997

TECHNICAL MANUAL

**Unit and Direct Support Maintenance
Repair Parts and Special Tools List
for
PETROLEUM LABORATORY,
SEMI-TRAILER MOUNTED
NSN 6640-00-538-2736**

Current as of 3 October 1996

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		PAGE	ILLUS/ FIGURE
Section I.	Introduction	1	
Section II.	Repair Part	1-1	
Group 01	Van, Semi-Trailer		
	Data Plates	1-1	1
	Brackets, Fire Extinguisher, First Aid Kit and Flashlight	2-1	2
	Purge Vents, Propane Locker	3-1	3
	Floor Vent	4-1	4
	Water Inlet Assembly	5-1	5
	Electrical Power Inlet Assembly	6-1	6
	Stowage Box, Roadside	7-1	7
	Stowage Box, Curbside	8-1	8
	Exhaust Vent, Fume Hood and Gum Bath	9-1	9
Group 02	Electrical System Assembly		
	Electrical System Data Plates	10-1	10
	Door Blackout Switches	11-1	11
	Air Conditioner Cables	12-1	12
	Starters and Switches	13-1	13
	Power Outlets	14-1	14
	Distribution and Junction Boxes	15-1	15
	Lighting Fixtures	16-1	16
	Power Panel 1	17-1	17

***This manual supersedes TM 10-6640-215-23P, dated 30 June 1993.**

		PAGE	ILLUS/ FIGURE
Group 02	Electrical System Assembly - Continued		
	Power Panel 2	18-1	18
	Explosion Proof Box (Small)	19-1	19
	Explosion Proof Box (Large)	20-1	20
	Ballast Box	21-1	21
	Purge Control Box	22-1	22
Group 03	Environmental Control Units, 18,000 BTU		
	ECU's	23-1	23
	ECU Controls	24-1	24
Group 04	Purge System		
	Supply and Return Ducts	25-1	25
	Dampers (Equipment Room)	26-1	26
	Intake Vent (Equipment Room)	27-1	27
	Front Purge Vent	28-1	28
	Rear Purge Vent	29-1	29
	Discharge Damper	30-1	30
Group 05	Air System		
	Air Compressor	31-1	31
	Air Tank	32-1	32
	Air Lines	33-1	33
	Gum Bath Lines	34-1	34
Group 06	Vacuum System		
	Vacuum Pump	35-1	35
	Vacuum Lines	36-1	36
Group 07	Water System		
	Water Tank and Pump	37-1	37
	Water Chiller	38-1	38
	Water Heater	39-1	39
	Drain and Sump Pump	40-1	40
	Still	41-1	41
	Water Supply Lines	42-1	42
	Water Return Lines	43-1	43
	Drain Lines	44-1	44
Group 08	Gas Alarm System		
	Gas Alarm Assembly	45-1	45
	Gas Alarm Sensors	46-1	46
	Gas Alarm Kit	47-1	47
Group 09	Cabinet System		
	Storage Cabinets	48-1	48
	Sink and Eyewash	49-1	49
	Steel Locker	50-1	50
	Desiccating Cabinet	51-1	51
	Stool and Bracket	52-1	52
	Bookcase	53-1	53
	Propane Cabinet	54-1	54
	Fume Hood	55-1	55
	Gas Cylinder Cabinet	56-1	56
	Gas Cylinder Rack	57-1	57
	Separometer Shelf	58-1	58
	Jerry Jug	59-1	59
	Drying Rack	60-1	60
	Typewriter Shelf	61-1	61
	Thermometer Case	62-1	62

		PAGE	ILLUS/ FIGURE
Group 09	Cabinet System - Continued		
	Rack and Tray	63-1	63
	De-Ice Kit Bracket	64-1	64
	Oil Thief Rack	65-1	65
	Stowage Brackets, Fuel Sampling and Tool Kits	66-1	66
	Barometer Stowage Bracket	67-1	67
	Stowage Brackets, Sampling Kit and Flashpoint Tester	68-1	68
Group 10	Balance System		
	Balance System	69-1	69
Group 11	Gum Bath System		
	Gum Bath	70-1	70
	Steam Boiler	71-1	71
	Low Pressure Pump	72-1	72
	Blower Vent	73-1	73
Group 12	RVP Testing System		
	RVP Test System	74-1	74
Group 13	Corrosion Testing System		
	Corrosion Test System	75-1	75
Group 14	Viscosity Testing System		
	Viscosity Test System	76-1	76
Group 15	Centrifuge System		
	Centrifuge System	77-1	77
Group 16	Carbon Residue Testing System		
	Carbon Residue Test System	78-1	78
Group 17	Color Comparator System		
	Color Comparator System	79-1	79
Group 18	Grease Unit		
	Grease System	80-1	80
Group 19	Field Testing Kits		
	Field Test Kits	81-1	81
Group 20	Distillation Test Apparatus		
	Distillation Apparatus	82-1	82
Group 21	Freezer (Ice Cube Maker)		
	Freezer	83-1	83
Group 22	Oxygen Stability Unit		
	Gum Test Oxidation Bath W/Gum Stability Test Bomb	84-1	84
	Oxygen Cylinder/Oxygen Lines	85-1	85
	Pressure Recording Gage	86-1	86
Group 23	Laboratory Ovens		
	Laboratory Ovens	87-1	87
Group 24	Burnout Furnace		
	Burnout Furnace	88-1	88
Group 25	Flash Point Testing System		
	Flash Point Test System	89-1	89
Group 26	Bath Foaming Test		
	Bath Foaming Test System	90-1	90
Group 27	Explosion Proof Refrigerator		
	Refrigerator Installation	91-1	91
Group 28	Freezing Point Testing System		
	Freezing Point Test System	92-1	92
Group 29	Petroleum Dropping Point Apparatus		
	Petroleum Dropping Point Apparatus	93-1	93

		PAGE	ILLUS/ FIGURE
Group 30	Air/Gas Drying Apparatus		
	Air/Gas Drying Apparatus	94-1	94
Group 31	Cloud and Pour Point Apparatus		
	Cloud and Pour Point Tester	95-1	95
Group 32	Separometer Unit		
	Separometer	96-1	96
Group 33	Thermal Stability Tester, JFTOT		
	Thermal Stability Test System	97-1	97
	Nitrogen Lines	98-1	98
Group 34	Tetraethyl Lead Testing System		
	Tetraethyl Lead Apparatus	99-1	99
	Rheostat	100-1	100
Group 35	General Laboratory Hot Plates		
	General Lab Hot Plates	101-1	101
Group 36	Flow Control Devices		
	Flow Control Devices	102-2	102
Group 37	Support Items		
	Support Items	103-1	103
Group 38	Bulk Materials		
	Bulk Materials	Bulk-1	
Section III.	Special Tools List (Not Applicable)		
Section IV.	Cross Reference Indexes		
	National Stock Number Index	I-1	
	Part Number Index	I-11	
	Figure and Item Number Index	I-56	

UNIT AND DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit and direct support maintenance of the Petroleum Laboratory, Semi-Trailer Mounted. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance.

3. **EXPLANATION OF COLUMNS (SECTIONS II AND III).**

a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

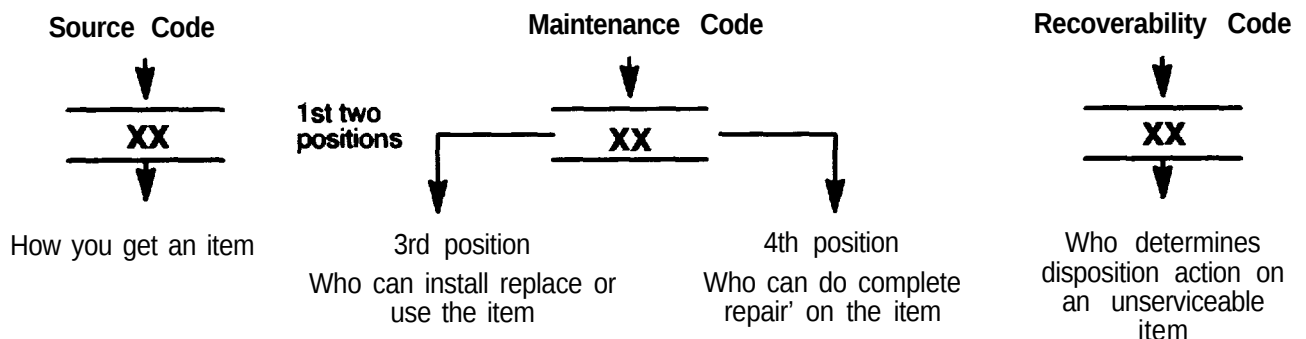

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: