

T M 11-4940-246-24P-1

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR**

**ELECTRONIC SHOP, SEMITRAILER MOUNTED AN/ASM-189A
(NSN 4940-00-234-6114)**

H E A D Q U A R T E R S , D E P A R T M E N T O F T H E A R M Y
JANUARY 1979

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
ELECTRONIC SHOP, SEMITRAILER MOUNTED AN/ASM-189A
(NSN 4940-00-234-6114)**

Current as of 23 October 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION	GROUP	Page	Illus Figure
I.		Introduction	1
II.		Repair Parts List	5
	01	Electronic Shop, Semitrailer Mounted AN/ASM-189A	5
		Equipment Installation	11
		Bracket Installation	19
		Common Items Panel	23
		Wastebasket Holder Assembly	25
		Air Conditioner Installation	29
		Air Conditioner Details	31
		Cable Assembly Exhaust Fan	35
		Inverter, Modified	37
		Conduit and Power Installation	41
		Cable Assembly, Power SMD875147	45
		Cable Assembly, Power SMD887970	47
		Electrical Details	57
		Bus Bar Assembly SMD877903-1	65
		Bus Bar Assembly SMD877903-2	67
	0101	Semitrailer Van Facility M373A2 (No parts authorized)	
	0102	Vestibule	
		Vestibule Assembly Forward	69
		Vestibule Assembly Rear	71
	0103	Cabinets and Workbenches	
		Shelter Assembly, Equipment	
		Storage SMD887805-1	73
		Shelter Assembly, Equipment	
		Storage SMD887805-2	75

	Shelter Assembly, Equipment		
	Storage SMD887805-3	77	20
	Shelter Assembly, Equipment		
	Storage SMD887805-4	79	21
	Shelter Assembly, Equipment		
	Storage SMD887805-5	81	22
	Bookcase	83	23
	Cabinet Assembly SMD887827	85	24
	Cabinet Assembly Storage		
	SMD887826-1	87	25
	Drawer Assembly, Workbench	89	26
	Rack Assembly, Storage Double	91	27
	Shelf Assembly Equipment Storage	93	28
0104	Air Conditioners (See TM 5-4120-226-35P for parts)		
0105	Heaters		
	Heater Assembly SMD887910-1	95	29
	Heater Assembly SMD887910-2	97	30
0106	Air Compressors and Accessories (No parts authorized)		
0107	Motor Generator PU-545/A (See TM 11-6125-240-34P for parts)		
0108	DC Power Supply PP-7462/U (See TM 11-6125-257-24P for parts)		
0109	Power Monitor Panel	99	31
	Circuit Card Assembly	101	32
0110	Telephone Set TA-312/PT (See TM 11-5805-201-34P for parts)		
SECTION	III. Special Tools List (Not applicable)		
	IV. National Stock Number and Part Number		
	Index	102	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/ASM-189A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
------	------------

PA	- Item procured and stocked for anticipated or known usage.
----	---

XD - A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O	- Support item is removed, replaced, used at the organizational level.
---	--

H	- Support item is removed, replaced, used at the general support level.
---	---

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
------	-------------------------

H	- The lowest maintenance level capable of complete repair of the support item is the general support level.
---	---

Z	- Nonreparable. No repair is authorized.
---	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability	Definition
----------------	------------

Codes	Definition
-------	------------

Z	- Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
---	--

H	- Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
---	--