
TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS**

FOR

**SEMITRAILER, TANK: 5000 GALLON,
BULK HAUL, SELF LOAD/UNLOAD
M967 (NSN 2330-01 -050-5632) AND
M967A1 (NSN 2330-01-1 55-0046)**

**SEMITRAILER, TANK: 5000 GALLON,
FUEL DISPENSING, AUTOMOTIVE
M969 (NSN 2330-01-050-5634) AND
M969A1 (NSN 2330-01-1 55-0048)**

**SEMITRAILER, TANK: 5000 GALLON,
FUEL DISPENSING, UNDER/OVERWING AIRCRAFT
M970 (NSN 2330-01 -050-5635) AND
M970A1 (NSN 2330-01-1 55-0047)**

This manual and TM 9-2330-356-14 supersede TM 9-2330-356-12&P, 20 October 1980 and TM 9-2330-356-34&P, 1 October 1980 and all changes.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY OCTOBER 1990

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS****FOR****SEMITRAILER, TANK: 5000 GALLON,
BULK HAUL, SELF-LOAD/UNLOAD
M967 (NSN 2300-01-050-5632)
M967A1 (NSN 2330-01-155-0046)****SEMITRAILER, TANK: 5000 GALLON,
FUEL DISPENSING, AUTOMOTIVE
M969 (NSN 2330-01-050-5634)
M969A1 (NSN 2330-01-155-0048)****SEMITRAILER, TANK: 5000 GALLON,
FUEL DISPENSING, UNDER/OVERWING AIRCRAFT
M970 (NSN 2330-01-050-5635)
M970A1 (NSN 2330-01-155-0047)**

Current as of 1 June 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	
GROUP 06 ELECTRICAL SYSTEM		
0607 -ENGINE CONTROL PANEL.....	1-1	
CONTROL PANEL ASSEMBLY	1-1	1
CONTROL PANEL WIRING	2-1	2

• This manual and TM 9-2330-356-14 supersede TM 9-2330-356-12&P, 20 October 1980 and TM 9-2330-356-34&P, 1 October 1980 and all changes.

TABLE OF CONTENTS – Continued

	Page	Ilus Fig
0609-LIGHTS	3-1	
MARKER LIGHT ASSEMBLY (AMBER)	3-1	3
MARKER LIGHTASSEMBLY (RED)	4-1	4
STOP, TAIL, AND BLACKOUT LIGHTS	5-1	5
CONTROL PANEL LIGHT ASSEMBLY	6-1	6
0612 -BATTERIES, STORAGE	7-1	
BATTERY COVER AND CABLES	7-1	7
0613 -CHASSIS WIRING HARNESS	8-1	
WIRING HARNESS ASSEMBLIES	8-1	8
TRAILER HARNESS COMPONENTS	9-1	9
WIRING HARNESS COMPONENTS	10-1	10
WIRING ASSEMBLY COMPONENTS	11-1	11
WIRING HARNESS COMPONENTS	12-1	12
WIRING HARNESS COMPONENTS	13-1	13
WIRING HARNESS COMPONENTS	14-1	14
WIRING HARNESS COMPONENTS	15-1	15
WIRING HARNESS COMPONENTS	16-1	16
WIRING HARNESS COMPONENTS	17-1	17
WIRING HARNESS	18-1	18
GROUP 11 REAR AXLE		
1100-REAR AXLE ASSEMBLY	19-1	
AXLE ASSEMBLY, M967, M967, AND M970	19-1	19
BOGIE TRUNNION TUBE, M967, M969, AND M970.	20-1	20
REAR AXLE ASSEMBLY, M967A1, M969A1, AND M970A1	21-1	21
GROUP 12 BRAKES		
1202 - SERVICE BRAKES	22-1	
BRAKE ASSEMBLY, M967, M969, AND M970	22-1	22
BRAKE SHOE ASSEMBLY, M967A1, M969A1, AND M970A1	23-1	23
SLACK ADJUSTER, M967A1, M969A1, AND M970A1	24-1	24
1208 -AIR BRAKE SYSTEM	25-1	
BRAKE CHAMBERS, M967, M969, AND M970	25-1	25
BRAKE AIR CHAMBERS, M967A1, M969A1, AND M970A1	26-1	26
BRAKE LINES	27-1	27
BRAKE LINES, M967, M969, AND M970	28-1	28
BRAKE LINES, M967A1, M969A1, AND M970A1	29-1	29
BRAKE INTERLOCK INSTALLATION, M970 AND M970A1	30-1	30
GROUP 13 WHEELS		
1311 - HUBSAND DRUMS	31-1	
HUB AND BEARINGS, M967, M969, AND M970	31-1	31
HUB AND DRUM ASSEMBLY, M967A1, M969A1, AND M970A1	32-1	32
1311 - WHEEL ASSEMBLY	33-1	
WHEEL ASSEMBLY	33-1	33
1313 -TIRES, TUBES	34-1	
TUBE AND TIRE	34-1	34
GROUP 15 FRAME AND TOWING ATTACHMENTS		
1503 -PINTLES AND TOWING ATTACHMENTS	35-1	
COUPLER ASSEMBLY	35-1	35

TABLE OF CONTENTS— Continued

	Page	IIUS Fig
1504 - SPARE WHEEL CARRIER AND TIRE LOCK	36-1	
SPARE WHEEL CARRIER	36-1	38
1507 - LANDING GEAR, LEVELING JACKS	37-1	
BOARD ASSEMBLY	37-1	37
LANDING GEAR ASSEMBLY	38-1	38
GROUP 16 SPRINGSAND SHOCK ABSORBERS		
1601 - SPRINGS	39-1	
SPRING ASSEMBLY, M967, M969, AND M970	39-1	39
SUSPENSION ASSEMBLY, M967A1, M969A1, AND M970A1	40-1	40
1605 -TORQUE, RADIUS, AND STABILIZER RODS	41-1	
TORQUE ROD INSTALLATION, M967, M969, AND M970	41-1	41
GROUP 18 BODY		
1801 - BODY	42-1	
MUDFLAP ASSEMBLY	42-1	42
1808 -STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.	43-1	
STOWAGE PARTS	43-1	43
1-1/4"AND1-1/2"HOSE REEL ASSEMBLIES	44-1	44
2-1/2" HOSE REEL ASSEMBLY, M970 AND M970A1	45-1	45
HOSE REEL ASSEMBLY, DEADMAN	46-1	46
STATIC REEL ASSEMBLY	47-1	47
HOSE REEL CABINET, M970 AND M970A1	48-1	48
HOSE REEL CABINET, M969 AND M969A1	49-1	49
DOOR ASSEMBLY, M970 AND M970A1	50-1	50
HOSE REEL CABINET DOOR ASSEMBLY, M969 AND M969A1	51-1	51
TOOL BOX ASSEMBLY	52-1	52
ENGINE AND PUMP CABINET.	53-1	53
1811 - TANK BODIES	54-1	
MANHOLE COVER ASSEMBLY	54-1	54
LADDER AND DRAIN ASSEMBLY, M967, M969, AND M970	55-1	55
LADDER AND DRAIN ASSEMBLY, M967A1, M969A1, AND M970A1	56-1	56
MISCELLANEOUS BODY PARTS	57-1	57
GROUP 22 BODY ACCESSORY ITEMS		
2210-DATA PLATES AND INSTRUCTION HOLDERS	58-1	
VEHICLE I.D. AND INSTRUCTION PLATES	58-1	58
VEHICLE I.D. AND INSTRUCTION PLATES	59-1	59
INSTRUCTION PLATES AND REFLECTORS	60-1	60
CONTROL PANEL PLATE	61-1	61
GROUP 29 ENGINE ASSEMBLY		
2910 -ENGINE ASSEMBLY	62-1	
ENGINE FRAME MOUNTING BRACKETS	62-1	62
ENGINE ASSEMBLY	63-1	63
ENGINE ASSEMBLY	64-1	64
2911 - CRANKCASE, CYLINDER SLEEVE, CYLINDER HEAD, AND BLOCK	65-1	
ENGINE BLOCK ASSEMBLY	65-1	65
HEAD ASSEMBLY	66-1	66

TABLE OF CONTENTS – Continued

	Page	Illus Fig
2912 - CRANKSHAFT	67-1	
CRANKSHAFT	67-1	67
2913 - FLYWHEEL ASSEMBLY	68-1	
FLYWHEEL ASSEMBLY	68-1	68
2914 - PISTON AND CONNECTING RODS	69-1	
PISTON ASSEMBLY	69-1	69
2915 - VALVES, CAMSHAFT, AND TIMING SYSTEM	70-1	
VALVE TRAIN	70-1	70
CAMSHAFT GROUP	71-1	71
GEAR COVER GROUP	72-1	72
2916 - ENGINE LUBRICATION SYSTEM	73-1	
OIL SYSTEM GROUP	73-1	73
2918 - MANIFOLDS	74-1	
INTAKE MANIFOLD AND HEATER GROUP	74-1	74
2932 - ENGINE FUEL PUMP	75-1	
FUEL INJECTOR SYSTEM	75-1	75
NOZZLE AND HOLDER ASSEMBLY	76-1	76
FUEL PUMP ASSEMBLY	77-1	77
2933 - ENGINE AIR CLEANER	78-1	
AIR CLEANER ASSEMBLY	78-1	78
2935 - ENGINE FUEL TANK	79-1	
FUEL TANK ASSEMBLY	79-1	79
2937 - ENGINE FUEL FILTER	80-1	
FUEL FILTER ASSEMBLY	80-1	80
2939 - ENGINE THROTTLE AND CHOKE CONTROLS	81-1	
THROTTLE ASSEMBLY	81-1	81
2941 - ENGINE MUFFLER, EXHAUST, AND TAIL PIPES	82-1	
MUFFLER ASSEMBLY	82-1	82
EXHAUST MANIFOLD	83-1	83
2952 - ENGINE COWLING DEFLECTORS, AIR DUCTS, AND SHROUDS	84-1	
ENGINE SHROUDS	84-1	84
ENGINE COOLING SYSTEM	85-1	85
ENGINE SHROUDING	86-1	86
2960 - SENDING UNITS	87-1	
TACHOMETER SENSOR	87-1	87
2961 - GENERATOR	88-1	
ALTERNATOR ASSEMBLY AND MOUNTING PARTS, M967, M969, AND M970,	88-1	88
ALTERNATOR MOUNTING PARTS, M967A1, M969A1, AND M970A1	89-1	89
ALTERNATOR COMPONENTS	90-1	90
2963 - STARTER, SOLENOIDS, CIRCUIT BREAKERS, WIRING, AND SWITCHES	91-1	
STARTING MOTOR	91-1	91
STARTING MOTOR MOUNTING PARTS	92-1	92
HI-TEMP SWITCH	93-1	93
TERMINAL BOX, ENGINE	94-1	94
ENGINE ELECTRICAL ASSEMBLY	95-1	95
ENGINE ELECTRICAL ASSEMBLY	96-1	96
WIRING HARNESS, ENGINE,	97-1	97
JUNCTION BOX, ENGINE	98-1	98
WIRING HARNESS, ENGINE	99-1	99
FUEL STOP SOLENOID	100-1	100
ELECTRICAL CONDUIT, ENGINE	101-1	101

TABLE OF CONTENTS – Continued

	Page	Illus Fig
GROUP 33 SPECIAL PURPOSE KITS		
3307 - SPECIAL PURPOSE KITS	102-1	
VAPOR RECOVERY KIT	102-1	102
GROUP 42 ELECTRICAL EQUIPMENT		
4216 - MISCELLANEOUS WIRING AND FITTINGS.....	103-1	
CABINET ELECTRICAL ASSEMBLY, M970 AND M970A1	103-1	103
CONDUIT ASSEMBLY FOR HOSE REEL, M970 AND M970A1	104-1	104
ELECTRICAL ASSEMBLY FOR CABINET, M969 AND M969A1	105-1	105
CONDUIT LINES AND RELATED PARTS, M970 AND M970A1	106-1	106
GROUP 47 GAGES (NONELECTRICAL) WEIGHING AND MEASURING DEVICES		
4702- GAGES, MOUNTINGS, LINES, AND FITTINGS	107-1	
GAGE ASSEMBLY, IN-TANK	107-1	107
CONTROL PANEL GAGES	108-1	108
GROUP 56 FILTERS		
5600- FUEL, WATER, AIR, FILTER/SEPARATION OR PURIFIER ASSEMBLY . . .	109-1	
FILTER SEPARATOR.....	109-1	109
SEPARATOR MOUNTING ASSEMBLY	110-1	110
5601 - AUTOMATIC DISCHARGE AND RELIEF VALVE	111-1	
DRAIN VALVE ASSEMBLY.....	111-1	111
5605- COMMON VALVES, LINES, AND FITTINGS	112-1	
FILTER SEPARATOR TUBING ASSEMBLY	112-1	112
GROUP 72 DISPENSING AND SERVICING EQUIPMENT COMPONENTS		
7202 -PUMPS AND METERS.....	113-1	
3" PUMP ASSEMBLY, M970 AND M970A1	113-1	113
3" AND 4" PUMP Assembles PLUG AND EYE BOLT, AND 3" COUPLER ASSEMBLY	114-1	114
4" PUMP ASSEMBLY, M967, M967A1, M969, AND M969A1	115-1	115
3" PUMP COUPLING PARTS, M970, M970A1, M967A1, AND M969A1 . . .	116-1	116
METER ASSEMBLY	117-1	117
7203 -VALVES, FITTINGS, LINES.	118-1	
PIPING FRAME ASSEMBLY	118-1	118
EMERGENCY VALVE AND FLOAT PIPING	119-1	119
MANIFOLD AND FLANGE ASSEMBLY, M967, M967A1, M969, AND M969A1	120-1	120
MANIFOLD AND FLANGE ASSEMBLY, M970 AND M970A1	121-1	121
PUMP PIPING ASSEMBLY, M967, M967A1, M969, AND M969A1	122-1	122
PIPING CONTROL ASSEMBLY, M970 AND M970A1	123-1	123
PIPING CONTROL ASSEMBLY, M967, M967A1, M969, AND M969A1	124-1	124
PIPING CONTROL ASSEMBLY, M970 AND M970A1	125-1	125
CABINET PIPING ASSEMBLY, M969 AND M969A1	126-1	126
FILTER SEPARATOR PIPING ASSEMBLY, M970 AND M970A1	127-1	127
HOSE REEL PIPING ASSEMBLY, M969 AND M969A1	128-1	128
HOSE REEL PIPING ASSEMBLY, M970 AND M970A1	129-1	129

TABLE OF CONTENTS – Continued

	Page	Illus Fig
7203- VALVES, FITTINGS, LINES (CON'T)		
NOZZLES AND ATTACHING PARTS, M970 AND M970A1	130-1	130
PRE-CHECK CONTROL TUBING ASSEMBLY, M967, M967A1 , M969, AND M969A1	131-1	131
PRE-CHECK CONTROL TUBING ASSEMBLY, M970 AND M970A1	132-1	132
DEADMAN CONTROL TUBING ASSEMBLY, M970 AND M970A1	133-1	133
CABINET TUBING ASSEMBLY, M970 AND M970A1	134-1	134
FLOAT INSTALLATION	135-1	135
EMERGENCY VALVE ASSEMBLY	136-1	136
VALVE ASSEMBLY, "F, B, AND C"	137-1	137
ADAPTER ASSEMBLY, RECIRCULATION	138-1	138
NOZZLE ASSEMBLY, UNDERWING	139-1	139
CHECK VALVE ASSEMBLY	140-1	140
VALVE ASSEMBLY, "G"	141-1	141
VALVE ASSEMBLY, "R AND P"	142-1	142
VALVE ASSEMBLY, "M"	143-1	143
PRESSURE RELIEF VALVE	144-1	144
7204 -MISCELLANEOUS PARTS AND ACCESSORIES	145-1	
DEADMAN CONTROL HANDLE ASSEMBLY	145-1	145
CONTROL CABLE INSTALLATION	146-1	148
MISCELLANEOUS PARTS	147-1	147
GROUP 76	FIRE FIGHTING EQUIPMENT COMPONENTS	
	7638 -PORTABLE FIRE FIGHTING EQUIPMENT	146-1
	FIRE EXTINGUISHER COMPONENTS	148-1
GROUP 94	REPAIR KITS	
	9401 - REPAIR KITS	KIT-1
	REPAIR KITS	KIT-1
GROUP 95	GENERAL USE STANDARDIZED PARTS	
	9501 - BULK MATERIEL	BULK-1
	BULK MATERIEL	BULK-1
SECTION III.	SPECIAL TOOLS LIST	
GROUP 26	TOOLSAND TEST EQUIPMENT	
	2604 - SPECIAL TOOLS	149-1
	SPECIAL TOOLS	149-1
SECTION IV.	CROSS-REFERENCE INDEXES	
	NATIONAL STOCK NUMBER INDEX	I-1
	PART NUMBER INDEX	I-21
	FIGURE AND ITEM NUMBER INDEX	I-74

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Semitrailer, Tank. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number

index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Column (Sections II and III).

a. **ITEM NO.** (Column (1)), Indicates the number used to identify items called out in the illustration.

b. **SMR CODE** (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

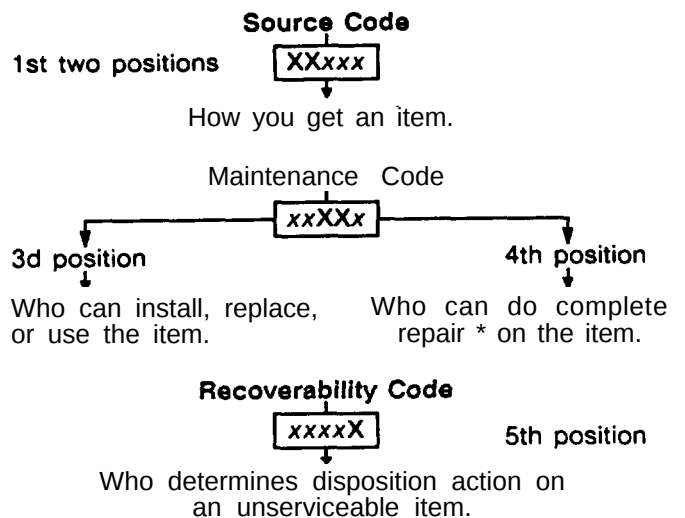

* **Complete Repair:** Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: