



DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR'S ORGANIZATIONAL DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)

SEMITRAILER, VAN: SATELLITE TERMINAL
OPERATOR, 10-TON, 4 WHEEL, XM971E2
(2330-01-163-5025)

SEMITRAILER, VAN: SATELLITE TERMINAL
MAINTENANCE & SUPPLY,
10-TON, 4 WHEEL, XM971E3
(2330-01-163-5026)

MILLER TRAILERS, INC.
DAAE07-82-C-5817

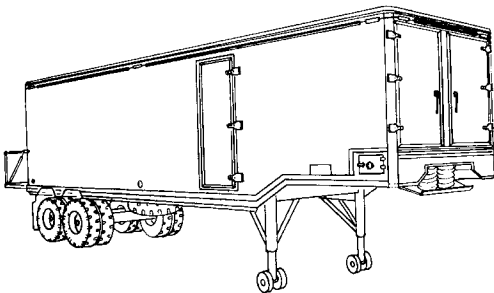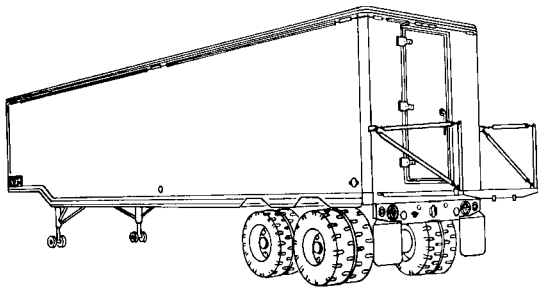

OPERATOR PMCS
PAGE 2-2

LUBRICATION
INSTRUCTIONS
PAGE 3-1

OPERATOR
TROUBLESHOOTING
PAGE 3-7

ORGANIZATIONAL PMCS
PAGE 4-3

ORGANIZATIONAL
MAINTENANCE
PAGE 4-37

DS/GS MAINTENANCE
PAGE 5-1

TECHNICAL MANUAL

DEPARTMENT OF THE ARMY

No. TM 9-2330-373-14 & P

Washington, D.C. 29 January 1987

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)
SEMITRAILER, VAN: SATELLITE TERMINAL OPERATOR,

10-TON, 4 WHEEL, XM971E2
(2330-01-163-5025)

SEMITRAILER, VAN: SATELLITE TERMINAL
MAINTENANCE & SUPPLY,
10-TON, 4 WHEEL, XM971E3
(2330-01-163-5026)

Current as of 15 January 1987

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Equipment Publications and Blank Forms), or DA Form 2028-2 located in the back of this publication direct to: US Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be sent to you.

TABLE OF CONTENTS

	Page
CHAPTER 1 INTRODUCTION	
Section I General Information.....	1-1
Section II Equipment Description and Data.....	1-5
Section III Principles of Operation	1-27

CHAPTER	2	OPERATING INSTRUCTIONS	
Section	I	Description and Use of Operator's Controls and Indicators.....	2-1
Section	II	Preventive Maintenance Checks and Services (PMCS)	2-2
Section	III	Operation Under Usual Conditions.....	2-11
Section	IV	Operation Under Unusual Conditions.....	2-31
CHAPTER	3	OPERATOR MAINTENANCE INSTRUCTIONS	
Section	I	Lubrication Instructions	3-1
Section	II	Troubleshooting Procedures	3-7
Section	III	Maintenance	3-16
CHAPTER	4	ORGANIZATIONAL MAINTENANCE INSTRUCTIONS	
Section	I	Repair Parts, Special Tools; Test, Measurement and Diagnostic Equipment (TMDE) and Support Equipment	4-2
Section	II	Service Upon Receipt.....	4-2
Section	III	Preventive Maintenance Checks and Services (PMCS)	4-3
Section	IV	Troubleshooting Procedures	4-13
Section	V	Electrical System Maintenance Procedures	4-37
Section	VI	Brake System Maintenance Procedures	4-50
Section	VII	Wheel, Hub and Brake Drum Maintenance Procedures	4-77
Section	VIII	Spare Wheel Carrier, Leveling Jack and Landing Gear	4-82
Section	IX	Suspension System Maintenance	4-90
Section	X	Rear Platform and Front Platform Maintenance Procedures.....	4-109
Section	XI	Body and Parts Maintenance Procedures.....	4-116
Section	XII	Preparation for Storage or Shipment.....	4-128
CHAPTER	5	DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE PROCEDURES	
Section	I	Repair Parts, Special Tools, TMDE, and Support Equipment.....	5-1
Section	II	Troubleshooting Procedures	5-1
Section	III	Maintenance Procedures	5-3

APPENDIX A	REFERENCES.....	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	
Section I	Introduction.....	B-1
Section II	Maintenance Allocation Chart.....	B-4
Section III	Tool and Test Equipment Requirements.....	B-9
Section IV	Remarks	B-9
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LIST	
Section I	Introduction.....	C-1
Section II	Components of End Item ,.....	C-2
Section III	Basic Issue Items	C-5
APPENDIX D	ADDITIONAL AUTHORIZATION LIST	
Section I	Introduction.....	D-1
Section II	Additional Authorization List	D-2
APPENDIX E	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST	
Section I	Introduction.....	E-1
Section II	Expendable/Durable Supplies and Materials List	E-2
APPENDIX F	REPAIR PARTS AND SPECIAL TOOLS LIST	
Section I	Introduction.....	F 1
Section II	Repair Parts List.....	1-1

			Page	Illus/ Figure
Group	06	ELECTRICAL SYSTEM		
		0608 Intervehicular Cable		
		Receptacles and Cover	1-1	1
		0608 Resistor Assembly	2-1	2
		0609 Marker Clearance Light	3-1	3
		0609 Stop Light	4-1	4
		0609 Stoplight Taillight Assembly	5-1	5
		0613 Wiring Harness Attaching Parts	6-1	6
		0613 Wiring Harness, Main;		
		Wiring Harness, Roof	7-1	7
		0613 Wiring Harness, Interconnecting	8-1	8
		0613 Wiring Harness, Dolly Main	9-1	9
		0613 Wiring Harness, Dolly Taillights	10-1	10
		0613 Lead, Electrical	11-1	11
Group	11	REAR AXLE		
		1100 Rear Axle Assembly	12-1	12
Group	12	BRAKES		
		1202 Brake Shoe and Related Parts	13-1	13
		1202 Service Brake Attaching Parts	14-1	14
		1202 Backing Plate Assembly	15-1	15
		1204 Hydraulic Brake System	16-1	16
		1204 Hydraulic Master Cylinder	17-1	17
		1204 Wheel Cylinder and Hydraulic		
		Tubes	18-1	18
		1208 Brake and Air Suspension		
		Air Lines	19-1	19
		1208 Relay Valve	20-1	20
		1208 Air Mounted Kingpin Air Lines .	21-1	21
Group	13	WHEELS		
		1311 Wheel and Hub Assembly	22-1	22
		1313 Tire and Tube	23-1	23
Group	15	FRAME AND TOWING ATTACHMENTS		
		1501 Rear Platform	24-1	24
		1501 Handrail Assembly, Rear Platform;		
		Bridge Assembly, Rear Platform	25-1	25
		1501 Front Platform	26-1	26
		1503 Pintle Assembly and Towing		
		Attachments	27-1	27
		1504 Spare Wheel Carrier	28-1	28


			Page	Illus/ Figure
Group	15	FRAME AND TOWING ATTACHMENTS (cont)		
		1506 Air Mounted Fifth Wheel Kingpin Assembly	29-1	29
		1507 Leveling Jack	30-1	30
		1507 Swing-up Landing Gear	31-1	31
Group	16	SPRINGS AND SHOCK ABSORBERS		
		1601 Air Suspension System Components	32-1	32
		1601 Air Spring Air Control Components	33-1	33
Group	18	BODY		
		1801 Right Side Door	34-1	34
		1801 Interior Partition Door	35-1	35
		1801 Front Doors	36-1	36
		1801 Rear Door	37-1	37
		1801 Miscellaneous Body Items	38-1	38
		1801 Miscellaneous Body Items	39-1	39
Group	22	ACCESSORY ITEMS		
		2202 Reflector	40-1	40
		2202 Radio Frequency Interference (RFI) Filters, XM971E2	41-1	41
		2202 Radio Frequency Interference (RFI) Filters, XM971E3	42-1	42
		2202 Floor Panels, XM971E2	43-1	43
		2202 Floor Panels, XM971E3	44-1	44
		2210 Identification Plates	45-1	45
Group		9501 Bulk Items		
Section	III	Special Tools List		
		2604 Not Applicable		
Section	IV	National Stock Number and Part Number Index		
APPENDIX G		ILLUSTRATED LIST OF MANUFACTURED ITEMS	G-1	
APPENDIX H		TORQUE LIMITS	H-1	
ALPHABETICAL INDEX			Index-1	

CHAPTER 1


INTRODUCTION

Section I. GENERAL INFORMATION'


CHAPTER INDEX	Page
Scope	1-4
Maintenance forms, records and reports	1-4
Destruction of Army materiel to prevent enemy use	1-4
Preparation for storage.....	1-4
Reporting equipment improvement recommendations	1-4
Equipment characteristics, capabilities and features	1-5
Location and description of major components.....	1-5
Landing gear	1-6
Wheel chock	1-6
Right side door.....	1-7
Front doors.....	1-7
Front platform	1-7
Side storage compartment.....	1-7
Rear door	1-8
Rear platform	1-8
Rear platform bridge	1-8
Ladders	1-8
Amber reflector	1-9
Amber clearance light	1-9
Red reflector	1-9
Red clearance light	1-9
Dolly assembly.....	1-10
Wheel and tire.....	1-11
Axle assembly.....	1-11
Hub 1-11	
Brake drum	1-11
Spare wheel carrier.....	1-12
Brake system	1-12
Dolly electrical system.....	1-15
Rear lights.....	1-16
Splash guard.....	1-16
Towing chain eye bolt	1-16
Towing pintle assembly.....	1-16
Leveling jack	1-17
Air mounted fifth wheel kingpin.....	1-17
Air suspension system.....	1-18
Van interior.....	1-20
Identification plate.....	1-22
Stencil markings	1-23
Difference between models	1-24
Equipment data.....	1-24
Principles of operation	1-27
Brake system	1-27
Air suspension system.....	1-28
Air mounted fifth wheel kingpin system	1-29

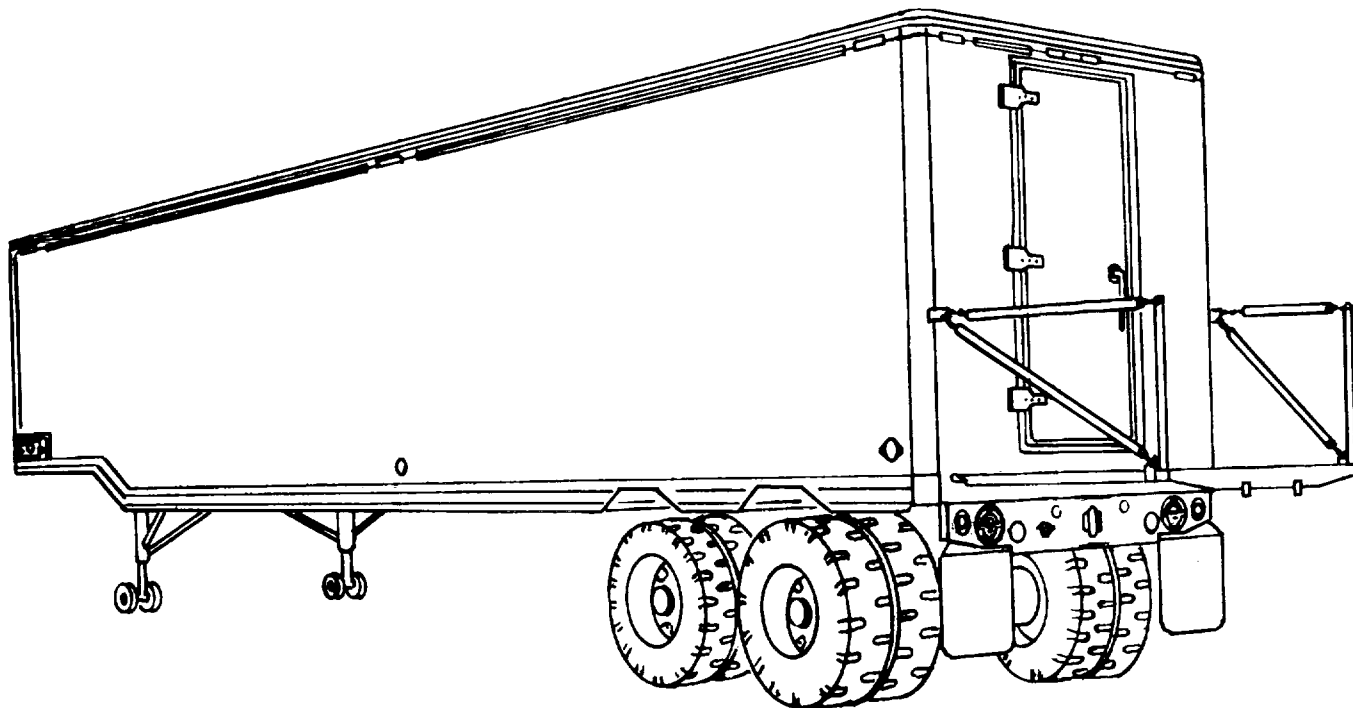


LEFT REAR VIEW, XM971E2

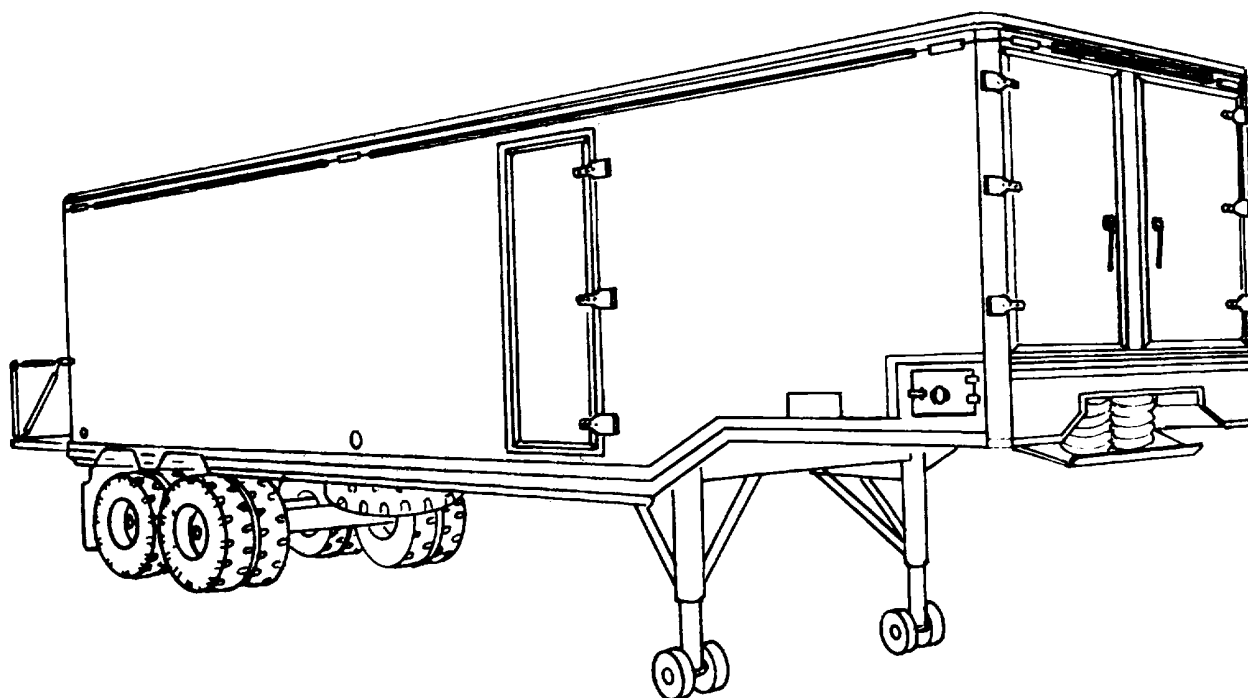

RIGHT FRONT VIEW, XM971E2

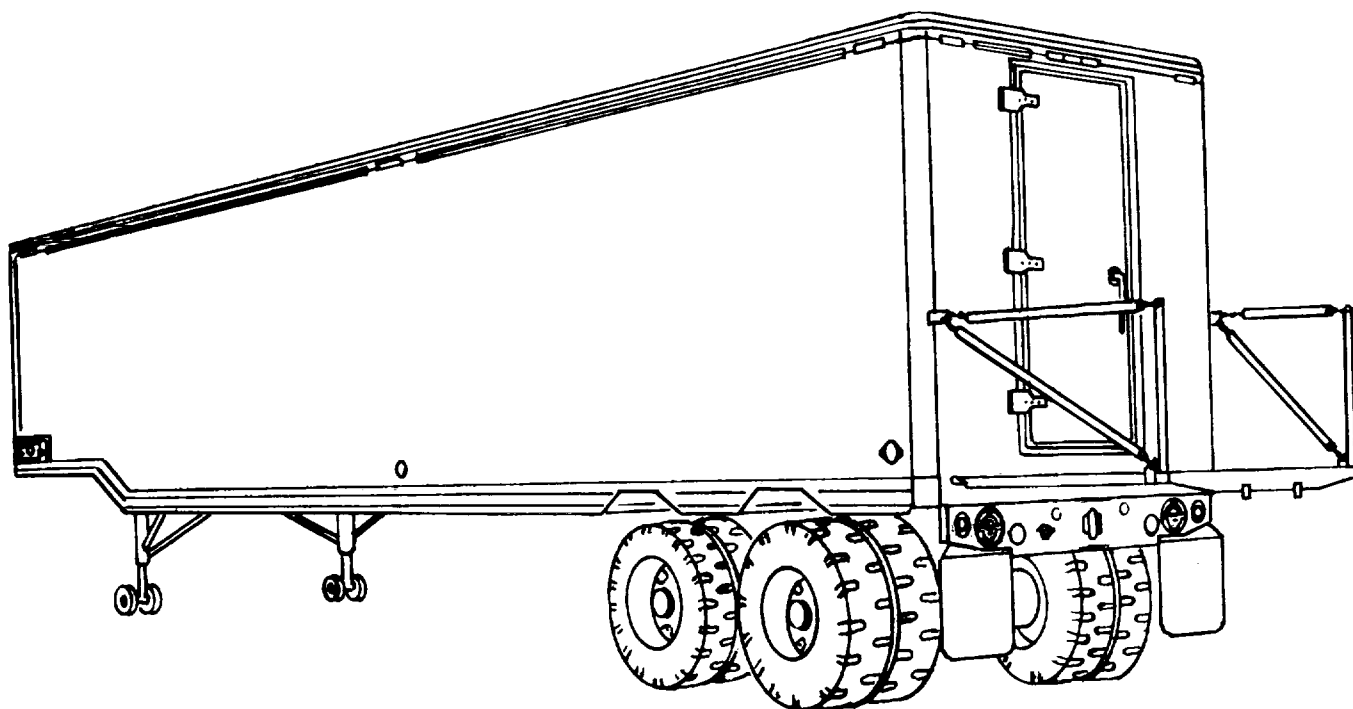

LEFT REAR VIEW, XM971E3

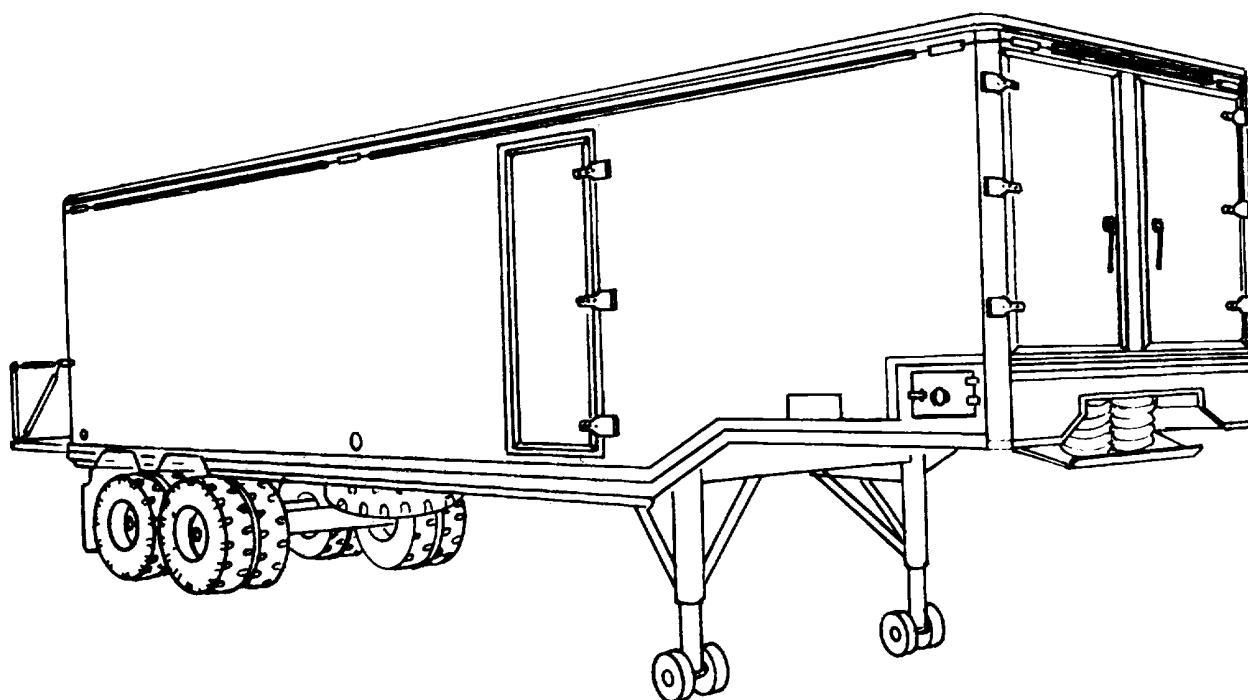

RIGHT FRONT VIEW, XM971E3

1-1. SCOPE

Type of Manual:

Operator's, Organizational, Direct Support and General Support Maintenance Manual (including Repair Parts and Special Tools List).

Model Number and Equipment Name: Semi trailer, Van: Satellite Terminal Operator, 10-ton, 4-wheel, XM971E2.

Semi trailer, Van: Satellite Terminal Maintenance & Supply, 10-ton, 4-wheel, XM971E3.

Purpose of Equipment: Houses and transports sensitive electronic equipment.

1-2. MAINTENANCE FORMS, RECORDS AND REPORTS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750, The Army Maintenance Management System.

1-3. DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

For destruction of Army materiel to prevent enemy use, refer to TM 750-244-6.

1-4. PREPARATION FOR STORAGE

For information on administrative storage, refer to TM 740-90-1.

1-5. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR)

EIR can and must be submitted by anyone who is aware of an unsatisfactory condition with the equipment design or use. It is not necessary to show a new design or list a better way to perform a procedure; Just simply tell why the design is unfavorable or why a procedure is difficult. EIR may be submitted on SF368 (Quality Deficiency Report). Mail directly to: Commander, U.S. Army Tank Automotive Command, ATTN: AMSTA-MV, Warren MI 48397-500. We will send you a reply.