

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**TRAILER, PALLETIZED
LOAD SYSTEM
(PLST) M1076**

NSN 2330-01-303-5197

DISTRIBUTION STATEMENT:
Approved for public release; distribution is unlimited.

TECHNICAL MANUAL

No. 9-2330-385-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C. 1 August 1999

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR TRAILER, PALLETIZED LOAD SYSTEM (PLST) M1076

NSN 2330-01-303-5197

Current as of 15 December 1998

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Publications and Blank Forms), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM." The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter, DA Form 2028, or DA Form 2028-2, located at the back of this manual direct to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-AC-NML, Rock Island, IL 61299-7630. The email address is amsta-ac-nml@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726. A reply will be furnished to you.

TABLE OF CONTENTS

	Page	Illus/ Figure
Section I. INTRODUCTION	1	
Section II. REPAIR PARTS LIST	1-1	
Group 06 Electrical System		
0608 Front Electrical Box Assembly	1-1	1
0608 Rear Electrical Box Assembly	2-1	2
0608 Flatrack Lock Sensor	3-1	3
0609 Front Side Marker Lights	4-1	4
0609 Rear Side Marker Lights	5-1	5
0609 Amber Clearance Light	6-1	6

Approved for public release; distribution is unlimited.

*This manual supersedes TM 9-2330-385-24P, dated 17 February 1997, including all changes.

TABLE OF CONTENTS (Continued)

		Page	Illus/ Figure
Group 06	Electrical System (Cont)		
	0609 Rear Clearance Light	7-1	7
	0609 Identification Lights	8-1	8
	0609 Composite Tail Light	9-1	9
	0613 Main Wiring Harness	10-1	10
	0613 Composite Tail Light Harness	11-1	11
	0613 Flatrack Lock Intervehicular Cable	12-1	12
	0613 Intervehicular Connectors	13-1	13
Group 10	Front Axle		
	1000 Front Axle Assembly	14-1	14
Group 11	Rear Axle		
	1100 Rear Axle Assembly	15-1	15
Group 12	Brakes		
	1202 Brake Shoe Assembly, Camshaft and Slack Adjuster	16-1	16
	1208 Front Axle Brake Chambers, Lines and Fittings	17-1	17
	1208 Rear Axle Brake Chambers, Lines and Fittings	18-1	18
	1208 Brake Relay Valve	19-1	19
	1208 Glad Hand Installation	20-1	20
	1208 Front Air Tank, Lines and Fittings	21-1	21
	1208 Rear Air Tank, Lines and Fittings	22-1	22
	1208 Quick Release Valve	23-1	23
	1208 Brake Power Regulator Valve	24-1	24
	1208 Multifunction Valve	25-1	25
	1208 Drawbar Air Controls, Lines and Fittings	26-1	26
Group 13	Wheels and Tracks		
	1311 Wheel and Hub	27-1	27
	1313 Tire	28-1	28
Group 14	Steering		
	1405 Turntable Assembly and Bearing	29-1	29
Group 15	Frame, Towing Attachments, Drawbars and Articulation Systems		
	1501 Rear Suspension Hanger	30-1	30
	1503 Drawbar Assembly	31-1	31
	1503 Drawbar Safety Chain	32-1	32
	1504 Spare Tire Mount, Winch and Pulley	33-1	33
Group 16	Springs and Shock Absorbers		
	1601 Front Spring and Saddle Assembly	34-1	34
	1601 Rear Spring and Saddle Assembly	35-1	35
	1604 Shock Absorbers	36-1	36
Group 18	Body, Cab, Hood and Hull		
	1801 Mud Flaps	37-1	37
	1801 Flatrack Locks	38-1	38
	1801 Flatrack Lock Air Chambers, Lines and Fittings	39-1	39
	1808 Stowage Box	40-1	40
Group 21	Bumpers, Guards and Marine Fenders		
	2101 Bumper, Junction Box Cover and Flatrack Locking Pins	41-1	41
Group 22	Body, Chassis, Hull and Accessory Items		
	2202 Reflectors	42-1	42
	2210 Data Plates	43-1	43
Group 33	Special Purpose Kits		
	3307 Trailer Extended Drawbar/Light Bar Kit	44-1	44
Group 94	Repair Kits		
	9401 Repair Kits	KITS-1	
Group 95	General Use Standardized Parts		
	9501 Bulk Material	BULK-1	

TABLE OF CONTENTS (Continued)

	Page	Illus/ Figure
Section III. SPECIAL TOOLS LIST	45-1	
Group 26 Tools and test Equipment		
2604 Unit Maintenance Special Tools	45-1	45
2604 Support Maintenance Special Tools	46-1	46
Section IV. CROSS REFERENCE INDEX	I-1	
National Stock Number Index	I-1	
Part Number Index	I-7	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE.

This RPSTL lists and authorizes spares and repair parts; special tools; special Test, Measurement, and Diagnostic Equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the M1076 Trailer, Palletized Load System (PLST). It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. GENERAL.

In addition to Section I, Introduction, this Repair Parts and Special Tools List (RPSTL) is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts Lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed by item name in FIG BULK at the end of the section. Repair parts kits or sets are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section.

b. Section III. Special Tools List. A list of special tools, special Test, Measurement and Diagnostic Equipment (TMDE), and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE (UOC) column) for the performance of maintenance.

c. Section IV. Cross-Reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listings, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

- a. Item No. (Column (1)).** Indicates the number used to identify items called out in the illustration.
- b. SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout: