

TECHNICAL MANUAL
UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
FO
SEMITRAILER, TANK: 5,000 GALLON
(PORTABLE WATER DISPENSING)
XM1098 (NSN 2300-01-330-2779)

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY SEPTEMBER 1993

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

SEMITRAILER, TANK: 5000 GALLON
(POTABLE WATER DISPENSING)
XM1098 (NSN 2300-01-330-2779)

Current as of 3 AUGUST 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

YOU CAN HELP IMPROVE THIS MANUAL. IF YOU FIND ANY MISTAKES OR IF YOU KNOW OF A WAY TO IMPROVE THE PROCEDURES, PLEASE LET US KNOW. MAIL YOUR LETTER, DA FORM 2028 (RECOMIENDED CHANGES TO PBLICATIONS AND BLANK FORMS), OR DA FORM 20282, LOCATED IN THE BACK OF THIS MANUAL, DIRECT TO: COMMANDER, U.S. ARMY TANK-AUTOMOTIVE COMMAND, ATTN: AMSTA-MB, WARREN , MI 483976000. A REPLY WILL BE FURNISHED TO YOU.

APPROVED FOR PUBLIC RELEASE; DISTRIBUTION IS UNLIMITED.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST		
GROUP 06 ELECTRICAL SYSTEM		
0607- MARKER LIGHTS	1-1	1
0609 - STOP, TAIL, AND BLACKOUT LIGHTS	2-1	2

TABLE OF CONTENTS (CONTINUED)

	Page	Illus Fig
0612 - BATTERIES, STORAGE		
BATTERY, CABLES AND HOLD-DOWN CLAMP	3-1	3
0613-WIRING HARNESS ASSEMBLIES	4-1	4
0613 - TRAILER WIRING HARNESS COMPONENTS	5-1	5
0613-WIRING HARNESS COMPONENTS	6-1	6
0613-WIRING HARNESS COMPONENTS	7-1	7
0613-WIRING HARNESS COMPONENTS	8-1	8
0613-WIRING HARNESS COMPONENTS	9-1	9
0613-WIRING HARNESS COMPONENTS	10-1	10
0613-WIRING HARNESS COMPONENTS	11-1	11
0613-WIRING HARNESS COMPONENTS	12-1	12
0613-WIRING HARNESS COMPONENTS	13-1	13
0613-WIRING HARNESS MISC. HARDWARE	14-1	14
GROUP 11 REAR AXLE		
1100-REAR AXLE ASSEMBLY	15-1	15
GROUP 12 BRAKES		
1202 - BRAKE SHOE ASSEMBLY	16-1	16
1202- SLACK ADJUSTER	17-1	17
1208 - BRAKE AIR CHAMBERS	18-1	18
1208- BRAKE LINES	19-1	19
1208- BRAKE LINES	20-1	20
GROUP 13 WHEELS		
1311 - HUB AND DRUM ASSEMBLY	21-1	21
1311- WHEEL ASSEMBLY	22-1	22
1313- TIRESAND TUBE	23-1	23
GROUP 15 FRAME AND TOWING ATTACHMENTS		
1503 - COUPLER ASSEMBLY	24-1	24
1504 - SPARE WHEEL CARRIER	25-1	25
1507 - BOARD ASSEMBLY	26-1	26
1507 -LANDING GEAR ASSEMBLY	27-1	27
GROUP 16 SPRINGS AND SHOCK ABSORBERS		
1601 - SUSPENSION ASSEMBLY	28-1	28
GROUP 18 BODY		
1801 - MUDFLAPASSEMBLY	29-1	29
1808 - STORAGE PARTS	30-1	30
1808 - TOOL BOXASSEMBLY	31-1	31
1808 - ENGINE / PUMP CABINET HARDWARE	32-1	32
1811 - MANHOLE COVER	33-1	33
1811 - LADDER AND DRAIN ASSEMBLY	34-1	34
1811 - MISCELLANEOUS BODY PARTS	35-1	35

TABLE OF CONTENTS (CONTINUED)

	Page	Illus Fig
GROUP 22 BODY ACCESSORY ITEMS		
2210 - DATA PLATES AND INSTRUCTION HOLDERS		
VEHICLE I.D. AND INSTRUCTION PLATES	36-1	36
GROUP 29 ENGINE ASSEMBLY		
2910- ENGINE AND PUMP ASSEMBLY	37-1	37
2910- ENGINE MOUNT	38-1	38
2913- ENGINE FLYWHEEL	39-1	39
2913 - ENGINE VALVE COVER AND GASKET	40-1	40
2916 - ENGINE LUBRICATION SYSTEM	41-1	41
2932- ENGINE FUEL INJECTOR PUMP AND FUEL INJECTOR	42-1	42
2933- ENGINE AIR CLEANER ASSEMBLY	43-1	43
2935- ENGINE FUEL TANK ASSEMBLY	44-1	44
2937- ENGINE FUEL FILTER (WATER SEPARATOR)	45-1	45
2941 - ENGINE MUFFLER	46-1	46
2952 - ENGINE FLYWHEEL SHROUD	47-1	47
2960 - ENGINE OIL PRESSURE SWITCH	48-1	48
2961- ALTERNATOR	49-1	49
2962- VOLTAGE REGULATOR	50-1	50
2963- ENGINE STARTER	51-1	51
2963- ENGINE WIRING HARNESS	52-1	52
2967- ENGINE CONTROL PANEL	53-1	53
2941 GROUP 47		
4702 - GAGE ASSEMBLY, IN-TANK	54-1	55
GROUP 72		
7202- PUMP ASSEMBLY	55-1	55
7203 - VALVES FITTINGS AND LINES	56-1	56
7203 - VALVES FITTINGS AND LINES (MISC. HANGERS AND HARDWARE)	57-1	57
7203 - VALVES FITTINGS AND LINES (DISCHARGE MANIFOLDS AND FAUCETS)	58-1	58
7203 - VALVES FITTINGS AND LINES (BUTTERFLY VALVE ASSEMBLY)	59-1	59
7203 - VALVES FITTINGS AND LINES (CONTROL VALVE ASSEMBLY)	60-1	60
7204 - MISCELLANEOUS PARTS AND ACCESSORIES (CONTROL CABLE INSTALLATION)	61-1	61
GROUP 76 FIRE FIGHTING EQUIPMENT COMPONENTS		
7638- PORTABLE FIRE FIGHTING EQUIPMENT	62-1	62
GROUP 95		
9501 - BULK MATERIAL	BULK-I	BULK

TABLE OF CONTENTS (CONTINUED)

	Page	Illus Fig
SECTION III. SPECIAL TOOLS LIST		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604 - SPECIAL TOOLS	62-1	62
SECTION IV. CROSS-REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX / PART NUMBER INDEX/ FIGURE AND ITEM NUMBER INDEX	I-1	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Semitrailer, Tank. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number

index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

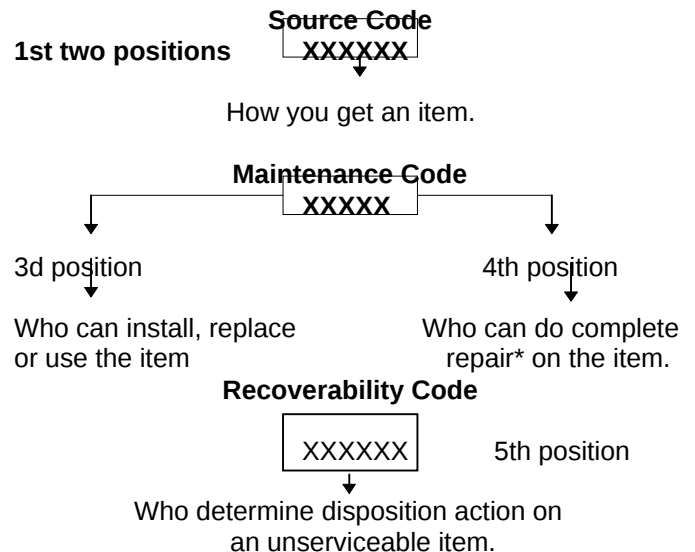

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: