


**TECHNICAL MANUAL
OPERATOR'S MANUAL
FOR
INLAND
AND
COASTAL
LARGE TUG (LT)
NSN 1925-01-247-7110**

This copy is a reprint which includes
current pages from Changes 1 through 5.

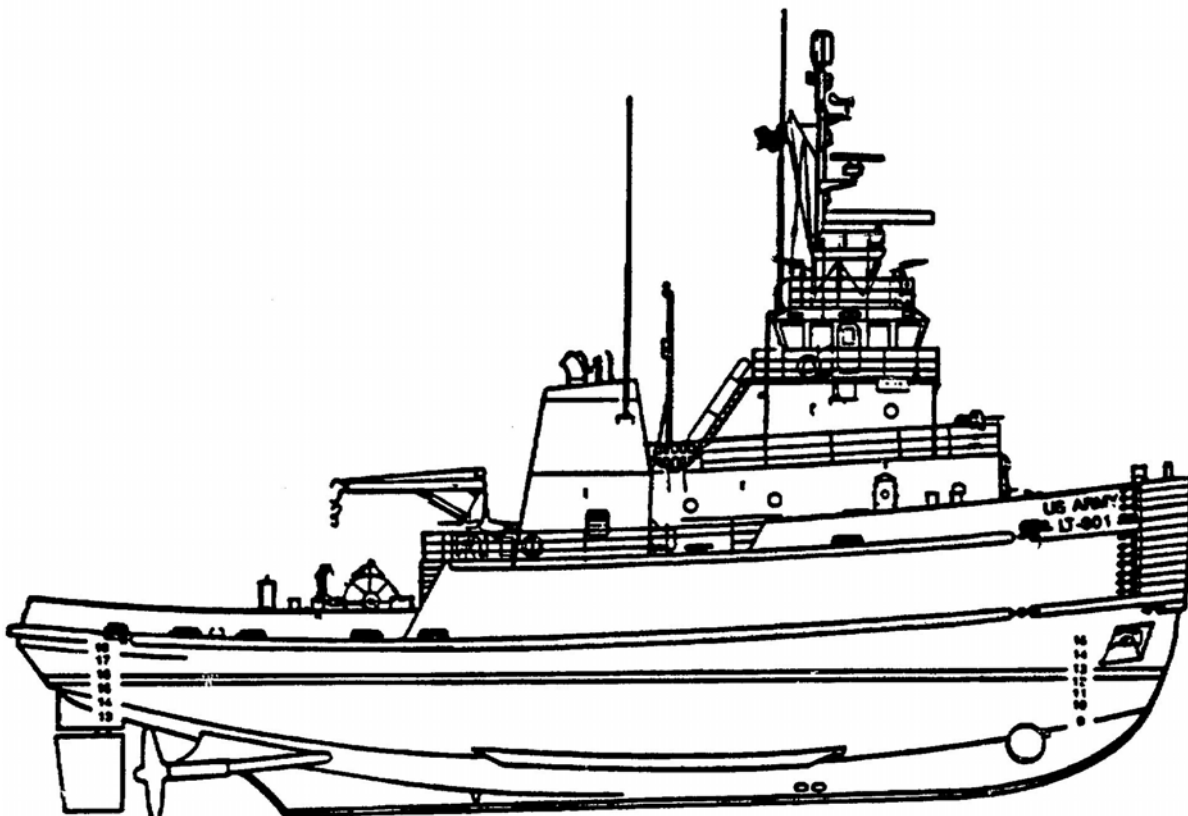

Distribution Statement A: Approved for public release; distribution is unlimited.

DESTRUCTION NOTICE- For unclassified, limited documents, destroy by any method that will prevent disclosure of contents or reconstruction of the document.

*This manual supersedes TM 55-1925-207-10-2, 16 August 1991

HEADQUARTERS, DEPARTMENT OF THE ARMY

26 MAY 1992

TECHNICAL MANUAL
NO. 55-1925-207-10

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 26 May 1992

OPERATOR'S MANUAL
for
INLAND AND COASTAL LARGE TUG (LT)

NSN 1925-01-247-7110

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Publications and Blank Forms), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter, or DA Form 2028 direct to: AMSTA-LC-CI/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The email address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

Distribution Statement A: Approved for public release; Distribution is unlimited.

DESTRUCTION NOTICE - For unclassified, limited documents, destroy by any method that will prevent disclosure of contents or reconstruction of the document.

TABLE OF CONTENTS

	PAGE
CHAPTER 1 INTRODUCTION	1-1
Section I General Information	1-1
Section II Equipment Description	1-5
Section III Technical Principles of Operation	1-97
CHAPTER 2 OPERATING INSTRUCTIONS	2-1
Section I Description and Use of Operator's Controls and Indicators	2-1
Section II Preventive Maintenance Checks and Services (PMCS)	2-312
Section III Operation Under Usual Conditions	2-397
Section IV Operation Under Unusual Conditions	2-727

TABLE OF CONTENTS - Continued

CHAPTER 3	MAINTENANCE INSTRUCTIONS	3-1
Section I	Lubrication Instructions	3-1
Section II	Troubleshooting Procedures	3-38
Section III	Maintenance Procedures	3-38
APPENDIX A	REFERENCES	A-1
APPENDIX B	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS	B-1
APPENDIX C	ADDITIONAL AUTHORIZATION LIST	C-1
APPENDIX D	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST	D-1
APPENDIX E	STOWAGE AND SIGN GUIDE FOR COMPONENTS OF END ITEM, BASIC ISSUE ITEMS, AND APPLICABLE ADDITIONAL AUTHORIZATION LIST ITEMS	E-1
APPENDIX F	ON-VEHICLE EQUIPMENT LOADING PLAN, INLAND AND COASTAL LARGE TUG	F-1
APPENDIX G	SOUNDING TABLES	G-1
■	ALPHABETICAL INDEX	Index 1

CHAPTER 3 MAINTENANCE INSTRUCTIONS

		<u>PAGE</u>
SECTION I	LUBRICATION INSTRUCTIONS.....	3-1
SECTION II	TROUBLESHOOTING PROCEDURES.....	3-38
SECTION III	MAINTENANCE PROCEDURE.....	3-38

SECTION I.

LUBRICATION INSTRUCTIONS


<u>Title</u>	<u>Paragraph</u>
General.....	3-1
Air Compressor.....	3-2
Bow Thruster.....	3-3
Bow Thruster Engine.....	3-4
Cathodic Protection System.....	3-5
Commissary Equipment.....	3-6
Deck Machinery and Hydraulic Systems.....	3-7
Emergency Generator.....	3-8
Fuel Oil Filter/Coalescer.....	3-9
HALON 1301 Systems.....	3-10
Heating, Ventilation, and Air Conditioning System.....	3-11
Life Raft/Workboat.....	3-12
Lube Oil Purifier.....	3-13
Main Engine.....	3-14
Marine Sanitation Device.....	3-15
Oil Water Separator.....	3-16
Propeller Shaft, Couplings, Brakes, and Seals.....	3-17
Propulsion Controls.....	3-18
Propulsion Monitor.....	3-19
Pump Drive Engine.....	3-20
Pumps.....	3-21
Reduction Gear.....	3-22
Refrigeration Machinery.....	3-23
Reverse Osmosis Watermaker.....	3-24
Ship's Service Diesel Generator.....	3-25
Steering Gear.....	3-26

3-1. General. Lubrication is an essential part of the preventive maintenance program. Performance of these operator lubrication instructions are mandatory.

For lubrication instructions for equipment not covered, refer to LO 55-1925-207-12.


3-2. Air compressor.

LUBE IT!

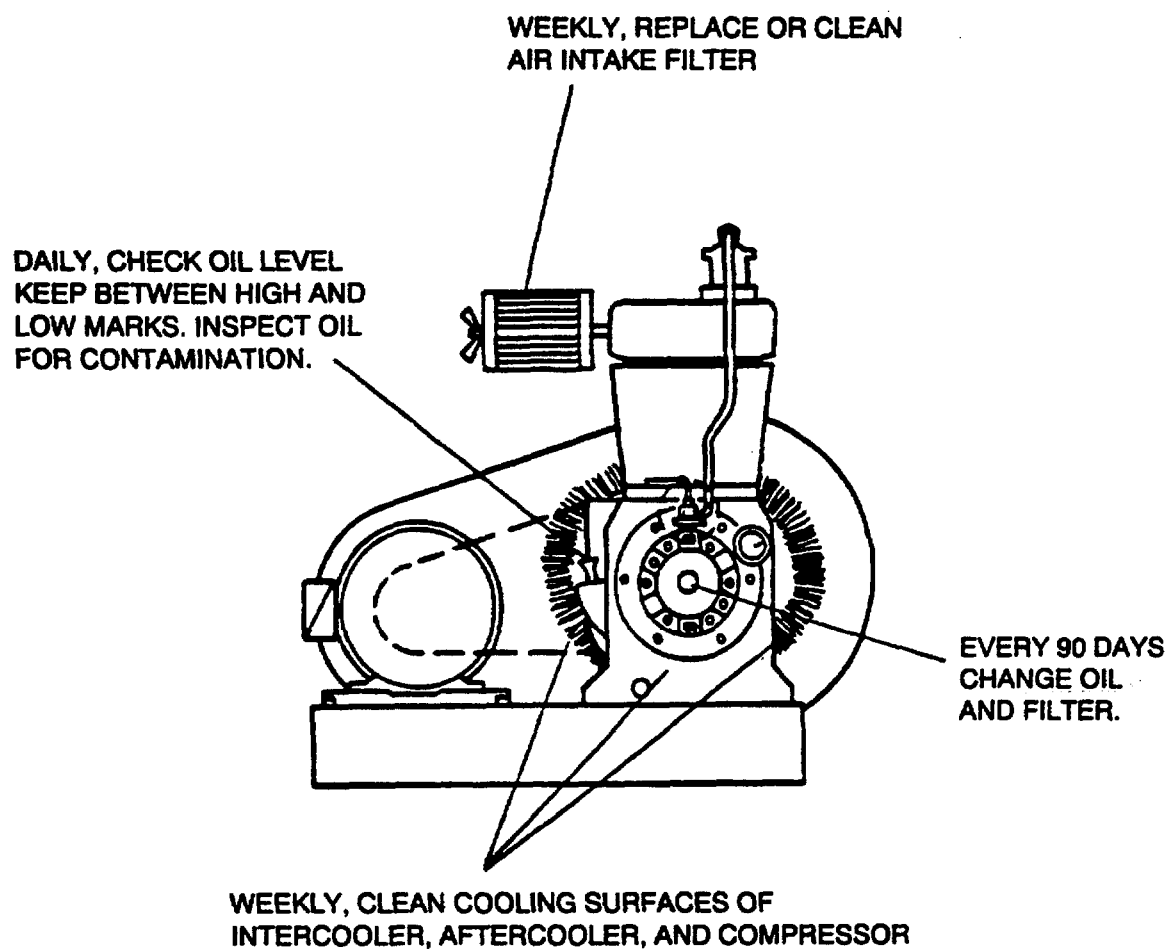

NOTE
THESE LUBRICATION INSTRUCTIONS ARE MANDATORY

3-3. Bow Thruster.


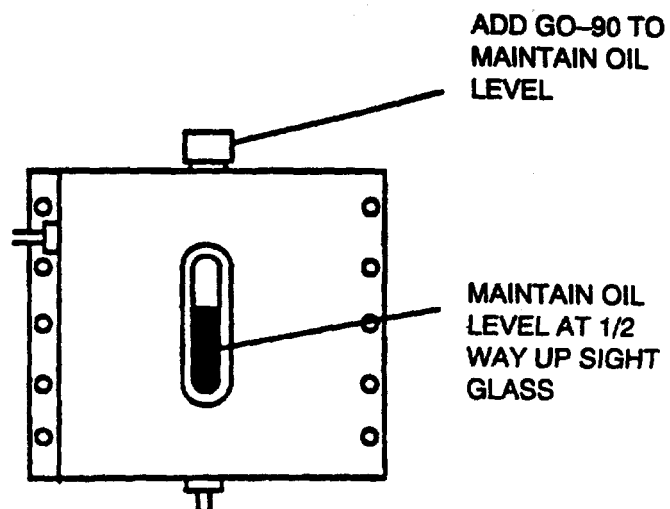


NOTE

THESE LUBRICATION INSTRUCTIONS ARE MANDATORY


3-4. Bow Thruster Engine

LUBE IT

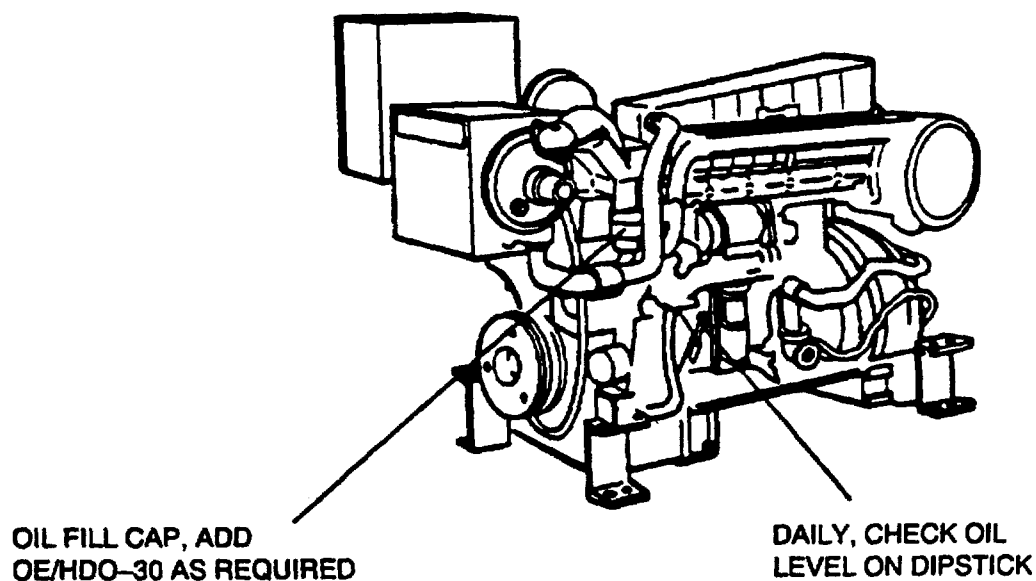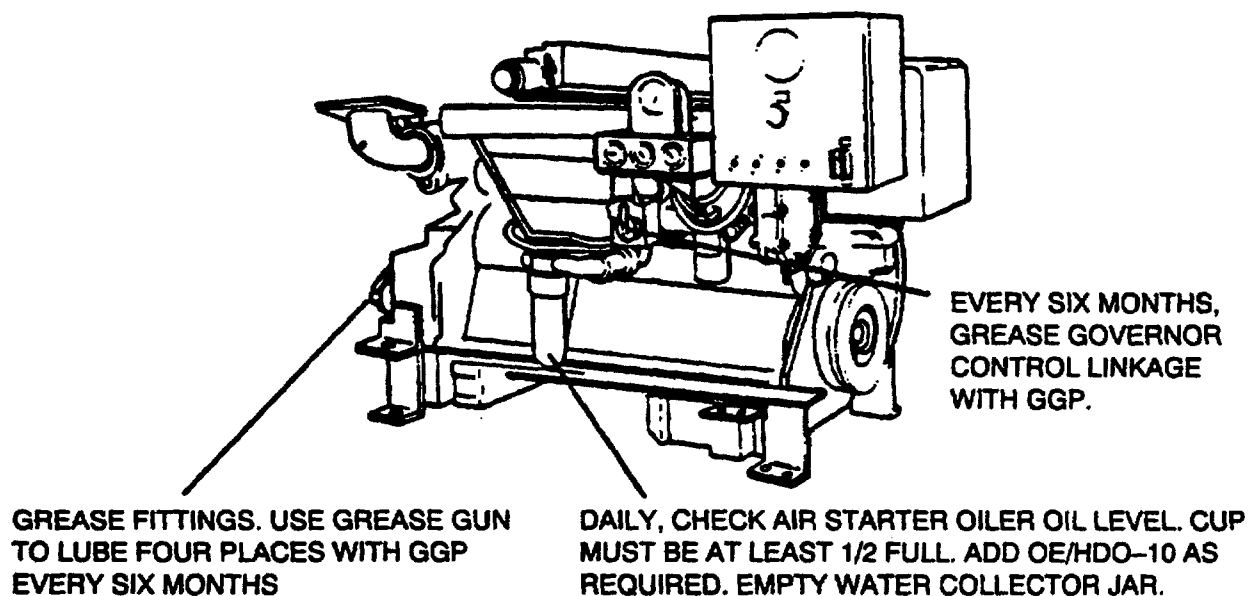

NOTE
THESE LUBRICATION INSTRUCTIONS ARE MANDATORY

3-4. Bow Thruster Engine - continued.

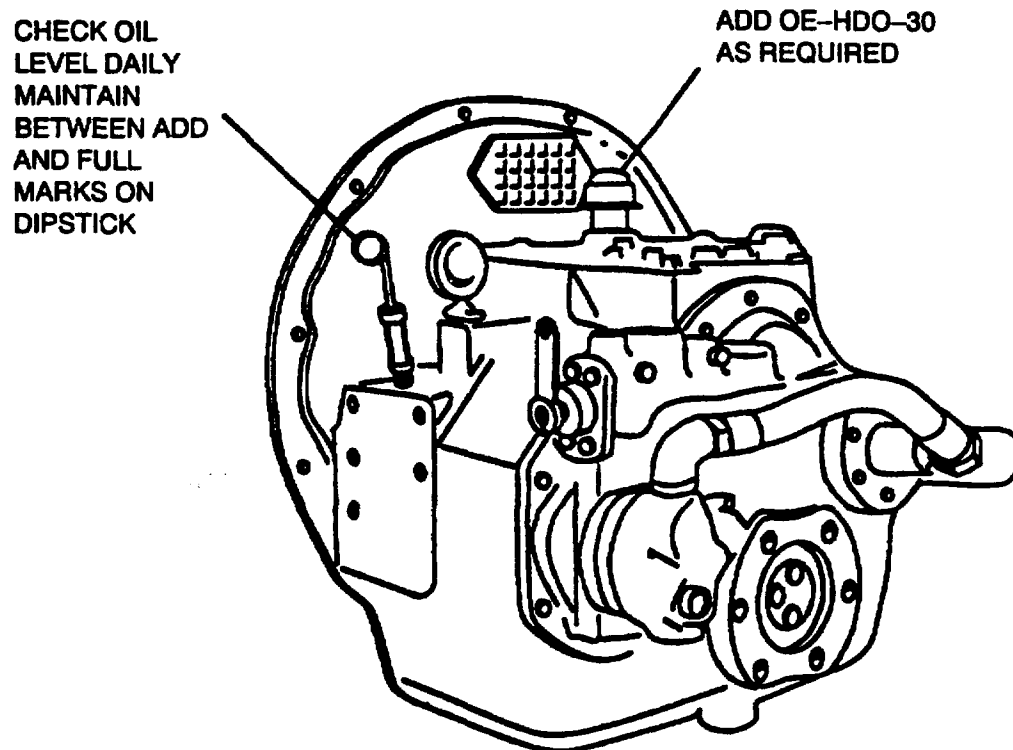

NOTE
THESE LUBRICATION INSTRUCTIONS ARE MANDATORY