

TM 55-1520-210-23-2

TECHNICAL MANUAL

**AVIATION UNIT AND INTERMEDIATE
MAINTENANCE INSTRUCTIONS
ARMY MODEL UH-1H/V/EH-1H/X
HELICOPTERS**

This manual supersedes TM 55-1520-210-23-2, 20 February 1979, including all changes.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
30 SEPTEMBER 1987**

TECHNICAL MANUAL

NO. 55-1520-210-23-2

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 30 September 1987

AVIATION UNIT AND INTERMEDIATE MAINTENANCE INSTRUCTIONS
ARMY MODEL UH-IHNIEH-IHIX HELICOPTERS

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT4-MP, 4300 Goodfellow Blvd, St Louis, MO 63120-1798. A reply will be furnished to you. You may also submit your recommended changes by E-mail directly to <mpmt%avma28gst-louis-emh7.army.mil>. A reply will be furnished to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page
CHAPTER 1	INTRODUCTION	
Section I	Servicing.....	1-1
Section II	Lubrication	1-50
Section III	Handling, Jacking, Mooring, Hoisting, and Sling Loading	1-54
Section IV	Inspection Requirements	1-66
Section V	Overhaul and Retirement Schedule	1-110
Section VI	Flight Safety Critical Aircraft Parts (FSCAP) Program.....	1-115
CHAPTER 2	AIRFRAME	
Section I	Fuselage	2-1
Section II	Tailboom	2-193
CHAPTER 3	LANDING GEAR	
Section I	Landing Gear.....	3-1
Section II	Skids/Struts	3-30
Section III	Floats	3-30
Section IV	Skis.....	3-30
Section V	Brakes.....	3-30
CHAPTER 4	POWER PLANT	
Section I	Power Plant	4-1
Section II	Cooling System.....	4-13
Section III	Air Induction System.....	4-13
Section IV	Exhaust System	4-42.7
Section V	Oil System	4-44
Section VI	Ignition System	4-61
Section VII	Power Controls	4-41
Section VIII	Quick Change Assembly (AVIM)	4-86

TABLE OF CONTENTS (Cont)

			Page
CHAPTER	5	ROTORS	
Section	I	Main Rotor System	5-1
	II	Main Rotor Hub	5-16
	III	Main Rotor Blades	5-38.1
	IV	Main Rotor Controls	5-53
	V	Tail Rotor System	5-104
	VI	Tail Rotor Hub and Blade Assembly	5-107
	VII	Tail Rotor Hub and Controls	5-119
	VIII	Tail Rotor Blades	5-132
	XI	Tracking Procedures	5-138
CHAPTER	6	DRIVE TRAIN SYSTEM	
Section	I	Main Driveshaft	6-1
	II	Clutch	6-29
	III	Main Transmission	6-29
	IV	Tail Rotor Driveshaft	6-1162
	V	Intermediate Gearbox	6-138
	VI	Tail Rotor Gearbox	6-148
	VII	Oil Systems	6-167
CHAPTER	7	HYDRAULIC AND PNEUMATIC SYSTEMS	
Section	I	Hydraulic System	7-1
	II	Pneumatic System (Not Applicable)	7-81
CHAPTER	8	INSTRUMENT SYSTEMS	
Section	I	Instrument Maintenance	8-1
	II	Engine Instruments	8-2
	III	Flight Instruments	8-22
	IV	Navigation Instruments	8-33
	V	Miscellaneous Instruments	8-37
	VI	Instrument Panels	8-51
CHAPTER	9	ELECTRICAL SYSTEMS	
Section	I	Direct Current Power Distribution System	9-1
	II	Alternating Current Power Distribution System	9-41
	III	Starting System	9-52
	IV	Ignition System	9-54
	V	Lighting Provisions	9-56
	VI	Miscellaneous Equipment	9-94
CHAPTER	10	FUEL SYSTEM	
Section	I	Fuel Cells	10-1
	II	Fuel Systems	10-11
CHAPTER	11	FLIGHT CONTROLS	
Section	I	Controls Surfaces	11-1
	II	Flight Control Components	11-1

TABLE OF CONTENTS (Cont)

	Page
CHAPTER 12	UTILITY SYSTEMS
Section I	Fire Detector System 12-1
II	Windshield Wiper System 12-5
III	Rear View Mirror 12-20
CHAPTER 13	ENVIRONMENTAL CONTROL SYSTEM
Section I	Heating System 13-1
II	Air Cooling System 13-15
III	Winterization Equipment 13-18
CHAPTER 14	HOIST AND WINCHES
Section I	Personnel Rescue Hoist 14-1
II	Cargo Suspension Assembly 14-98
CHAPTER 15	AUXILIARY POWER PLANTS (Non applicable) 15-1
CHAPTER 16	MISSION EQUIPMENT 16-1
CHAPTER 17	EMERGENCY EQUIPMENT 17-1
APPENDIX A	REFERENCE A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART
Section I	Three Levels of Maintenance Concept B-1
II	Maintenance Allocation Chart B-6
III	Tools and Test Equipment B-79
IV	Remarks B-105
APPENDIX C	AIRCRAFT INVENTORY MASTER GUIDE C-1
APPENDIX D	ILLUSTRATED FIELD MANUFACTURE ITEMS LIST D-1
APPENDIX E	STORAGE OF AIRCRAFT
Section I	General Information E-1
II	Flyable Storage E-4
III	Short Term Storage E-5
IV	Intermediate Storage E-11
APPENDIX F	WIRING DIAGRAMS F-1
INDEX	 Index 1

CHAPTER 7

HYDRAULIC AND PNEUMATIC SYSTEMS

Section I. HYDRAULIC SYSTEM

7-1. HYDRAULIC SYSTEM.

NOTE

The use of any alcohol in cleaning components which contact hydraulic fluids is prohibited. Formation of a polymeric residue can result which could impair mechanical operation of the components.

NOTE

All preformed packings and threads will have a light film of hydraulic fluid (C130) or (C131) applied prior to assembly. Ensure that parts are clean.

7-2. Description — Hydraulic System. a. The flight control hydraulic system provides power to operate flight control power cylinders. A gravity feed reservoir is used. The basic system includes a variable delivery axial-piston pump, reservoir, filter, relief valve, solenoid valve, directional flow check valves, servo valves, irreversible valves, power cylinders, pressure switch, low pressure caution light, couplings for connection of a ground test stand and connecting lines and a control switch located on the pedestal (figure 7-1).

b. The pump is located on the transmission sump case and is accessible through a removable panel on right side of pylon island. Access to the gravity feed reservoir is by opening transmission fairing on cabin roof. The ground test stand couplings are located in the engine compartment on the right side.

c. Additional equipment for helicopters with provisions for external stores includes a solenoid valve in the pressure line, a filter and check valve in the return line, and couplings with quick-disconnect fittings for connection of external stores and

armament. The components are located in the pylon aft of the basic system equipment. The external stores couplings are located on the right and left sides of the fuselage just above the landing skid attachment points.

7-3. Operation — Hydraulic System. a. System pressure (figure 7-2) of 950 to 1000 psig is produced by the variable delivery, pressure compensated pump, mounted on the main transmission and driven at 0.65 engine drive shaft speed. Fluid is drawn from the reservoir by the hydraulic pump and pumped to the system through a check valve and a filter to a normally-open, solenoid-operated system shutoff valve. When the HYD CONTROL switch is ON, this valve is open and system pressure is supplied to all four of the flight control power cylinders. Each power cylinder assembly includes a servo valve which is mechanically controlled by the flight control linkages. When the linkage moves any servo valve control lever down, the cylinder retracts and when the linkage moves the lever up the cylinder extends. When the lever is centered, system pressure is applied equally to both sides of the cylinder piston but the system return port is shut off and cylinder does not move in either direction. Irreversible valves are provided for each main rotor power cylinder to prevent feedback. When system pressure drops to approximately 500 psi, a spring loaded sequence valve (view A), sheet 2 in the irreversible valve closes and blocks both the system pressure and system return ports trapping fluid under 500 psi in the power cylinder servo valve and irreversible valve. Each irreversible valve incorporates a check valve to isolate surge pressure produced in the power cylinders from the system pressure lines. A differential relief valve opens automatically to relieve pressures in excess of 500 psi differential. The irreversible valves also incorporate another feature which allows the power cylinders to be operated manually. The same function is performed by the check valve which interconnects the system pressure line to the system return line adjacent to the tail rotor power cylinder. When no system pressure is available and the power cylinders are operated manually, fluid flows directly through the irrevers-

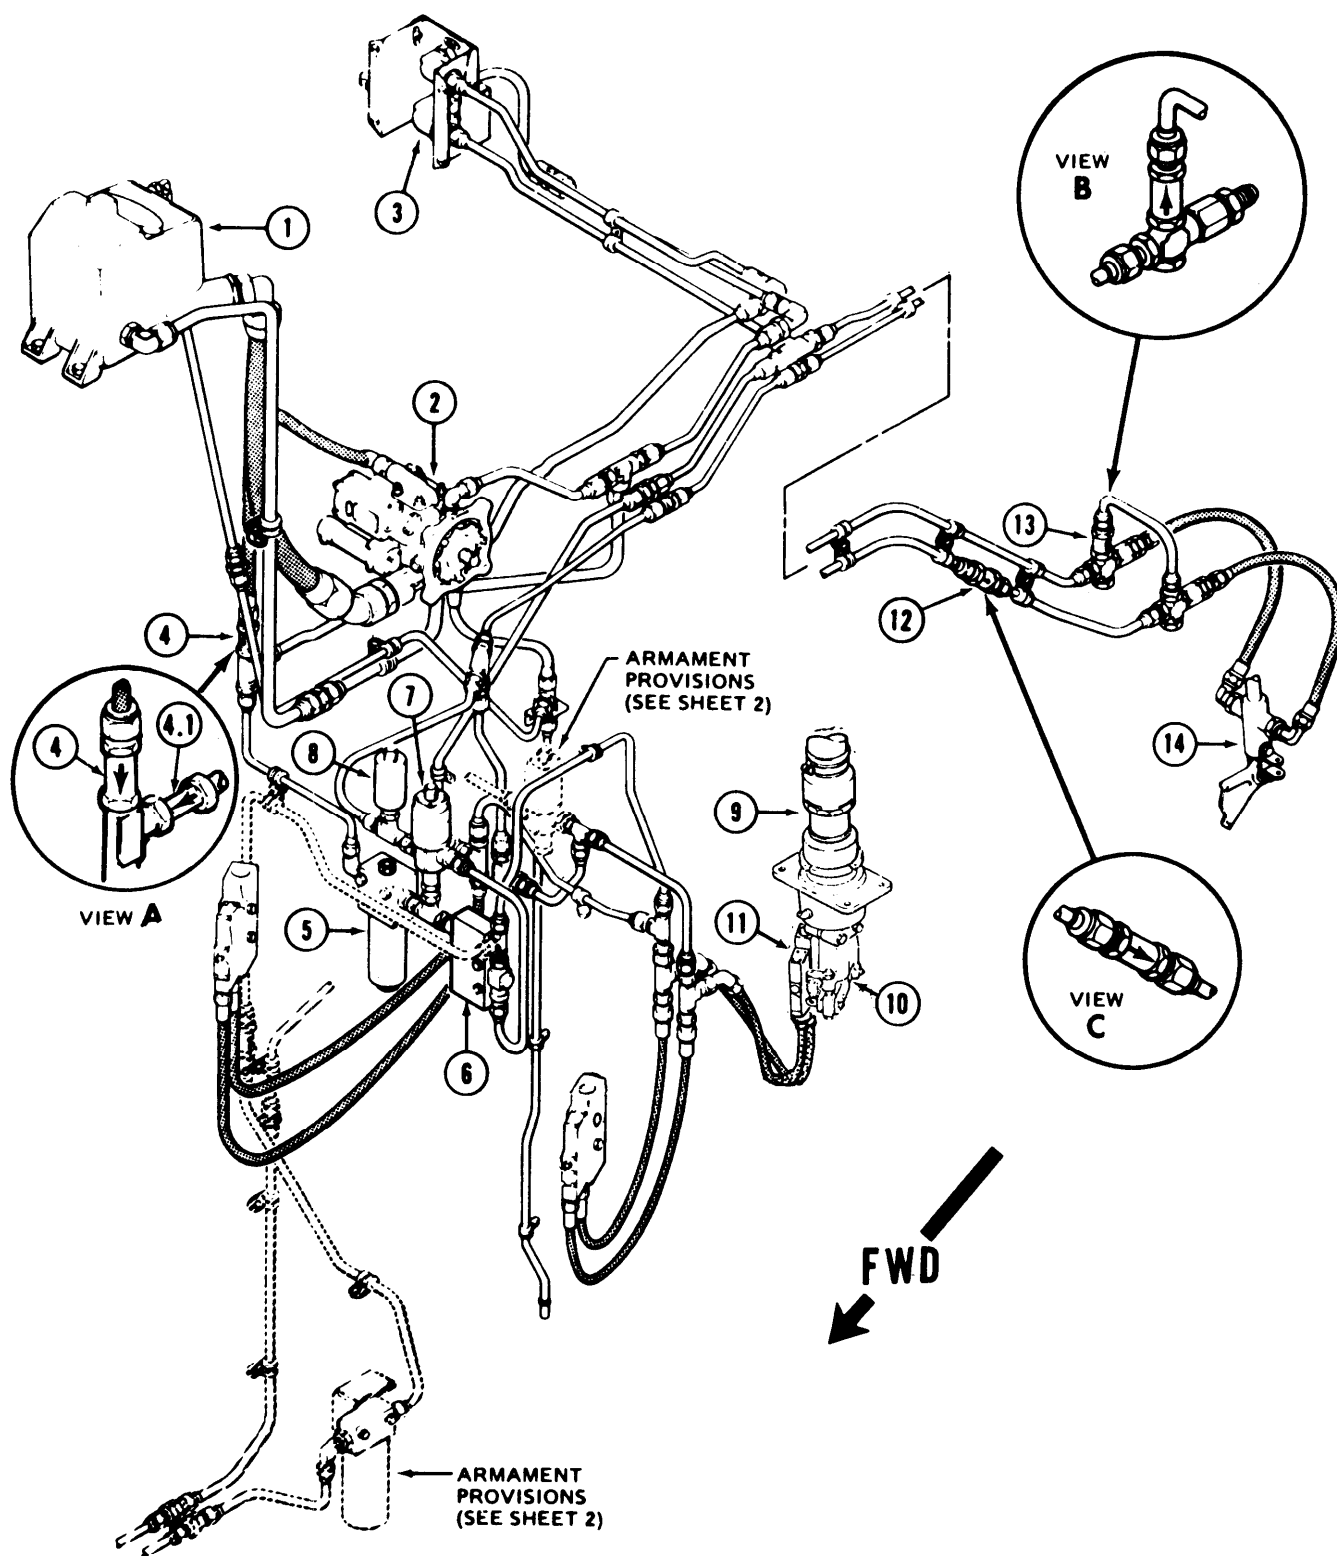


Figure 7-1. Hydraulic System — Flight Controls (Sheet 1 of 2)

ible valve or the tail rotor check valve from the cylinder return part to the cylinder pressure. Hence the cylinder pumps fluid from one side of the piston to the other without attempting to pump fluid through the entire system. The pressurized reservoir hydraulic system is no longer approved for use in UH-1 helicopters.

b. A line-mounted pressure switch is provided in the system pressure line to sense the system pressure. The switch closes a circuit to the caution