

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

TRUE RMS VOLTMETER, JOHN FLUKE MODEL 8922A/AA

(NSN 6695-01-084-1760)

Current as of 5 December 1979

Headquarters, Department of the Army, Washington, DC
10 January 1980

REPORTING OF ERRORS

You can help improve this publication by calling attention to errors and by recommending improvements and stating your reasons for the recommendations. Your letter or DA Form 2028, Recommended Changes to Publications, should be mailed directly to Commander, US Army Missile Command, ATTN: DRSMI-N.FM, Redstone Arsenal, AL 35809. A reply will be furnished directly to you.

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope-----	1	1
General -----	2	1
Explanation of columns -----	3	1
Special information -----	4	5
How to locate repair parts -----	5	5
Abbreviations-----	6	6
II. REPAIR PARTS LIST-----		9
Functional group	Group title	Model No.
		Part No.
7003	True RMS Voltmeter	8922A/AA
		--
III. NATIONAL STOCK NUMBER AND PART NUMBER INDEX		15

Section I. INTRODUCTION

1. Scope. This manual lists spares and repair parts that are required for maintenance of the True RMS Voltmeter, John Fluke Model 8922A/AA. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General. This repair parts and special tools list (RPSTL) is divided into the following sections:

a. Section I. Introduction.

b. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed in National Stock Number (NSN) sequence.

c. Section III. NSN and Part Number Index. A list, in National Item Identification Number (NIIN) sequence, of all NSN's appearing in the listings, followed by a list in alphameric sequence of all part numbers appearing in the listings. NSN's and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration on which the item is shown.

(2) Item Number. The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) codes.

(1) Source Code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA -	Item procured and stocked for anticipated or known usage.
PB -	Item procured and stocked for insurance purpose because essentiality dictates that a minimum quantity be available in the supply system.
PC -	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD -	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE -	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF -	Support equipment which will not be stocked but which will be centrally procured on demand.