

TECHNICAL MANUAL

**UNIT AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

**40, 000 GALLON WATER STORAGE AND
DISTRIBUTION SYSTEM
MODEL WSDS40K
NSN 4610-01-114-1451
MODEL 40KWSDS
NSN 4610-01-382-3583
MODEL ALP9440
NSN 4610-01-413-1886**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*** This manual supersedes TM 10-4610-234-23P, dated 31 MARCH 1993**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
30 JUNE 1997**

TECHNICAL MANUAL

NO. 10-4610-234-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 30 JUNE 1997

TECHNICAL MANUAL

Unit and Direct Support
Maintenance Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts and Special Tools)

40, 000 GALLON WATER STORAGE AND DISTRIBUTION SYSTEM

MODEL WSDS40K

NSN 4610-01-114-1451

MODEL 40KWSDS

NSN 4610-01-382-3583

MODEL ALP9440

NSN 4610-01-413-1886

Current as of 10 April 1997

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MR 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	PAGE	ILLUS/ FIGURE
Section I	INTRODUCTION	1
Section II	REPAIR PARTS LIST	1
Group 00	40, 000 Gallon Water Storage and Distribution System	
	40, 000 Gallon Water Storage and Distribution System	1-1 1
Group 01	Bag Filler Connection Kit	
	Bag Filler Connection Kit	2-1 2

* This manual supersedes TM 10-4610-234-23P, dated 31 March 1993

	Discharge Hose, 1 1/2-inch x 25 ft.....	3-1	3
	Gate Valve, 2-inch	4-1	4
	Gate Valve, 2-inch	4A-1	4A
	Discharge Hose, 2-inch x 20 ft	5-1	5
	Tee Assembly (MxFxM).....	6-1	6
	Discharge Hose, 4-inch x 20 ft	7-1	7
	Hose and Nozzle Kit	8-1	8
	Distribution Nozzle (1-inch).....	9-1	9
	Discharge Hose, 1 -inch x 10 ft	10-1	10
	Water Pressure Regulator Assembly.....	11-1	11
	Nozzle Stand Assembly.....	12-1	12
Group 02	Hose Nozzle Connection Kit		
	Hose Nozzle Connection	13-1	13
	Distribution Nozzle, 1 1/2-inch.....	14-1	14
	Discharge Hose, 1 1/2-inch x 25 ft.....	15-1	15
	Discharge Hose, 2-inch x 20 ft	16-1	16
	Gate Valve, 2-inch	17-1	17
	Gate Valve, 2-inch	17A-1	17A
	Tee Assembly (MxFxM).....	18-1	18
	Discharge Hose, 4-inch x 20 ft	19-1	19
	Nozzle Stand Assembly.....	20-1	20
Group 03	Hose Connection Kit, 2-inch		
	Hose Connection Kit, 2-inch.....	21-1	21
	Discharge Hose, 2-inch x 20 ft	22-1	22
	Gate Valve, 2-inch	23-1	23
	Gate Valve, 2-inch	23A-1	23A
	Tee Assembly, 4-inch (MxFxM).....	24-1	24
	Discharge Hose, 4-inch x 20 ft	25-1	25
	Nozzle Stand Assembly.....	26-1	26
Group 04	Hypochlorination Unit (See TM 5-4610-233-13&P)		
Group 05	350 GPM Connection Kit		
	350 GPM Connection.....	27-1	27
	Tee Assemblies (FxFxM)	28-1	28
	Tee Assemblies (MxFxM w/cap)	29-1	29
	Tee Assemblies (MxFxF w/plug)	30-1	30
	Tee Assemblies (MxMxF)	31-1	31
	Suction Hose, 4-inch X 20 ft	32-1	32
	Gate Valve, 4-inch	33-1	33
	Discharge Hose, 4-inch x 20 ft	34-1	34
	Water Meter Assembly	35-1	35
	Water Meter Assembly	35A-1	35A
Group 06	Pumping Assembly, 350 GPM (See TM 5-4320-226-24P)		
Group 07	125 GPM Connection Kit		
	125 GPM Connection Kit	36-1	36
	Discharge Hose, 2-inch x 20 ft	37-1	37
	Gate Valve, 2-inch	38-1	38
	Gate Valve, 2-inch	38A-1	38A
	Check Valve, 2-inch	39-1	39
	Check Valve, 2-inch	39A-1	39A

	Suction Hose, 2-inch x 20 ft	40-1	40
Group 08	Pump Assembly, 125 GPM (See TM 5-4320-309-24P)		
Group 09	Dud Tank Connection Kit		
	Dual Tank Connection Kit	41-1	41
	Discharge Hose, 4-inch x 10 ft	42-1	42
	Discharge Hose, 4-inch x 20 ft	43-1	43
	Tee and Gate Valve Assembly, 4-inch	44-1	44
	Suction Hose, 4-inch x 20 ft	45-1	45
	Suction Hose, 4-inch x 10 ft	46-1	46
Group 10	Tank, Fabric Collapsible, 20, 000 Gallon (See TM 10-5430-226-20P)		
Group 11	Accessory Kit		
	Accessory Kit	47-1	47
	Air Ejector Assembly	48-1	48
Group 12	Water Tank Chest		
	Water Tank Chest	49-1	49
Group 13	Bulk Materials		
	Bulk	Bulk-1	Bulk
Section III	SPECIAL TOOLS LIST (NOT APPLICABLE)		
Section IV	CROSS REFERENCE INDEXES		
	National Stock Number Index	I-1	
	Part Number Index	I-8	

UNIT and DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit and direct support maintenance of the 40000 Gallon Water Storage and Distribution System. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts list are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOC) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

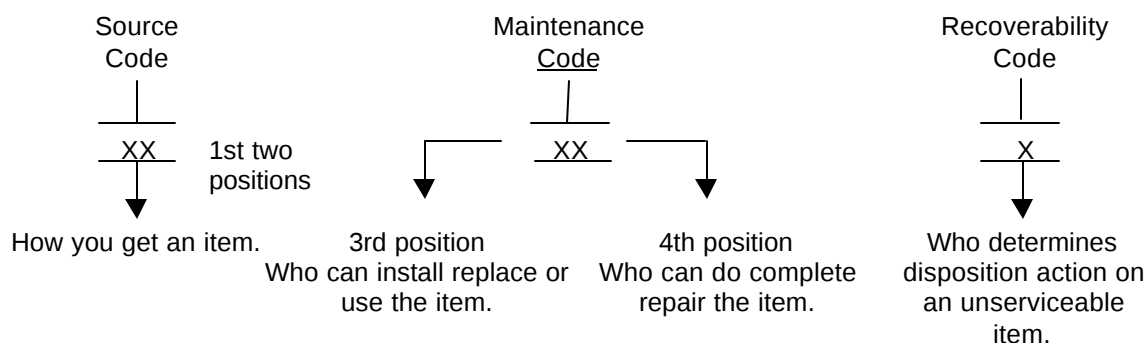

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance task of the "Repair function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: