

**UNIT AND DIRECT SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LIST
FOR
800K WATER STORAGE
AND
DISTRIBUTION SYSTEM

MODEL WSDS810
NSN: 4610-01-360-1581

MODEL 800KWSDS
NSN: 4610-01-382-3547**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*** This manual supersedes TM 10-4610-243-23P, dated 1 SEPTEMBER 1993**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
15 JUNE 1996**

TECHNICAL MANUAL

NO. 10-4610-243-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 15 June 1996**Unit and Direct Support Maintenance
Repair Parts and Special Tools List
for****800K WATER STORAGE****AND****DISTRIBUTION SYSTEM****MODEL WSDS810 (NSN 4610-01-360-1581)
MODEL 800KWSDS (NSN 4610-01-382-3547)****Current as of 30 JANUARY 1996****REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to; Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	PAGE	ILLUS/ FIGURE
Section I. Introduction.....	1	
Section II. Repair Part List	1-1	
Group 00 . 800,000 Gallon Water Storage and Distribution System		
Group 01. Bag Filler Connection Kits		
Bag Filler/Hose and Nozzle Connection Kits	1-1	1
Hose Assembly, Discharge, Potable Water, 1-1/2 Inch	2-1	2
Gate Valve Assembly, 2 Inch.....	3-1	3
Hose Assembly, Discharge, Potable Water, 2 Inch	4-1	4
Tee Assembly, 4 Inch	5-1	5
Hose Assembly, Discharge, Potable Water, 4 Inch	6-1	6

* This manual supersedes TM10-4610-243-23P, dated 1 September 1993

TABLE OF CONTENTS-continued

	Hose and Nozzle Kit	7-1	7
	Nozzle Assembly, 1 Inch.....	8-1	8
	Hose Assembly, Discharge, potable Water, 1 Inch.....	9-1	9
	Regulator Assembly, Potable Water	10-1	10
	Stand Assembly, Nozzle	11-1	11
Group 02.	Hose Nozzle Connection Kit		
	Hose Nozzle Connection Kit Potable Water	12-1	12
	Nozzle Assembly, 1-1/2 Inch.....	13-1	13
	Hose Assembly, Discharge, Potable Water, 1-1/2 Inch	14-1	14
	Hose Assembly, Discharge, Potable Water, 2 Inch	15-1	15
	Gate Valve, 2 Inch.....	16-1	16
	Tee Assembly, 4 Inch	17-1	17
	Hose Assembly, Discharge, Potable Water, 4 Inch	18-1	18
	Stand Assembly, Nozzle	19-1	19
Group 03.	2-Inch Hose Connection Kit		
	Hose Connection Kit, Potable Water.....	20-1	20
	Hose Assembly, Discharge, Potable Water, 2 Inch	21-1	21
	Gate Valve Assembly, 2 Inch.....	22-1	22
	Tee Assembly, 4 Inch	23-1	23
	Hose Assembly, Discharge, Potable Water, 4 Inch	24-1	24
	Stand Assembly, Nozzle	25-1	25
Group 04.	Hose Connection Kit, 4-Inch		
	Hose Connection Kit, Potable Water, 4 Inch	26-1	26
	Butterfly Valve Assembly, 4 Inch	27-1	27
	Hose Assembly, Discharge, Potable Water, 4 Inch	28-1	28
	Quick Acting Valve Assembly, 4 Inch.....	29-1	29
	Tee Assembly, 4 Inch	30-1	30
	Stand, Nozzle	31-1	31
	Tee and Gate Valve Assembly (9133-Y1), 4 Inch.....	31A-1	31A
	Hose Assembly, Suction, Potable Water, 4 Inch	31B-1	31B
Group 05.	Hypochlorination Unit		
	Hypochlorination Unit.....	32-1	32
Group 06.	350 GPM Pump Connection Kit		
	350 GPM Pump Connection Kit.....	33-1	33
	Tee Assembly, 4 Inch	34-1	34
	Hose Assembly, Suction, Potable Water, 4 Inch	35-1	35
	Tee Assembly, 4 Inch	36-1	36
	Gate Valve Assembly, 4 Inch.....	37-1	37
	Hose Assembly, Discharge, Potable Water, 4 Inch	38-1	38
	Tee Assembly, 4 Inch	39-1	39
	Water Meter Assembly, Fluid Flow Indicating	40-1	40
	Water Meter Assembly, Fluid Flow Indicating	40A-1	40A
	Tee Assembly, 4 Inch	41-1	41
Group 07.	Pumping Assembly, 350 GPM		
	Pumping Assembly, 350 GPM.....	42-1	42
Group 08.	125 GPM Pump Connection Kit		
	125 GPM Pump Connection Kit.....	43-1	43
	Hose Assembly, Discharge, Potable Water, 2 Inch	44-1	44
	Gate Valve Assembly, 2 Inch.....	45-1	45
	Check Valve Assembly, 2 Inch	46-1	46
	Hose Assembly, Suction, Potable Water, 2 Inch	47-1	47
Group 09.	Pumping Assembly, 125GPM		
	Pumping Assembly, 125 GPM.....	48-1	48

TABLE OF CONTENTS - continued

Group 10.	Dual Tank Connection Kit		
	Dual Tank Connection Kit	49-1	49
	Hose Assembly Discharge, Potable Water, 4 Inch	50-1	50
	Hose Assembly, Discharge, Potable Water, 4 Inch	51-1	51
	Gate Valve Assembly, 4 Inch.....	52-1	52
	Hose Assembly, Suction, Potable Water, 4 Inch	53-1	53
	Hose Assembly, Suction, Potable Water, 4 Inch	54-1	54
	Gate Valve Assembly, 4 Inch.....	55-1	55
	Gate Valve Assembly, 4 Inch.....	56-1	56
	Gate Valve Assembly, 4 Inch.....	57-1	57
Group 11.	Interconnection Kit, 4-Inch Discharge		
	Discharge Hose Interconnection Kit, 4 Inch.....	58-1	58
	Tee Assembly, 4 Inch	59-1	59
	Hose Assembly, Discharge, Potable Water, 4 Inch	60-1	60
	Tee Assembly, 4 Inch	61-1	61
Group 12.	Tank, Fabric, Collapsible, 50,000 Gallon		
	Collapsible Fabric Tank 50K Gallon.....	62-1	62
Group 13.	Accessory Kit		
	Accessory Kit.....	63-1	63
Group 14.	Water Tank Chest		
	Water Tank Chest.....	64-1	64
Group 15.	Triple Container		
	Triple Container	65-1	65
Group 16.	Miscellaneous Government Furnished items		
	Miscellaneous Government Furnished items.....	66-1	66
Group 17.	Bulk Material List		
	Bulk.....	Bulk-1	
Section III.	Special Tools list (Not Applicable)		
Section IV.	Cross Reference Index .		
	National Stock Number Index	I-1	
	Part Number Index	I-9	
	Figure and Item Number Index	I-32	

UNIT AND DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit and direct support maintenance of the 800K Water Storage and Distribution System, Models WSDS810 and 800KWSDS. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Pads lists are composed of functional groups in ascending alphanumeric sequence, with the pads in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-Reference Index. A list, in National Item identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (Sections II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 4-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

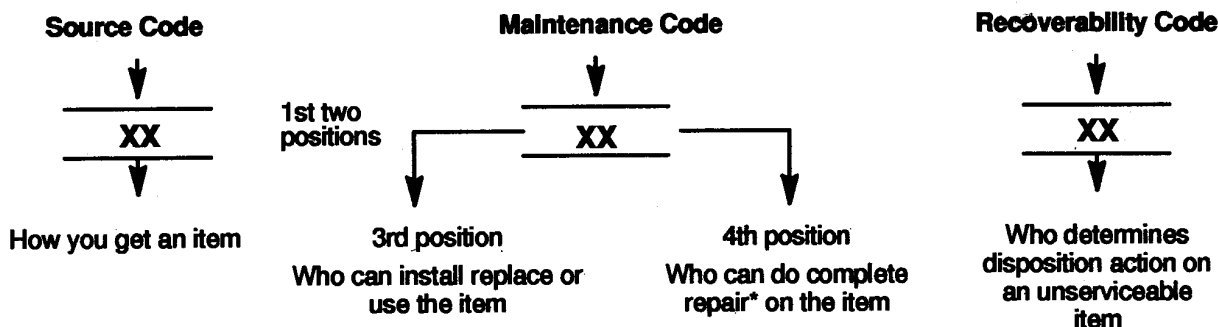

* Complete Repair Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.