
TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)

WATER PURIFICATION UNIT, VAN-TYPE, BODY MOUNTED
ELECTRIC DRIVEN, AC, 115/208 V, SINGLE AND 3 PHASE,
60 HERTZ, 1/20 to 2 HP, 1500 GPH
MODEL EMC-1500S
NSN 4610-01-037-8746

HEADQUARTERS, DEPARTMENT OF THE ARMY

15 MAY 1980

TECHNICAL MANUAL

No. 5-4610-218-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 15 May 1980

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

WATER PURIFICATION UNIT, VAN-TYPE, BODY MOUNTED,
ELECTRIC DRIVEN, AC, 115/208V, SINGLE AND 3 PHASE,
60 HERTZ, 1/20 to 2 HP, 1500 GPH
MODEL EMC-1500S
NSN 4610-01-037-8746
Current as of 25 February 1980

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard) St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

	Page	Illus Figure
Section I. INTRODUCTION	1	
II. REPAIR PARTS LIST	7	
Group 01 Electrical System	7	
Clearance Lights	6	1
Clearance Light Installation	8	2
Ceiling Light Fixture	10	3
Junction Boxes and Related Parts.....	12	4
Group 02 Frame	17	
Ladder Assemblies	16	5
Group 03 Landing Gear	19	
Leveling Jack, Storage Rack,	18	6
Lifting Kit	20	7
Group 04 Body, Van Type and Accessories	25	
Storage Box and Frame	24	8
Van Body	26	9
Van Body and Attaching Parts	28	10
Right Van Body	30	11
Left Van Body	32	12
Front Van Body	34	13
Rear Van Body	36	14
Right Side Door	38	15
Left Side Doors	40	16
Counterbalance Assembly	42	17

TABLE OF CONTENTS (CONT.)

	Page	Illus Figure
Rear Door	44	18
Bonnet Doors	46	19
Door Latch	48	20
Door Latch Left Side	50	21
Blackout Door and Window Stationary	52	22
Blackout Door and Window Ventilating.. ..	54	23
Roof Hatch	56	24
Reflector, Level, Cable Cover	58	25
Heater	60	26
Heater Exhaust Pipe	62	27
Fuel Pump and Attaching Parts... ..	64	28
Fuel Lines and Fittings	66	29
Heater Duct	68	30
Data Plates	70	31
Group 05 Electric Motors	73	
Erdlator Agitator Drive Motor and Related Parts.	72	32
Slurry Feeder Drive Motor and Related Parts	74	33
Chemical Solution Feeder Motor and Related Parts.	76	34
Erdlator Motor Disassembly	78	35
Slurry Feeder Motor Disassembly	80	36
Erdlator Agitator Motor Base	82	37
Erdlator Bridge Rail Assembly and Speed Reducer Moun- ting Plate	84	38
Erdlator Speed Reducer Mounting Plate	86	39
Erdlator Agitator Shaft Bearing Support	88	40
Erdlator Agitator Speed Reducer and Related Parts	90	41
Erdlator Gear Assembly	92	42
Erdlator Agitator Drive Shaft, Pulley, Bearings and At- taching Parts	94	43
Erdlator Agitator Shaft Assembly.,	96	44
Slurry Feed Speed Reducer.,.,.,.	98	45
Slurry Feed Chain and Motor Guard	100	46
Slurry Feed Chain, Chain Tightener and Slip Clutch.	102	47
Slurry Feeder Drive Gear.	104	48
Chemical Solution Feeder Gear Unit Assembly.	106	49
Chemical Solution Feeder Gear Unit..	108	50
Electrical Control Cabinet Assembly	112	51
Internal Electrical Wiring.....	116	52
Door Sensitive Switch	120	53
Low Water Level Sensitive Switch.	122	54
Terminal Board Assembly	124	55
Receptacles	126	56
Group 06 Electrical Equipment	131	
Low Water Level Warning Light	130	57
Low Water Level Alarm Buzzer	132	58
Group 07 Gages (Non-Electrical Weighting and Measuring Devices)	135	
Filter Gage	134	59
Raw Water Pressure Gage	136	60
Flow Controller	138	61

TABLE OF CONTENTS (CONT.)

	Page	Illus Figure
Group 08 Water Purification Unit	141	
Chemical Feed Equipment Frame and Related Parts.. . . .	140	62
Chemical Solution Feeder.	142	63
Chemical Solution Feeder Diaphragm Pump	144	64
Chemical Solution Feeder Lever Arms..	146	65
Chemical Solution Feeder Junction Box, Cover Receptacle, Top Housing, and Lever Arm Shaft.....	148	66
Slurry Feeder Housing	150	67
Slurry Feeder Agitators	152	68
Slurry Feeder Shaft	154	69
Erdlator Tank and Related Parts	156	70
Influent Launder and Chemical Solution Tank	158	71
Dilution Tank Assembly.....	160	72
Waste Tank, Grating, and Mounting Hardware	162	73
Raw Water Piping Between Inlet Hose and Top of Erdlator. .	164	74
Raw Water Sight Glass	166	75
Raw Water Float Valve By-Pass Piping	168	76
Raw Water Chemical Lines, Right Side Slurry Feeder.. . . .	170	77
Aspirator Manifold Assembly.....	172	78
Coagulated Water Piping Between Erdlator Weir Box and Sludge Concentrator	174	79
Coagulated Water Piping From Wet Well to Filter Pump	176	80
Coagulated Water Piping From Filter Pump to Filter	178	81
Coagulated Water Piping From Filter Plug Valve to Wet Well	180	82
Waste Water Piping Wet Well-Erdlator.	182	83
Waste Water Piping Erdlator Tank and Outlet	184	84
Waste Water Piping Between Waste Tank, Sludge Concen- tractor Tank, and Outlet in Van Body.....	186	85
Filtered Water Piping From Filter to Plug.....	188	86
Filtered Water Piping From Plug Valve to Outlet	190	87
Filtered Water Piping to Slurry Feeder	192	88
Filtered Gage Lines and Fittings.....	194	
Dilution Tank Piping to Erdlator Tank	196	90
Chemical Lines, Slurry Feeder and Chemical Solution Feeder.....	198	91
Low Water Level Alarm Float and Linkage.....	200	92
Sludge Concentrator Valve and Piping.....	202	93
Float Valve	204	94
Valve Assembly Influent	206	95
Valve Assembly Effluent	208	96
Support Pipe Adjustment.....	210	97
Group 09 Pumps	213	
Filter Pump Motor Base	212	98
Filter Pump Assembly and Mounting Hardware.....	214	99
Filter Pump.....	216	100
Group 10 Filters, Separators, Purifiers	219	
Upper Filter Housing.	218	101
Lower Filter Housing.....	220	101
Air Release Valve Assembly and Mounting Hardware	222	103

TABLE OF CONTENTS (CONT.)

	Page	Illus Figure
Air Release Valve Three-way Valve.	224	104
Air Release Valve	226	105
Filter Element Assembly	228	106
Section III. SPECIAL TOOLS LIST (Not applicable)		
Section IV. NATIONAL STOCK NUMBER AND REFERENCE NUMBER INDEX.....	231	

Section I. INTRODUCTION

1. Scope. This manual lists spares and repair arts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the water purification unit. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General. This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized for the performance of maintenance. (Not applicable.)

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. This index is followed by a cross-reference list of reference designators to figure and item numbers.

3. Explanation of Columns.

a. Illustration. This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration on which the item is shown.

(2) Item Number. The number used to identify item called out in the illustration.

b. Source, Maintenance and Recoverability (SMR) Codes.

(1) Source Code. Source codes indicate the manner of acquiring support items for maintenance, repair or overhaul of end items. Source codes are entered in the first and second

positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KD	An item of a depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair,
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at the organizational level.