

Technical Manual

**DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LIST**

**WATER PURIFICATION UNIT, VAN-TYPE
BODY MOUNTED, ELECTRIC DRIVEN,
AC 115/208V, SINGLE AND 3-PHASE
1/20 TO 2 HP, 3000 GPH
(MET-PRO MODEL 3000 V)
NSN 4610-00-168-1799**

This manual supersedes TM 5-4610-223-34P, 1 December 1971, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY

10 FEBRUARY 1983

TECHNICAL MANUAL

NO. 54610-223-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 10 February 1983DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)WATER PURIFICATION UNIT: VAN-TYPE BODY MOUNTED;
ELECTRIC DRIVEN, AC, 115, 208V
SINGLE- AND 3-PHASE, 60 HERTZ
1/20 TO 2 HP, 3000 GPH
(MET-PRO MODEL 3000 V)
NSN 4610-00-168-1799

CURRENT AS OF 1 SEPTEMBER 1982

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Troop Support and Aviation Materiel Readiness Command, ATTN: DRST-MPSD, 4300 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished directly to you.

TABLE OF CONTENTS

	Illus Page	Figure
Section I. INTRODUCTION.....	1	
II. REPAIR PARTS LIST	7	
Group 01. Fuel System		
Personnel Heater External Fuel Lines and Pump	7	1
Personnel Heater Fuel Lines to Heater	9	2
02. Electrical System		
Power and Pump Cable Cover Components	11	3
Van Body Dome Light Assembly.....	13	4
Tail Lights and Electrical Connectors Mounting Hardware	15	5
Red Marker Clearance and Service Lights	17	6
Amber Marker Clearance and Service Lights	19	7
03. Body and Door Components		
Accessory Storage Chest Assembly	21	8
Leveling Jack Assembly	23	9
Van Body Right Side Stationary Window	25	10
Bonnet Doors	27	11
Door Locks, Right Side and Rear Doors	29	12
Right Side Door	31	13
Door, Left, Rear.....	33	14
Door Checks, Right Side Door and Rear Doors.....	35	15

TABLE OF CONTENTS (Con't)

	Illus Page	Figure
Upper and Lower Left Side Doors and Red Reflectors	37	16
Right Rear Door	39	17
Left Side Door Counterbalance	41	18
Upper Left Side Door and Roof Hatch Assembly	43	19
Van Body to Chassis Mounting, Springs and Hardware	45	20
Van Body to Chassis Mounting Hardware	47	21
Tank Mounting Extension Legs, Hardware	49	22
Influent Tank Bridge Rails	51	23
Drain Plug and Body Holddown Hardware	53	24
Jack Assembly Storage Box	55	25
Personnel Heater Exhaust	67	26
Personnel Heater Hood, Thermostat	59	27
04. Electrical Equipment, Motors, Piping		
Grounding Terminal Load, Amber Reflectors and ID Plate	61	28
Erdlator Motor Assembly	63	29
Erdlator Agitator Sliding Motor Base	65	30
Slurry Feeder Motor Assembly	67	31
Cabinet Assembly and Electrical Equipment	69	32
Motor Starter, Exploded View	73	33
Cabinet, Electrical Equipment	75	34
Low Water Warning Indicator Light	77	35
Receptacle Box Assembly	79	36
Cabinet to Filter Pump Cables	81	37
Cable Assembly, Electrical Cabinet	83	38
Van Body Electrical Installation	85	39
Low Water Level Alarm Switch	87	40
Filter Gage Lines	89	41
Filter Gage	91	42
Raw Water Indicators and Erdlator Piping	93	43
Raw Water Sight Indicator	95	44
Raw Water Flow Indicator	97	45
Filter Assembly, Cover, Air Release and Overflow Valves	99	46
Filter Element and Influent Valve Plug	101	47
Filter Assembly, Main Housing	103	48
Filter Element Assembly	105	49
Air Release Valve	107	50
Air Release Valve Tubing	109	51
Filtered Water Piping from Filters to Flow Control Assembly	111	52
05 Filter and Water Piping		
Coagulated Water Piping from Discharge to Filters	113	53
Raw Water Piping from Van Body and Slurry Feeder to Erdlator Piping 116 54		
Filtered Water Piping to Slurry Feeder	117	55
Filtered Water Piping from Flow Control Valve to Outside Van Body 119 56		
Raw Water Piping Between Inlet Hose and Top of Erdlator	121	57
Raw Water Erdlator Piping	123	58
06 Erdlator Components		
Erdlator Agitator Drive Shaft	125	59
Erdlator Agitator Speed Reducer and Couplings	127	60
Erdlator Agitator Speed Reducer Assembly	129	61

TABLE OF CONTENTS (Con't)

	Illus Page	Figure
Erdlator Agitator Speed Reducer Mounting Assembly	131	62
Erdlator Agitator Motor Mounting Assembly	133	63
Erdlator Agitator Shaft and Disc	135	64
Erdlator Tank, Effluent Launder and Down Conier Tube	137	65
Erdlator Tank Support Bracket and Hose Clamps	139	66
07 Chemical Solution Feeder and Tubing		
Chemical Tubing, Left Side of Slurry Feeder	141	67
Chemical Tubing from Diatomic Tank to Erdlator Tank	143	68
Chemical Tubing from Diatomic Tank to Wet Well	145	69
Chemical Tubing, Right Side to Slurry Feeder	147	70
Chemical Solution Feeder, Controls	149	71
Chemical Solution Feeder, Housing Assembly	151	72
Chemical Solution Feeder, Gearing	153	73
08 Slurry Agitator and Feeder		
Slurry Feeder Speed Reducer Gear Assembly	157	74
Slurry Feeder Chain Tightener Assembly	159	75
Slurry Feeder Speed Reducer Assembly	161	76
Slurry Feeder Waste Water Valve and Hardware	163	77
Slurry Agitator and Feeder, Metering Assembly	166	78
Slurry Agitator and Feeder, Clutch Assembly	167	79
Slurry Feeder Housing	169	80
Slurry Feeder Support and Chemical Tank	171	81
09 Waste Water Tank, Piping		
Sludge Contractor Tank Draw-Off	173	82
Waste Water Tank	175	83
Waste Water Piping from Sludge Contractor to Waste Water Tank	177	84
Waste Water Piping Between Sludge Contractor, Waste Water Tank, Diatomic Filters and Van Body Outlet	179	85
Waste Water Piping Between Erdlator, Wet Well Tank and Van Body Outlet	181	86
Coagulated Water Piping	183	87
Coagulated Water Piping from Wet Well to Filter Pumps	185	88
Coagulated Water Piping from Filter Plug Valve to Wet Well	187	89
Coagulated Water Piping from Filter Pumps to Influent Valve	189	90
10 Float, Influent and Effluent Valves		
Low Water Level Alarm Float	191	91
Float Valve	193	92
Influent Valve Assembly	195	93
Valve Assembly, Effluent Plug	197	94
11 Flow Control Valve		
Adjustable Flow Control Valve Assembly	199	95
12 Dilution Diatomic Tank, Body Water Inlets and Outlets		
Dilution Diatomic Tank Assembly	201	96
Van Body Water Inlets and Outlets	203	97
13 Pumps		
Filter Pump and Motor Mounting	205	98
Filter Pump and Motor Assembly	207	99
Chemical Solution Pump Assembly	209	100
14 Precision Leveling Devices		
Van Body Level Assembly	211	101

TABLE OF CONTENTS (Con't)

		Illus Page	Figure
15	Special Purpose Kits		
	Front Vehicle Lifting Kit	213	102
	Rear Vehicle Lifting Kit.....	215	103
16	Bulk Material	216	
Section III	Special Tools List (Not Applicable)		
IV.	National Stock Number and Part Number Index	218	

Section I. INTRODUCTION

1. Scope. This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the Water Purification Unit. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General. This Repair Parts and Special Tools List is divided into the following sections: a. Section H. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized for the performance of maintenance. (Not Applicable).

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification Number (NIIN) sequence, of all National Stock Numbers (NSN) appearing in the listing, followed by a list in alphabetic sequence, of all part numbers appearing in the listings. National Stock Numbers and part numbers are cross-referenced to each illustration figure and item number appearance. This index is followed by a cross-reference designators to figure and item numbers.

3. Explanation of Columns.

a. Illustration. This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration on which the item is shown.

(2) Item Number. The number used to identify each item called out in the illustration.

b. Source, Maintenance and Recoverability (SAMR Codes).

(1) Source Code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KD	An item of a depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.
KB	Item included in both a depot over-haul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at the organizational level.
MF	Item to be manufactured or fabricated at the direct support maintenance level.
MH	Item to be manufactured or fabricated at the general support maintenance level.