

TM 5-3431-205-35P

TECHNICAL MANUAL

DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

WELDING MACHINE, ARC, GENERATOR, GED, 300 AMP, DC

(LIBBY WELDING MODELS)

(MODEL LE-300) FSN 3431-810-9696

(MODEL LEW-300) FSN 3431-991-2961

(MODEL LEB-300) FSN 3431-072-0327

HEADQUARTERS, DEPARTMENT OF THE ARMY

JANUARY 1971

TECHNICAL MANUAL }
No. 5-3431-205-35P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 13 January 1971

**DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST**

**WELDING MACHINE, ARC, GENERATOR, GED, 300 AMP, DC
(LIBBY WELDING MODELS)**

(MODEL LE-300) FSN 3431-810-9696

(MODEL LEW-300) FSN 3431-991-2961

(MODEL LEB-300) FSN 3431-072-0327

Current as of 31 December 1970

	Paragraph	Page
SECTION I. INTRODUCTION	1	iii
Scope	1	iii
General	2	iii
Explanation of columns	3	iii
Special information	4	iv
How to locate repair parts	5	v
Abbreviations	6	v
Federal supply codes for manufacturers	7	v
Recommendations for maintenance publication improvements	8	vi
II. REPAIR PARTS FOR DS., GS., AND DEPOT MAINTENANCE		1
Group 01. Battery Cables		1
02. Battery Box		1
03. Enclosure and Skid		3
04. Base Plate		12
05. Instrument Panel		12
06. Remote Control		20
07. Current Control		21
08. Heater and Blower Assembly		23
09. Fuel Tank and Strainer		26
10. Brush Holder, Brushes and Cover		28
11. Brush Holders, Capacitors, Exciter		29
12. Welding Generator		30
13. Generator Exciter		32
14. Timing and Speed Control		34
15. Air Cleaner		36
16. Muffler		36
17. Carburetor and Fuel Pump		37
18. Oil Filter		38
19. Manifolds		40
20. Governor, Controls and Engine Speed		42
21. Engine Speed Idler and Lines		45
22. Generator, Battery Charging		47
23. Regulator, Generator Voltage		50

*This manual supersedes TM 5-3431-205-35P, 5 February 1964, and applicable portions of TM 5-3431-215-25P, 9 August 1965, including all changes.

	Page
24. Starter, Engine and Relay	51
25. Magneto, Spark Plug Leads, Housing and Impulse Coupling	56
26. W a t e r P u m p	62
27. Transmitter, Switches and Nameplate	63
28. Block, Cylinder Head and Valve Cover	64
29. Motor, Oil Pan and Nameplates	67
30. Oil Pump.....	71
31. Camshaft, Valves and Timing Gear	73
32. Pistons and Connecting Rods	75
33. Crankshaft, Flywheel	77
34. Fire Extinguisher	79
SECTION III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS, AND DEPOT MAINTENANCE. (Not Applicable.)	
IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER	119

SECTION I

INTRODUCTION

1. Scope

This manual lists repair parts required for the performance of direct support, general support, and depot maintenance of the welding machine.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Repair Parts-Section II. A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level in figure and item number sequence.

b. Special Tools, Test and Support Equipment-Section III. A list of special tools, test and support equipment authorized for the performance of maintenance at the direct support, general support, and depot level. (Not applicable.)

c. Index-Federal Stock Number and Reference Number-Section IV. A list of Federal stock numbers in ascending numerical sequence followed by a list of reference numbers in ascending alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

Note. Items not, illustrated are cross-referenced to page number.

3. Explanation of Columns

The following provides an explanation of columns in the tabular lists in Sections II and III.

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source code indicates the selection status and source for the listed item. Source codes used are:

Code	Explanation
P	Repair parts which are stocked in or supplied from the GSA/DSA, or Army supply system and authorized for use at indicated maintenance categories.
P2	Repair parts which are procured and stocked for insurance purposes because the combat or military essentiality of the end item dictates that a minimum quantity be available in the supply system.

Code	Explanation
M	Repair parts which are not procured or stocked, but m-e to be manufactured in indicated maintenance levels.
A	Assemblies which are not procured or stocked as such, but are made up of two or more units. Such component units carry individual stock numbers and descriptions, are procured and stocked separately and can be assembled to form the required assembly at indicated maintenance categories.
X	Parts and assemblies which are not procured or stocked and the mortality of which normally is below that of the end item or component. The failure of such part or assembly should result in retirement of the end item from the supply system.
X1	Repair parts which are not procured or stocked. The requirement for such items will be filled by use of the next higher assembly or component.
X2	Repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain same through cannibalization. Where such repair parts are not obtainable through cannibalization, requirements will be requisitioned, with accompanying justification, through normal supply channels.
G	Major assemblies that are procured with PEMA funds for initial issue only as exchange assemblies at DSU and DSU level. These assemblies will not be stocked above DSU and DSU level or returned to depot supply level.

(2) Maintenance code indicates the lowest category of maintenance authorized to install the listed item. Repair parts and special tools assigned maintenance code "C" may be stocked at the operator level of maintenance when authorized by the Unit Commander. The maintenance level codes are:

Code	Explanation
C	Crew or operator maintenance
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance

(3) Recoverability code indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability Codes are: