

# TM 5-3431-208-35P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

---

DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

**WELDING SET, ARC, INERT GAS SHIELDED:**

**PLASTIC OR METAL LINED GUN;**

**FOR 3/64 IN. WIRE DC, 115V,**

**(LINDE MODEL SWM-9-A)**

**FSN 3431-972-7672**

---

HEADQUARTERS, DEPARTMENT OF THE ARMY

MAY 1970

**TECHNICAL MANUAL** }  
No. 5-3431-208-35P }

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D. C., 27 May 1970

**DIRECT AND GENERAL SUPPORT AND DEPOT MAINTENANCE REPAIR PARTS  
AND SPECIAL TOOLS LIST**

**WELDING SET, ARC, INERT GAS SHIELDED: PLASTIC OR  
METAL LINED GUN; FOR 3/64 IN. WIRE; DC, 115V.  
(LINDE MODEL SWM-9-A)  
FSN 3431-972-9672**

**Current as of 19 August 1969**

|                                                                                                                        | Paragraph | Page |
|------------------------------------------------------------------------------------------------------------------------|-----------|------|
| <b>SECTION I. INTRODUCTION</b>                                                                                         |           |      |
| Scope .....                                                                                                            | 1         | iii  |
| General .....                                                                                                          | 2         | iii  |
| Explanation of columns .....                                                                                           | 3         | iii  |
| Special information .....                                                                                              | 4         | iv   |
| How to locate repair parts .....                                                                                       | 5         | iv   |
| Abbreviations .....                                                                                                    | 6         | v    |
| Federal supply codes for manufacturers .....                                                                           | 7         | v    |
| Recommendations for maintenance manual improvements .....                                                              | 8         | v    |
| <b>II. REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT<br/>AND DEPOT MAINTENANCE</b>                                  |           |      |
| Group 22. Body Chassis or Hull and Accessory Items .....                                                               |           | 1    |
| 2202 Accessory items .....                                                                                             |           | 1    |
| 2210 Data plates .....                                                                                                 |           | 1    |
| 44. Welding Equipment .....                                                                                            |           | 1    |
| 4407 Control panels, housing .....                                                                                     |           | 5    |
| 4408 Connecting devices .....                                                                                          |           | 8    |
| 4409 Protective devices, electrical .....                                                                              |           | 8    |
| 4410 Switching, timing and speed control .....                                                                         |           | 11   |
| 4411 Resistor components .....                                                                                         |           | 12   |
| 4413 Rectifier components .....                                                                                        |           | 12   |
| 4416 Head, torch and gun unitized components .....                                                                     |           | 12   |
| 47. Gages (Non-Electrical), Weighing and Measuring Devices .....                                                       |           | 16   |
| 4702 Gages .....                                                                                                       |           | 16   |
| 4705 Flow meters and regulators .....                                                                                  |           | 18   |
| 95. General Use Standardized Parts .....                                                                               |           | 18   |
| 9501 Bulk materiel .....                                                                                               |           | 19   |
| 99. Parts Peculiar .....                                                                                               |           | 19   |
| 9901 Multi-listed parts .....                                                                                          |           | 19   |
| <b>SECTION III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS, GS,<br/>AND DEPOT MAINTENANCE. (NOT APPLICABLE.)</b> |           |      |
| <b>IV. FEDERAL STOCK NUMBER AND REFERENCE NUMBER INDEX</b>                                                             |           |      |

\*This manual together with TM 5-3431-208-20P, 27 May 1970 supersedes TM 5-3431-208-25P, 11 July 1963, including all changes.

## SECTION I

### INTRODUCTION

#### 1. Scope

This manual lists repair parts required for the performance of direct support, general support, and depot maintenance of the welding set,

#### 2. General

a. The Repair Parts List is arranged as follows:

(1) Individual parts and major assemblies are listed alphabetically by item name within the numbered functional groups.

(2) Assembly components and subassemblies are indented and listed alphabetically by item name under major assemblies.

b. This Repair Parts and Special Tools List is divided into the following sections:

(1) *Repair Parts-Section II*. A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

(2) *Special Tools, Test and Support Equipment-Section III*. A list of special tools, test and support equipment authorized for the performance of maintenance at the direct support, general support, and depot level. (Not Applicable.)

(3) *Federal Stock Number and Reference Number Index-Section IV*. A list of Federal stock numbers followed by reference numbers in ascending alpha-numeric sequence cross-referenced to index number.

#### 3. Explanation of Columns

The following provides an explanation of columns in the tabular lists in Sections II and III:

a. *Source, Maintenance, and Recoverability Codes (SMR), Column (1)*.

(1) Source code indicates the selection status and source for the listed item. Source codes used are:

| Code | Explanation                                                                                                                                              |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| P    | Applied to repair parts which are stocked in or supplied from DSA/GSA or Army supply system, and authorized for use at indicated maintenance categories. |

| Code | Explanation                                                                                                                                                                                                                                                                                                         |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| M    | Applied to repair parts which are not procured or stocked but are to be manufactured at indicated maintenance categories.                                                                                                                                                                                           |
| A    | Applied to assemblies which are not procured or stocked as such but made up of two or more units, each of which carry individual stock numbers and descriptions and are procured and stocked and can be assembled by units at indicated maintenance categories.                                                     |
| X    | Applied to parts and assemblies which are not procured or stocked, the mortality of which is normally below that of the applicable end item, and the failure of which should result in retirement of the end item from the supply sys                                                                               |
| X1   | Applied to repair parts which are not procured or stocked, the requirement for which will be supplied by use of the next higher assembly or components.                                                                                                                                                             |
| X2   | Applied to repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain them through cannibalization; if not obtainable through cannibalization, such repair parts will be requisitioned with supporting justification through normal supply channels. |
| G    | Applied to major assemblies that are procured with PEM (Procurement Equipment Missile Army) funds for initial issue only to be used as exchange assemblies at DSU and GSU maintenance level. These assemblies will not be stocked above DSU and GSU level or returned to depot supply level.                        |

*Note.* Source code is not shown on common hardware items known to be readily available in Army supply channels and through local procurement.

(2) Maintenance code indicates the lowest category of maintenance authorized to install the listed item. The maintenance level codes are:

| Code | Explanation                 |
|------|-----------------------------|
| O    | Organizational Maintenance  |
| F    | Direct Support Maintenance  |
| H    | General Support Maintenance |
| D    | Depot Maintenance           |

(3) Recoverability code indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are: