

TECHNICAL MANUAL

**AVIATION UNIT AND INTERMEDIATE
MAINTENANCE MANUAL**

**ARMY MODEL
AH-1P (PROD)
AH-1E (ECAS)
AH-1F (MODERNIZED COBRA)
HELICOPTERS**

"Approved for public release; distribution is unlimited."

**HEADQUARTERS, DEPARTMENT OF THE ARMY
8 MAY 1980**

TECHNICAL MANUAL

NO. 55-1520-238-23

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 8 May 1980AVIATION UNIT AND INTERMEDIATE MAINTENANCE MANUAL
ARMY MODELAH-1P (PROD)
AH-1E (ECAS)
AH-1F (MODERNIZED COBRA)
HELICOPTERS

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of away to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		PARAGRAPH	PAGE
VOLUME I			
CHAPTER 1	AIRCRAFT GENERAL		
Section I	Servicing	1-1	1-1
Section II	Lubrication	1-28	1-41
Section III	Handling, jacking, mooring, hoisting, and sling loading	1-30	1-45
Section IV	Inspection requirements	1-55	1-58
Section V	Overhaul and retirement schedule	1-58	1-87
Section VI	Flight safety critical aircraft parts (FSCAP) program	1-59	1-89
CHAPTER 2	AIRFRAME		
Section I	Structural repair	2-1	2-1
Section II	Fuselage	2-41	2-113
Section III	Tailboom	2-281	2-229
Section IV	Wing	2-335	2-245
Section V	Deleted	2-352	2-258
CHAPTER 3	LANDING GEAR		
Section I	Landing Gear	3-1	3-1
Section II	Skids/Struts (Not Applicable)		3-29
Section III	Floats (Not Applicable)		3-29
Section IV	Skis (Not Applicable)		3-29
Section V	Brakes (Not Applicable)		3-29
CHAPTER 4	POWER PLANT		
Section I	Power plant	4-1	4-1
Section II	Cooling system (Not Applicable)		4-17

		PARAGRAPH	PAGE
Section III	Air induction system	4-24	4-18
Section IV	Exhaust system	4-39	4-36
Section V	Oil system	4-59	4-50.2
Section VI	Ignition system (Not Applicable)		4-69
Section VII	Power lever controls	4-98	4-69
Section VIII	Quick change assembly	4-114	4-79
CHAPTER 5	ROTORS		
Section I	Main rotor system	5-3	5-1
Section II	Main rotor hub and blades	5-8	5-2.2
Section III	Main rotor controls	5-47	5-103
Section IV	Tail rotor system	5-72	5-138
Section V	Tail rotor hub and blade assembly.	5-79	5-141
Section VI	Tail rotor hub and control	5-89	5-148
Section VII	Tail rotor blades	5-107	5-170
Section VIII	Tracking and balancing procedures	5-114	5-181
CHAPTER 6	DRIVE TRAIN SYSTEM		
Section I	Drive train	6-1	6-1
Section II	Main driveshaft	6-5	6-7
Section III	Main transmission	6-20	6-24
Section IV	Tail rotor driveshaft	6-75	6-75
Section V	Intermediate gearbox	6-96	6-86
Section VI	Tail rotor gearbox	6-113	6-103
Section VII	Transmission oil system	6-129	6-120.1
VOLUME II			
CHAPTER 7	HYDRAULIC AND PNEUMATIC SYSTEMS		7-1
CHAPTER 8	INSTRUMENTS SYSTEM		
Section I	Instrument maintenance	8-1	8-1
Section II	Engine instruments	8-10	8-7
Section III	Flight instruments	8-114	8-25
Section IV	Navigation instruments	8-185	8-36
Section V	Miscellaneous instruments	8-198	8-38
Section VI	Instrument panels	8-285	8-52
CHAPTER 9	ELECTRICAL SYSTEMS		
Section I	Electrical systems maintenance.	9-1	9-1
Section II	Direct current power distribution system	9-37	9-27
Section III	Alternating current power distribution system	9-119	9-56
Section IV	Starting system	9-238	9-73
Section V	Ignition system	9-246	9-75
Section VI	Lighting provisions	9-254	9-76
Section VII	Miscellaneous equipment	9-340	9-102
Section VIII	P Armament systems arcuitry	9-412	9-122

		PARAGRAPH	PAGE
Section IX	E Armament systems circuitry	9-442	9-154
Section X	M Armament and fire control systems circuitry	9-496	9-185
CHAPTER 10	FUEL SYSTEMS		
Section I	Fuel systems	10-1	10-1
Section II	Fuel cells	10-73	10-17
CHAPTER 11	FLIGHT CONTROLS		
Section I	Flight controls	11-1	11-1
Section II	Flight controls components	11-145	11-81
CHAPTER 12	UTILITY SYSTEMS		
Section I	Fire detection system	12-1	12-1
Section II	Rain removal system	12-9	12-4
Section III	Defroster system	12-10	12-4
Section IV	Low G Warning System	12-11	12-5
CHAPTER 13	ENVIRONMENTAL CONTROL SYSTEM		
Section I	Heating systems	13-1	13-1
Section II	Air cooling systems	13-125	13-37
CHAPTER 14	HOIST AND WINCHES (Not Applicable)	14-1	14-1
CHAPTER 15	AUXILIARY POWER PLANT (Not Applicable)	15-1	15-1
CHAPTER 16	MISSION Equipment	16-1	16-1
CHAPTER 17	EMERGENCY EQUIPMENT	17-1	17-1
APPENDIX A	REFERENCES		A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART.		B-1
APPENDIX C	AIRCRAFT IVENTORY MASTERGUIDE.		C-1
VOLUME III			
APPENDIX D	ILLUSTRATED FIELD MANUFACTURE LIST		D-1
APPENDIX E	STORAGE OF AIRCRAFT		
Section I	General information	E-1	E-1
Section II	Flyable storage	E-6	E-2
Section III	Short term storage	E-10	E-4
Section IV	Intermediate storage	E-14	E-11
APPENDIX F	WIRING DIAGRAMS		F-1
APPENDIX G	WIRE LISTS		G-1
INDEX			Index-1
VOLUME IV			
FOLDOUTS			FO-1
VOLUME V			
FOLDOUTS			FO-143

LIST OF ILLUSTRATIONS

NUMBER	TITLE	PAGE
1-1	Servicing Points Diagram	1-2
1-1.1	Receiver and Cap Assembly	1-2.3
1-2	Deleted	
1-3	Deleted	
1-4	Deleted	
1-5	Lubrication Chart	1-42
1-6	Ground Handling Diagram	1-46
1-7	Work Aid for Towing Ground Handling Gear	148
1-8	Jacking and Mooring Fittings	1-50
1-9	Covers Diagram	1-53
1-9.1	AH-1 Paved Surface Mooring Configuration	1-54.2
1-10	Mooring Diagram	1-55
1-11	Maintenance Hoist, T101520	1-57
1-12	Inspection Area Diagram (Typical)	1-59
2-1	Fuselage Components and Tailboom	2-2.1
2-2	Structural Panels	2-4
2-3	Non-Structural Access Panels, Doors, and Fairings	2-8
2-4	Principal Dimensions - Airframe	2-14
2-5	Reference Lines - Airframe	2-16
2-6	Cleaning Chart	2-23
2-7	Type A - Damage, Body Panel Repairs	2-36
2-8	Type B - Damage, Body Panel Repairs	2-37
2-9	Type C - Damage, Body Panel Repairs	2-38
2-10	Type D - Damage, Body Panel Repairs	2-40
2-11	Primary Structural Caps - Left Side	2-42
2-12	Primary Structural Caps - Right Side	2-43
2-13	Pilot and Gunner Floor Panels	2-44
2-14	Bulkhead at Station 93.0	2-45
2-15	Bulkhead at Station 148.5 and 171.61	2-46
2-15.1	Ammo Floor Scuff Doubler Installation	2-46.1
2-16	Bulkhead at Stations 186.25 and 213.94	2-47
2-17	Bulkhead at Stations 250.0 and 268.5	2-48
2-18	R&L Main Beam Panels at Station 148.5 to 186.25	2-49
2-19	R&L Main Beam Panels at Station 213.94 to 250.0	2-50
2-20	Panel at Forward Fuel Cell at R.S. and Gunner Floor	2-51
2-21	R&L Beam Panels at Station 250 to B.S. 41.32	2-52
2-22	Ammo Floor, Support Panel and Forward Fuel Cell Panel at Station 213.9	2-53
2-23	Forward Fuel Cell Floor - Lower Panel Station 86 to 213	2-54
2-24	Lower Aft Fuel Cell Panel at Station 250 to B.S. 41.32	2-55
2-25	Engine Deck Installation at Station 213.94 to 298.75	2-56
2-26	Forward Fuel Cell Panels - Main Beam at Station 186 to 214	2-57
2-27	Edge Repair for Honeycomb Panels with Glass Skin Opposite Titanium	2-58
2-28	Edge Repair for Honeycomb Panels with Aluminum Alloy with Glass Edging	2-60
2-29	Edge Repair for Honeycomb Panels with Glass Finish at Channel	2-61
2-30	Typical Rivet Pattern for Channel Section Repair	2-62
2-31	Potted - Injection - Grommet Type Fasteners	2-64
2-31.1	HMPP Cowling Nut Plate Replacement	2-66.1
2-31.2	Stringer Repair	2-66.2
2-32	Longeron Damage Limits	2-82
2-33	Typical Tailboom Bulkhead Damage Limits	2-85
2-34	Tail Rotor Driveshaft Covers	2-87
2-35	Driveshaft Cover Hinges and Angles Damage	2-88
2-36	Damage Limits - Tailboom Attach Fitting	2-89
2-37	Damage Limits - Bearing Hanger Support Fitting	2-90

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
2-38	Damage Limits - Intermediate Gearbox Support Installation	2-91
2-39	Damage Limits - Tail Rotor Drive Support Fitting	2-92
2-40	Vertical Fin Honeycomb Panels Damage	2-96
2-41	Edge Repair on Vertical Fin	2-100
2-42	Tailboom Longerons	2-101
2-43	Longeron Repair	2-102
2-43.1	Longeron Material Chart	2-104
2-44	Damage Skin, Frame, and Bulkhead Repair	2-104.1
2-45	Repair - Damaged Ribs - Bulkhead	2-105
2-46	Repair - Bulkhead Flanged Member	2-106
2-46.1	Tailboom Structural Material	2-106.1
2-47	Repair - Bulkhead "T" Cap - Extensive Damage	2-107
2-48	Injection Tape Fastener (Insert) in Vertical Fin Panel	2-111
2-48.1	Vertical Fin Ballast Weight Panel	2-112.2
2-49	Sheet Metal Panels and Skin	2-115
2-50	P E Fairing - Cowling for Pylon, Transmission, Engine, and Tailpipe	2-123
2-51	M Fairing and Cowling - Pylon, Transmission, Engine and IR Suppressor	2-126
2-52	IR Suppressor Cowling Installation	2-132
2-53	Firewalls and Driveshaft Fireshield Installation	2-139
2-54	Forward Engine Firewall Assembly (Prior to Incorporation of MWO 55-1520-236-50-12)	2-142
2-54.1	E M Forward Engine Firewall Assembly (After Incorporation of MWO 55-1520-236-50-12)	2-144.3
2-55	Aft Engine Firewall and Cowl Support	2-146
2-56	Tail Rotor Driveshaft Fireshield Assembly	2-152
2-57	Engine Air Induction Baffle Installation (Prior to Incorporation of MWO 55-1520-236-50-12)	2-154
2-57.1	E N Centrisep Particle Separator Engine Air Induction Baffle Installation (After Incorporation of MWO 55-1520-236-50-12)	2-154.1
2-58	Engine Air Induction Baffle Assembly (Prior to Incorporation of MWO 55-1520-236-50-12)	2-155
2-58.1	E N Centrisep Particle Separator Engine Air Induction Baffle Assembly (After Incorporation of MWO 55-1520-236-50-12)	2-158.1
2-59	Pilot Door - Installation	2-161
2-60	Gunner Door - Installation	2-164
2-61	Pilot Door - Assembly	2-167
2-62	Gunner Door - Assembly	2-169
2-63	Gunner Door Latch Assembly	2-170
2-64	Canopy Window and Windshield - Installation	2-176
2-65	Canopy Frame - Installation	2-178
2-66	Pilot Seat - Installation	2-179
2-67	Gunner Seat - Installation	2-180
2-68	Pilot Seat - Assembly	2-183
2-69	Engine Armor - Installation	2-188
2-70	Soundproofing Blanket - Installation	2-190.1
2-70.1	Wire Strike Protection System	2-190.2
2-70.2	Damage Limits - Wire Strike Deflector	2-191
2-71	Engine Mount Installation	2-192
2-72	Damage Limits - Aft Engine Mount Assembly (Tripod)	2-196
2-73	Damage Limits - Fittings for Aft Engine Mount (Tripod)	2-199
2-74	Aft Engine Mount (Tripod) Assembly	2-200
2-75	Damage Limits - Engine Mount Pillow Blocks (Left and Right)	2-202
2-76	Diagonal Brace Tube - Installation	2-204
2-77	Pylon Support - Installation	2-206
2-77.1	Pylon Mount Bolt Inspection Criteria	2-206.1

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
2-78	Access Hole for Damper to Damper Support Fitting Mount Bolts	2-209
2-79	Fifth Mount and Fifth Mount Support Fitting – Installation	2-210
2-79.1	Bushing and Bearing Tool Kit LT-40	2-212.2
2-79.2	Fifth Mount Assembly	2-212.3
2-79.3	Fifth Mount Bushing and Bearing Removal	2-212.3
2-79.4	Fifth Mount Bushing and Bearing Installation	2-212.4
2-79.5	Fifth Mount Bush Staking	2-212.4
2-80	Damper – Internal Yielding Inspection	2-214
2-81	Transmission Damper – Assembly	2-215
2-82	Damper Seal – Installation Tool	2-216
2-83	Damper Barrel Shim – Replacement	2-217
2-84	Damper Upper Shim – Replacement	2-218
2-85	Damper Lower Shim – Replacement	2-219
2-86	Hydraulic Fitting Supports – Installation	2-221
2-87	Damper Support Fitting – Elongated Holes	2-223
2-88	Damage Limits – Fifth Mount Support Fitting	2-224
2-89	Tow, Jack, and Mooring Fitting	2-226
2-90	Aft Section Assembly	2-230
2-91	Tail Boom Support Stand – Workaid	2-231
2-92	Tailboom Installation	2-232
2-92.1	Tailboom Installation	2-232.1
2-93	Tailboom and Elevator Skins	2-234
2-94	Tailboom and Synchronized Elevator – Structure	2-237
2-95	Tailskid – Installation	2-240
2-96	Aft Ballast – Installation	2-242
2-97	Synchronized Elevators – Installation	2-244
2-98	Wing Assembly – Installation	2-246
2-99	Wing Bushings – Limits Chart	2-250
2-100	Wing Skin Repair (External Hole)	2-251
2-101	Wing Skin Repair (External Crack)	2-252
2-102	Wing Skin Repair (Close to Frame, Spar, or Ribs)	2-253
2-103	Wing Skins, Fairings, Covers, Doors	2-254
2-104	Wing Fairing Repair (Leading – Trailing Edge)	2-256
2-105	Deleted	
3-1	Landing Gear and Support Installation	3-2
3-1.1	Crosstube Shim Fabrication	3-4.1
3-2	Crosstube – Deflection Inspection	3-5
3-3	Damage Limits – Crosstubes	3-6
3-4	Skid Tube – Repairs	3-9
■ 3-4.1	Skid Shoes – Standard, Heavy Duty	3-10.2
3-5	Crosstube Fairing Assembly	3-12
3-6	Landing Gear Support Spacer Installation	3-15

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
3-7	Ground Handling Gear - Assembly	3-17
3-8	Ground Handling Gear Pump, P/N BU0953B - Assembly	3-19
3-9	Ground Handling Gear Pump, P/N HP9902-41-10	3-21
3-10	Work Air - Packing Nut Tool Removal/Installation - Fabrication Instructions	3-23
3-11	Ground Handling Wheels -Adjustment Dimensions	3-25
4-1	Power Plant installation -Right Sale.....	4-2
4-2	Power Plant Installion - Left Side	4-2.2
4-3	Engine Vibration Test Equipment Cabling Tiedown	4-4
4-3.1	Deleted	
4-4	Engine Installation	4-7
4-5	Engine Mount Fittings (Trunnions) installation	4-13
4-6	Damage Limits Aft Engine Mount Fittings (Trunnions) and Bearings	4-16
4-7	Particle Separator and FOD Screen Installation (Prior to Incorporation of MWO 55-1520-236-50-12)	4-19
4-7.1	E M Centrisep Particle Separator Installation (After Incorporation of MWO 55-1520-236-50-12)	4-22.2
4-8	Particle Separator-Air Flow Diagram (Prior to Incorporation of MWO 55-1520-236-50-12)	4-23
4-8.1	E M Centrisep Particle Separator Air Flow Diagram (After Incorporation of MWO 55-1520-236-50-12)	4-24.1
4-9	Particle Separator and FOD Screen Assemblies (Prior to Incorporation of MWO 55-1520-236-50-12)	4-26
4-10	Inlet Vane Reinforcement Doubler - Fabrication	4-30
4-10.1	E M Centrisep Particle Separator Repair/Replacement (After Incorporation of MWO 55-1520-236-50-12)	4-30.1
4-11	FOD (Foreign Object Damage) Screen Installation	4-34
4-12	P E Exhaust System Components	437
4-13	P E Engine Tailpipe Repair	4-38
4-14	Engine Deck and Firewall Sealing	4-40
4-15	P E Exhaust System Components with IR Suppression Installation	4-41
4-15.1	Hot Metal Plus Plume Suppressor.	4-44.10
4-15.2	Outer Body Half -Section	4-44.11
4-16	Repair Procedures - Infrared Suppression System	4-45
4-17	M Exhaust System Components with IR Suppression - Installation	4-47
4-17.1	M Suppressor Major Structural Elements	4-50
4-18	Engine Oil System Installation	4-50.1
4-18.1	ODDS Oil Seperator and Oil Filter Installation (MWO 1-1520-236-50-30)	4-50.3
4-19	Engine Oil System Schematic	4-54.3
4-19.1	Oil Seperator (Lubriclone) Assembly	4-54.4
4-19.2	Deleted	
4-19.3	Engine External Oil Filter	4-54.6
4-20	Oil Tank Installation	4-57

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
4-21	Engine Oil Cooler Installation	4-60
4-22	Oil Cooler Cleaning Schematic	4-61
4-23	Engine Oil Cooler Turbine Fan.... .	4-64
4-24	Oil Cooler Turbine Fan Assembly... .	4-66
4-25	Power Lever Control System installation	4-70
4-26	Engine idle stop installation	4-73
4-27	Droop Compensation Controls Installaion	4-75
4-28	Rigging Procedures- Droop Compensator Controls	4-79
4-29	Engine Shipping Container	4-81
4-30	Ignition Unit	4-83
4-31	Aft Engine Trunnion installation	4-84
4-32	Trunnion, Cambox, and Linear Actuator Installation	4-85
4-33	Power Turbine Tachometer Generator, Oil Pressure Transducer, Oil Pressure Switch, and Fuel Pressure Switch installation	4-86

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
4-34	Starter Generator and Gas Producer Tachometer Generator	4-87
4-35	installation -Engine Torque Transducer Hose	4-89
4-36	Installation - Fuel Drain and Bleed Lines	4-91
4-37	Installation -Starter Fuel Fitter and Oil Bypass Valve Hose	4-92
4-38	Installation -Bleed Air Tubing	4-93
4-39	Installation -Oil Hose	4-95
4-40	Installation- Heat Shield Tailpipe and Ejector	4-96
4-41	Electrical Cable Installation -Engine Left Side	4-97
4-42	Electrical Cable Installation -Engine Right Side	4-100
5-1	Main Rotor System	5-2
5-2	Main Rotor installation	5-4
5-3	Main Rotor System Torque Values	5-6
5-4	Tool Application -Grip Lock Installation on Pitch Horn	5-7
5-4.1	Barrel Jack installation	5-8
5-4.2	Barrel Jack Work Aid	5-8.1
5-5	Tool Application -Main Rotor Mast Nut Removal/Installation	5-8.2
5-6	Tool Application Alignment of Main rotor Hub and Blade	5-9
5-7	Damage Limits -Cone Set	5-11
5-8	Pitch Link Assembly Adjustments..	5-13
5-9	Pitch Link Assembly	5-14
5-10	Mail Rotor Hub end Blade Assembly	5-16
5-11	Work Aid for Main Rotor Blade Bolt Removal Fabrication Instructions (AVIM)	5-17
5-12	Work Aid Application Main Rotor Blade Retaining Bolt Removal	5-18
5-13	B540 Main Rotor Blade	5-23
5-14	B540 Main Rotor Blade Authorized Patch Area (AVIM)	5-25
5-15	B540 Main Rotor Blade TrimTab Installation	5-27
5-16	K747 Main Rotor Blade (Part Numbers K747-003-205, -209, -303)	5-30.1
5-16.1	K747 Main Rotor Blade (Part Numbers K747-003-309, -401,-403)	5-31
5-17	External Appearance Changes to K747-003-205/-309, -209/-401, and -303/-403 Blades Resulting from Improved Weight Retention Features	5-32
5-18	Internal Modification Incorporated in K747-003-205/-309, -209/-401, and -303/-403 Blades for improved Weight Retention	5-33
5-19	Damage Limits- Root Fittings (K747 Blade)	5-36.2
5-19.1	Damage Limits -Root Fittings- Part Number K747-083-1 (K747 Blade)	5-37
5-20	Damage Limits -Drag Strut (P/N K747-072-1) (K747 Blade)	5-38
5-20.1	Damage Limits - Drag Strut - Part Number K747-082-1 (K747 Blade)	5-38.1
5-21	Inspection of K747-003-205/-309, -209/-401, -303/-403 Blades for Loss of Blade Weight Retention Integrity	5-39
5-22	Proximity Limits for Patches-K747 Main Rotor Blades	5-40
5-23	Balance Adjustment for Patches (K747 Blade)	5-43
5-24	Root Fitting Assembly (K747-205, -209, -303 Blades)	5-52
5-24.1	Root Fitting Assembly (-309, -401, -403 Blades)	5-52.1
5-24.2	Drag Stut Assembly (-309, -401, -403 Blades)	5-52.3
5-25	Application of Skin Patch (K47 Blade)	5-54
5-26	Curing Patch with Blade Repair Fixture (K747 Blade)	5-56
5-27	Installation of Plug Patch (K747 Blade)	5-60

LIST OF ILLUSTRATIONS (CONT)

NUMBER	TITLE	PAGE
5-28	Typical Double Plug Patch Repair (K747 Blade)	5-67
5-28.1	Application of Trailing Edge Doubler Patch (K747 Blade)	5-68
5-28.2	Spline Repair (K747 Blade)	5-71
5-28.3	Rebonding Delaminated Leading Edge Erosion Guard (K747 Blade)	5-72.1
5-28.4	Typical Repair of Fluorocarbon Erosion Guard Nicks and Cuts Using Kit, P/N 747-207	5-72.3
5-28.5	Application of Leading Edge Erosion Guard Patch (K747 Blade)	5-72.5
5-28.6	Placement of Erosion Guard Replacement Part (Kit, P/N K747-206-1) Method for Determining Current Boot Material and Thickness(K747 Blade Series)	5-72.7
5-28.7	K747 Blade Uralite Repair	5-72.10
5-28.8	Application of Vacuum Bagging Materials and Placement of Erosion Guard	5-72.11
5-28.9	Repair Parts and Specimen Orientation (Kit, P/N 747-206),	5-72.15
5-28.10	Vacuum Begging for Installation of Erosion Guard Repair Kit, P/N K747-206	5-72.18
5-28.11	Improvised Mold for Casting a Small Section of Leading Edge Filler	5-72.21
5-28.12	Repair, Parts Orientation Use for Removal and Installation of stainless Steel Erosion Guard - K747-003-303/-403 and -303/-403 Field Modified Blades	5-72.23
5-28.13	Preparation of K747-003-303/-403 Blade for Application of Sealant	5-72.24
5-28.14	Application of Sealant to Stainless Steel Guard for K747-003-303/-403 Blade	5-72.26
5-28.15	Stainless Steel Erosion Guard Holding Fixture	5-72.27
5-28.16	Masking for Paint Touch-Up After Installation of Kit K747-206	5-72.31
5-29	Main Rotor Hub Yoke Extension and Grip Assembly	5-72.35
5-30	Main Rotor Hub Yoke and Trunnion.	5-74
5-31	Main Rotor Bearing Wear Patterns	5-77
5-32	Damage Limits - Main Rotor Hub Yoke Extension	5-78
5-33	Damage Limits - Main Rotor Hub Bolt Holes	5-79
5-34	Damage Limits - Main Rotor Hub Yoke	5-81
5-35	Damage Limits - Main Rotor Hub Grip	5-82
5-36	Damage Limits -Main Rotor Hub Strap Fitting	5-83
5-37	Damage Limits -Pitch Horn Bushing.	5-85
5-38	Damage Limits - Main Rotor Hub Pitch Horn 209-010-109-5 (Prior to Accomplishment of MWO 55-1520-244-50-6)	5-86
5-38.1	Damage Limits - Main Rotor Hub Pitch Horn 209-010-109-109 (After Accomplishment of MWO 55-1520-244-50-6 and MWO 55-1520-244-50-9)	5-86.1
5-39	Damage Limits -Main Rotor Drag Brace	5-87
5-40	Damage Limits - Main Rotor Hub Trunnion	5-88
5-40.1	Damage Limits -Hub Moment Spring Plate	5-88.1
5-40.2	Damage Limits - Hub Moment Spring Strap	5-88.2
5-41	Damage Limits - Main Rotor Hub Elastomeric Bearing	5-89
5-42	Main Rotor Hub Yoke Chafing Pad Installation Dimensions	5-90
5-42.1	Main Rotor Hub Yoke Buffer installation-Dimensions	5-90
5-43	Tool Application -Bearing Removal From Housing	5-90.2
5-44	Tool Application -Bearing Removal From Grip	5-92
5-45	Tool Application - Bearing and Seal Installation in Grip	5-93
5-46	Tool Application -Main Rotor Hub Trunnion Centering	5-96
5-47	Tool Application -Grip Spacing Adjustment	5-97
5-48	Main Rotor Hub Grip Dust Seal to Radius Ring Dimension	5-99
5-49	Rotor Balancing Kit P/N 7A050	5-101
5-50	Tool Application -Main Rotor Hub Balancing	5-102
5-51	Main Rotor Controls installation	5-104
5-52	Tool Application - Spline Plate Wear Measurement	5-107
5-52.1	Hub Moment Spring Support Assembly - Installation (MWO 55-1520-244-50-3 Incorporated)	5-108

LIST OF ILLUSTRATIONS (CONT)

NUMBER	TITLE	PAGE
5-53	Collective Lever Trust Washer Wear Limits	5-108.1
5-53.1	Rod End Clevis Movement	5-108.4
5-53.2	Rod End Bearing	5-108.5
5-54	Damage Limits - Pitch Link Assembly (Prior to Accomplishment of MWO 55-1520-244-50-9	5-109
5-54.1	Damage Limits - Pitch Link Assembly 209-010-520-103 (After Accomplishment of MWO 55-1520-244-50-9)	5-110.1
5-55	Damage Limits- Spline Plate....	5-110.2
5-56	Damage Limits - Collective Lever	5-111
5-57	Damage Limits -Collective Lever Idle Link	5-112
5-58	Collective Lever Idle Link Assembly	5-113
5-59	Damage Limits - Swashplate Anti-Drive Link	5-114
5-60	Swashplate Anti-Drive Link	5-115
5-61	Damage Limits - Swashplate Anti-Drive Assembly Bellcrank	5-116
5-62	Damage Limits - Swashplate Anti-Drive Assembly Support	5-117
5-63	Swashplate Anti-Drive Assembly....	5-118
5-63.1	Damage Limits-Hub Moment Spring Support Set, P/N 209-011-212-101 (MWO 55-1520-244-50-3 Incorporated)	5-120.2
5-63.2	Damage Limits -Hub Moment Spring	5-120.3
5-64	Scissor and Sleeve Assembly	5-121
5-65	Damage Limits - Hub, Sleeve, Scissors and Link.	5-124
5-65.1	installation of Shims	5-130.1
5-65.2	Collet Work Aid.	5-130.1
5-66	Swashplate and Support Assembly	5-132
5-67	Damage Limits - Swashplate and Support Assembly	5-135
5-68	Tail Rotor installation	5-139
5-69	Tail Rotor Hub and Blade Assembly	5-144
5-70	Tool Application - Tail Rotor Hub and Blade Assembly Balancing	5-146
5-71	Tail Rotor Hub Assembly	5-150
5-72	Damage Limits -Tail Rotor Hub Yoke	5-151
5-73	Damage Limits -Tail Rotor Hub Trunnion Set	5-152
5-74	Bearing Staking Tool P/N T101577	5-153
5-75	Tool Application- Bearing installation (Staking) in Tail Rotor Yoke	5-155
5-76	Tail Rotor Controls - Crosshead, Weights, Links and Control Tube	5-156
5-77	Damage Limits-Tail Rotor Control Crosshead	5-160
5-78	Damage Limits -Tail Rotor Control Counterweight Bellcrank	5-161
5-79	Damage Limits - Tail Rotor Controls Pitch Link	5-162
5-80	Damage Limits -Tail Rotor Control Counterweight Link	5-163
5-81	Damage Limits -Tail Rotor Control Counterweight Supped	5-164
5-82	Damage Limits -Tail Rotor Control Tube	5-165
5-83	Damage Limits - Link Assembly	5-166
5-84	Damage Limits - Idler	5-167
5-85	Damage limits-Lever	5-168

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
5-86	Damage Limits -Tail Rotor Retention Nut	5-169
5-87	Tail Rotor Blade Pitch Horn Installation	5-171
5-88	Tail Rotor Blade Assembly	5-172
5-89	Tail Rotor Blade Station Diagram and Scratch -Type Damage Area Locations	5-173
5-90	Tail Rotor Blade -Area Authorized for Patch -Type Repair	5-174
5-91	Tail Rotor Blade Butt Area Repair	5-176
5-92	Damage Limits - Tail Rotor Blade Pitch Horn	5-178
5-93	Main Rotor Tracking Chart	5-182
5-94	Vertical Vibration Correction Chart..	5-183
5-95	Vertical and Lateral Vibration Chart for K747 Rotor Blades	5-185
5-96	Lateral Vibration Correction Chart for B-540 Rotor Blades	5-187
5-97	Tracking Main Rotor	5-188
5-98	Tracking Main Rotor	5-189
5-99	Vibrex 4591 System Components and Carrying Case	5-191
5-100	A Main Rotor Balance Chart	5-194
5-101	Reading a Main Rotor Balance Chart	5-195
5-102	Reading a Main Rotor Balance Chart with an Incorrect "Clock Angle"	5-196
5-103	Reading the Tail - Rotor Charts	5-198
5-104	Magnetic Pickup and Double Interrupter Installation	5-200
5-105	Magnetic Pickup/Interrupter Installation	5-201
5-106	Magnetic Pickup Cable installation	5-202
5-107	Balancer Installation	5-203
5-108	Lateral Accelerometer Installation.	5-204

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
5-109	Vertical Accelerometer Installation	5-205
5-110	Deleted	
5-111	Tip Targets Installation	5-208
5-112	Reflective Target Installation	5-209
5-113	Reading the Main Rotor Chart	5-210
5-114	Reading the Main Rotor Tracking Chart	5-212
5-115	Accelerometer Cable Installation (Typical)	5-214
5-116	Tracking Tail Rotor	5-215
5-117	Balancing Tail Rotor	5-217
6-1	Drive Train (Typical)	6-4
6-2	Gearbox Oil Contamination – Description and Corrective Action	6-5
6-2.1	Typical Oil System Debris at 6X Magnification	6-6.3
6-2.2	Deleted	
6-3	Main Driveshaft Installation	6-8
6-4	Tool Application – Transmission Positioning Jacks P/N T101440 (T35)	6-10
6-5	Tool Application – Engine to Transmission Driveshaft Alignment P/N T101419 (T35)	6-11
6-6	Main Driveshaft Assembly	6-13
6-7	Inspection and Lubrication of Main Driveshaft	6-14.1
6-7.1	Main Driveshaft Internal Corrosion Area	6-17
6-8	Coupling Wear Criteria for Driveshaft	6-18
6-9	Damage Limits – Main Driveshaft Assembly	6-20
6-9.1	Main Driveshaft	6-20.1
6-9.2	Main Driveshaft Installation and Removal Tool	6-20.2
6-9.3	Work Aid Tool Installed on Main Driveshaft	6-20.2
6-9.4	Main Driveshaft Damage Limits	6-20.3
6-10	Transmission Quills	6-25
6-11	Transmission Installation	6-27
6-12	Transmission Buildup	6-29
6-13	P Transducer Bracket Installation	6-32
6-14	Damage Limits – Transmission	6-34
6-15	Transmission Shipping Covers, Caps, and Plugs	6-41
6-15.1	Lift Link Attaching Point	6-44.1
6-16	Main Input Quill Assembly	6-45
6-16.1	Transmission Input Quill Work Aid (Sheet 1 of 2)	6-46.1
6-16.2	Transmission Input Quill Work Aid (Sheet 2 of 2)	6-46.2
6-16.3	Input Drive Quill Wear Sleeve Replacement	6-46.3
6-17	Work Aid – Main Input Drive Quill Installation	6-47
6-18	Damage Limits – Tail Rotor Drive Quill	6-50
6-19	Tail Rotor Drive Quill Assembly	6-53
6-20	Hydraulic Pump and Tachometer Drive Quill Assembly	6-56
6-21	Fan Drive Quill Assembly	6-58
6-22	Work Aid – Quill Installation	6-59
6-23	E M Alternator Drive Quill Assembly	6-62
6-24	Main Rotor Mast Assembly	6-64
6-24.1	Inspection of Buffers and Plates	6-65
6-24.2	Workaid for Mast Buffer	6-66
6-25	Damage Limits – Main Rotor Mast Assembly	6-66.1
6-26	Deformation Limits – Main Rotor Mast	6-68
6-27	Damage Limits – Main Rotor Mast Bearing and Mast Bearing Retaining Plate	6-69
6-28	Transmission Top Case Dimension Check	6-73
6-29	Tail Rotor Driveshaft Installation	6-76
6-30	Tail Rotor Driveshaft Inspection Diagram	6-77
6-31	Tail Rotor Driveshaft Hanger Assembly	6-81

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
6-32	Coupling Teeth Wear Patterns	6-82
6-33	Work Aid-Driveshaft Hanger Support Alignment	6-85
6-34	Intermediate Gearbox Installation.	6-87
6-35	Intermediate Gearbox Quill, Seals, and Couplings (Typical)	6-88
6-35.1	Intermediate and Tail Rotor Gearbox Troubleshooting Chart	6-90.2
6-36	Damage Limits - Intermediate Gearbox	6-91
6-37	Oil Filler Cap Assembly	6-99
6-38	Tail Rotor Drive Gearbox Installation	6-103
6-39	Tail Rotor Drive Gearbox Assembly.	6-105
6-40	Tail Rotor Drive Gearbox Input Quill	6-106
6-41	Damage Limits - Tail Rotor Drive Gearbox	6-108
6-42	Roller Bearing Wear Patterns	6-115
6-43	Tail Rotor Drive Gearbox Gear Patterns	6-116
6-44	Tool Application- Removal/Installation of Tail Rotor Drive Gearbox Input Quill Retainer . Bolt	6-119
6-45	Tool Application- Removal/installation of Tail Rotor Drive Gearbox Input Quill Retainer Nut	6-120
6-45.1	Driveshaft/Spherical Couplings.	6-120.2
6-45.2	Coupling inspection	6-120.2
6-46	Transmission Oil System Schematic (Typical)	6-126
6-47	Transmission Oil System Installation	6-127
6-48	Transmission Oil Pump	6-129
6-49	Transmission Oil Pump - Test Setup	6-131
6-50	Transmission Oil Cooler Installation	6-132
6-50.1	Oil Cooler Cleaning Schematic	6-132.2
6-51	Oil Cooler Automatic Emergency Bypass Valve Assembly	6-135
6-52	Damage Limits - Inlet Fitting	6-137
6-53	Damage Limits - Return Bypass Fitting	6-138
6-54	Damage Limits - Inlet Bypass Piston	6-139
6-55	Damage Limits - Piston	6-140

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
6-56	Damage Limits – Nozzles	6-141
6-57	Damage Limits – Sleeve	6-142
6-58	Damage Limits – Universal Fitting Bolt and Elbow	6-143
6-59	Damage Limits – Housing Assembly	6-144
6-60	Damage Limits – Plunger	6-146
6-61	Damage Limits – Elbow Fitting	6-147
6-62	Fittings – Repair	6-148
6-63	Nozzles – Repair	6-149
6-64	Plunger – Repair	6-149
6-65	Work Aid Application – Plunger and Piston	6-150
6-66	Oil Cooler Automatic Emergency Bypass Valve – Bench Test Schematic	6-151
6-67	Transmission External Oil Filter Installation (Typical)	6-153
6-67.1	Transmission External Oil Filter Installation (After Incorporation of MWO 1-1520-236-50-30)	6-154.3
6-67.2	Transmission External Oil Filter (After Incorporation of MWO 1-1520-236-50-30)	6-154.4
6-68	Transmission Oil Filter (Primary) Assembly	6-155
6-69	Transmission Oil Manifold Installation	6-158
6-70	Transmission Oil Pressure Relief Valve Assembly	6-159
7-1	P Hydraulic System	7-3
7-2	P Emergency (Electric Motor Driven) Hydraulic System	7-8
7-3	Dual Hydraulic Servo Cylinders Installation	7-9
7-4	Hydraulic Reservoirs	7-28
7-5	P Hydraulic Reservoir – Emergency System	7-29
7-6	Hydraulic Reservoir Assembly	7-31
7-7	Emergency Electric Motor Driven Hydraulic Pump Installation	7-37
7-8	Filter Element Installation	7-41
7-9	Non-Cleanable Filter Elements	7-42
7-10	P Accumulator and Lockout Valve Installation	7-43
7-11	Work Aid for Dual Hydraulic Cylinder Removal and Installation	7-46
7-12	Dual Hydraulic Cylinder	7-47
7-13	Tool Application – Cylinder Assembly Torque Fixture, Part Numbers T41000310-1 and T100619-2	7-49
7-14	Damage Limits for Hydraulic Cylinder Bearing Housing	7-52
7-15	Dual Hydraulic Cylinder Assembly (Typical)	7-53
7-16	Flight Control Hydraulic Cylinder and Servo Actuator Valve	7-55
7-17	P Dual Hydraulic Cylinder Valve Connections	7-59
7-18	Dual Hydraulic Cylinders to Swashplate and Collective Lever Installation	7-61
7-19	Dual Hydraulic Cylinder Servo Valve Installation	7-62
7-20	(SCAS) Servo Actuator Assembly	7-63
7-21	Tail Rotor Control Cylinder and Support Installation	7-66
7-22	Tail Rotor Control Cylinder and Support Assembly	7-67
7-22.1	Hydraulic Servocylinder, Part No. 1660 Series (Typical), Exploded View	7-68.4

LIST OF ILLUSTRATIONS (CONT)

NUMBER	TITLE	PAGE
7-22.2	Hydraulic Servocylinder, Part No. 1660 Series (Typical), Exploded View	7-68.6
7-23	Solenoid Valve P/N 204-076-504-3 Installation	7-73
7-24	Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63 Assembly	7-75
7-25	Functional Test Setup for Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63	7-80
7-26	Flow Diagram for Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63 .	7-81
7-27	Pressure Drop Test Setup for Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63	7-81
7-28	Solenoid Valves (SCAS System) – Installation	7-84
7-29	P Solenoid Valve P/N 7U7464 Installation	7-92
7-30	P Solenoid Valve P/N 7U7464 Assembly	7-95
7-31	P Functional Test Setup for Solenoid Valve P/N 7U7464	7-98
7-32	P Flow Diagram for Solenoid Valve P/N 7U7464	7-98
7-33	P Pressure Drop Test Setup for Solenoid Valve P/N 7U7464	7-99
7-34	Servo Actuator (Electrohydraulic) – Wing Pylon Armament	7-102
7-35	Work Aid for Wing Pylon Armament Servo Actuator Disassembly Assembly	7-104
7-36	Work Aid for Seal Installation on Wing Pylon Armament Servo Actuator	7-105
7-37	Sheet for Recording Test Data for Wing Pylon Armament Servo Actuator	7-107
7-38	Schematic Diagram Wing Pylon Armament Servo Actuator Connections for Bench Test .	7-108
7-39	Tool Application Wing Pylon Armament Servo Actuator Test Fixture	7-109
7-40	E M Hydraulic System	7-111
7-41	E M Emergency (Electric) Motor Driven Hydraulic System	7-117
7-42	E M Solenoid Valves P/N 204-076-504-3 Installation	7-144
7-43	E M Solenoid Valves (SCAS System) – Installation	7-149
8-1	P E Instrument System Equipment Location	8-2
8-2	Pitot – Static System	8-26.3
8-2.1	Connection for Pitot Leak Check (Typical)	8-26.4
8-2.2	Connection for Static Leak Check (Typical)	8-26.5
8-3	Test Circuit Setup for Fuel Tank Unit Capacitance and Resistance Tests	8-42
8-4	Test Circuit Setup for Fuel Quantity Indicator Bench Test	8-43
8-5	Circuit Arrangement and Adapter Cable for Fuel Quantity Adjustment Procedures on Installed System	8-44
8-5.1	Fuel Quantity Test Set P/N PSD60-1AF	8-44.4
8-5.2	Fuel Quantity "T" Cable P/N PSDAF-537	8-44.5
8-5.3	Fuel Quantity Calibration Worksheet	8-44.6
8-6	Volt-Ammeter Test Set-up	8-49
9-1	P Simplified Electrical Bus Wiring Schematic	9-2
9-2	E M Simplified Electrical Bus Wiring Schematic	9-3
9-3	P Electrical Equipment Location Forward Section	9-4
9-4	P Electrical Equipment Location Pilot Section	9-6

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
9-5	P Electrical Equipment Location Gunner Section	9 - 8
9-6	E Electrical Equipment Location Aft Section	9-10
9-7	E Electrical Equipment Location Forward Section	9-13
9-8	E Electrical Equipment Location Pilot Section	9-13
9-9	E Electrical Equipment Location Gunner Section	9-18
9-10	E Electrical Equipment Location Aft Section	9-20
9-11	Environmental Connector Test Adapter	9-23
9-12	P Standby Inverter Adjustment	9-66
9-13	P Pilot Caution Panel	9-80.1
9-14	E Pilot Caution Panel	9-80.1
9-14.1	Deleted	
9-15	M Pilot Caution Panel	9-81
9-15.1	Deleted	
9-16	P Gunner Caution Panel	9-82.1
9-17	E M Gunner Caution Panel	9-82.1
9-17.1	Deleted	
9-17.2	Pilots Caution Panel Assembly	9-88.7
9-17.3	Pilots Caution Panel Subassembly	9-88.8
9-17.4	Housing Subassembly	9-88.11
9-17.5	Cover Assembly	9-88.11
9-17.6	Indicating Light Circuit Card	9-88.12
9-17.7	Contact Assembly	9-88.16
9-17.8	Polarizing Keys Location	9-88.17
9-17.9	Removal of Finish for Electrical Bonding	9-88.19

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
9-17.10	Position of Contacts in Latch Base	9-88.23
9-17.11	Gunners Caution Panel Schematic Diagram	9-88.25
9-17.12	Gunners Caution Panel	9-88.32
9-17.13	Gunners Caution Panel Wiring Connections	9-88.35
9-18	Bench Test Set-Up for RPM Limits Warning Detector	9-93
9-19	P Armament Equipment Location	9-128
9-20	P TOW Missile Launcher Positions	9-131
9-21	P Wing Stores Armament Test Panel	9-139
9-22	P Wing Stores Armament Test Panel Schematic	9-140
9-23	E Armament Equipment Location	9-155
9-24	E TOW Missile Launcher Positions	9-164
9-25	E DU Digital Display Test	9-173
9-26	E LRU Fault Identification and Location Test	9-173
9-27	E XM18 Minigun Circuitry Test Panel	9-175
9-28	E Wing Stores Circuitry Test Panel	9-180
9-29	M TOW Missile Launcher Positions	9-195
9-30	M DU Digital Display Test	9-204
9-31	M LRU Fault Identification and Location Test	9-204
9-32	M XM18 Minigun Circuitry Test Panel	9-206
9-33	M Wing Stores Circuitry Test Panel	9-211
10-1	Fuel Systems Schematic	10-3
10-2	Fuel System	10-4
10-3	Fuel Shutoff Valve	10-9
10-4	Fuel Boost Pump	10-12.1
10-4.1	Fuel Boost Pump Cartridge	10-12.2
10-4.2	Work Aid for Fuel Pump Cartridge Removal	10-12.3
10-5	Collapsing Forward Fuel Cell	10-22
10-6	Installed Forward Fuel Cell.... .	10-24
10-7	Collapsing Aft Fuel Cell	10-26
11-1	Collective Controls	11-4
11-2	Pilot Collective Stick Installation	11-8
11-3	Pilot Collective Stick Assembly.	11-9
11-4	Bearing Installation- Pilot Throttle Grip	11-14
11-5	Friction Lining Repair	11-16
11-6	Throttle Lever Bearing Installation	11-17
11-7	Collective Friction Tube Repairs.	11-18
11-8	Pilot Collective Stick Adjustments.	11-20
11-9	Gunner Collective Stick Installation	11-22
11-10	Gunner Collective Stick-Assembly	11-25
11-11	Gunner Collective Stick Adjustment	11-27
11-12	Force-And-Aft Cyclic Controls	11-30
11-13	Lateral Cyclic Controls	11-32
11-14	Work Aid for Rigging Swash plate	11-34

LIST OF ILLUSTRATIONS (CONT)

NUMBER	TITLE	PAGE
11-15	Swashplate Rigging Dimensions	11-35
11-16	Pilot Cyclic Stick Installation	11-36
11-17	Pilot Cyclic Stick Assembly.. . . .	11-40
11-18	Collar and Bushing Installation.	11-42
11-19	Pilot Cyclic Stick Friction Adjustment	11-44
11-20	Gunner Cyclic Stick Installation	11-46
11-21	Gunner Cyclic Stick Assembly.	11-48
11-22	Fore-And-Aft Cyclic Jackshaft Installation.	11-51
11-23	Force Gradient Assembly	11-56.1
11-24	Tail Rotor Controls	11-57
11-25	Tail Rotor Pedal Installation.	11-62
11-26	P Stability and Control Augmentation System (SCAS)	11-70
11-27	E M Stability and Control Augmentation System (SCAS)	11-71
11-27.1	SCAS Transducer Calibration	11-74.2
11-28	Elevator Control System	11-76
11-29	Elevator Installation	11-79
11-30	Damage Limits- Fixed Length Flight Control Tubes and Links (Typical).	11-82
11-31	Control System Linkage Installation	11-85
11-32	Damage Limits- Anti-Torque System	11-95
11-33	Damage Limits- Elevator Control System	11-102
11-34	Damage Limits- Collective Control System.. . . .	11-104
11-35	Damage Limits- Cyclic Control System	11-110
11-36	Flight Control System Bearings	11-118
11-37	Lateral Cyclic and Collective Controls Power Cylinder Support Installation	11-119
11-38	Fore-And-Aft Cyclic Controls Power Cylinder Support Installation.	11-120
11-39	Damage Limits -Power Cylinder Supports.	11-121
12-1	Engine Fire Detection System	12-3
12-2	Low G Warning System	12-5
12-3	Low G Warning Assembly 8A10...	12-9
12-4	Accelerometer 8A11	12-10
12-5	Low G Warning Light/Switch 8DS25	12-12
12-6	Converter 8Ml	12-13
13-1	Environmental Control System	13-3
13-2	Environmental Control Unit.	13-5
13-3	Environmental Control System Schematic	13-7
13-4	Temperature Control Valve...	13-8
13-5	Temperature Control Valve Schematic	13-9
13-6	ECU Cooling Turbine	13-12
13-6.1	ECU Cooling Turbine Lubrication	13-12.1
13-7	Pressure Regulator and Shutoff Valve	13-14
13-8	Pressure Regulator and Shutoff Valve Schematic	13-16
13-9	Blower Impeller Assembly	13-18
13-10	Vent Air Control Valve-Installation	13-21
13-11	Vent Air Control Valve	13-22
13-12	Vent Air Control Valve Test Set-Up	13-24
13-13	Rain Removal Manifold	13-28
13-14	Rain Removal Thermal Switch-Installation	13-30
13-15	Rain Removal Nozzle and Cleared Air Pattern	13-31
13-16	Rain Removal Valve	13-34
13-17	Limits Chart -Air Distribution Valve	13-36
13-18	Tool Application -Teflon Lip Seal Installation	13-38
16-1	E M Turret Installation	16-4
16-2	Special Tools for Ejector Racks	16-12

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
16-3	Outboard Ejector Rack Installation	16-21
16-4	Ejector Rack Alignment	16-24
16-5	Outboard Ejector Rack Assembly	16-27
16-6	Inboard Ejector Rack Installation.	16-32
16-6.1	Contact Profusion Inside Breech	16-32.1
16-6.2	Wiring Harness Assembly	16-32.2
16-7	Inboard Ejector Rack Assembly	16-34
16-8	Wing Stores Pylon and Fairings	16-35
16-9	M AIM-1/EXL Laser Installation	16-37
17-1	Canopy Removal System	17-2
17-2	Damage Limits -Linear Shaped Charge Assembly	17-4
C-1	Inventory Item List	C-3
F-1	Wiring Identification Chart...	F-5
F-1.1	Symbols Chart	F-6
F-1.2	P Altimeter Vibrator System Wiring Diagram	F-45
F-2	P External Power System Wiring Diagram	F-47
F-3	P Starter System Wiring Diagram	F-49
F-4	P Ignition System Wiring Diagram	F-50
F-5	P Anticollision and Position Lights System Wiring Diagram	F-51
F-6	P Searchlight System Wiring Diagram	F-52
F-7	P Engine De-Ice System Wiring Diagram.	F-53
F-8	P Fuel Valve and Oil Valve System Wiring Diagram	F-54
F-9	P Fuel Boost System Wiring Diagram.	F-55
F-10	P Governor Control System Wiring System	F-56
F-11	P Idle Stop System Wiring Diagram	F-57
F-12	P Force Trim System Wiring Diagram	F-58
F-13	P Environmental Control System Wiring Diagram	F-59
F-14	P Pitot Heater System Wiring Diagram	F-60
F-15	P TOW Blower Cooling System Wiring Diagram	F-61
F-16	P Attitude Indicating System Wiring Diagram	F-63
F-17	P FUEL Quantity Indicating System Wiring Diagram	F-64
F-17.1	P Turn and Slip Indicating System Wiring Diagram	F-65
F-18	P Radio Blower Cooling System Wiring Diagram	F-65
F-18.1	P Armament Relay Location,	F-66
F-19	E AC Electrical Load Chart.	F-67
F-20	E Altimeter Vibrator System Wiring Diagram	F-83
F-21	E External Power System Wiring Diagram	F-85
F-22	E Starter System Wiring Diagram	F-87
F-23	E Searchlight System Wiring Diagram	F-89
F-24	E Engine De-Ice System Wiring Diagram	F-90
F-25	E Fuel Valve and Engine Oil Valve System Wiring Diagram	F-91
F-26	E Fuel Boost System Wiring Diagram	F-92
F-27	E Governor Control System Wiring Diagram	F-93
F-28	E Idle Stop System Wiring Diagram	F-94
F-29	E Force Trim System Wiring Diagram	F-95
F-30	E Environmental Control System Wiring Diagram	F-97
F-31	E Pitot Heater System Wiring Diagram	F-98
F-32	E TOW Blower Cooling System Wiring Diagram	F-99
F-33	E Radio Blower Cooling System Wiring Diagram	F-100
F-34	E Attitude Indicating System Wiring Diagram	F-101
F-35	E Fuel Quantity Indicating System Wiring Diagram	F-102
F-36	E Tachometer Indicating System Wiring Diagram.	F-103
F-36.1	E Centrisep Particle Separator Wiring Diagram (After Incorporation of MW055-1520-23650-12)	F-104

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
F-37	E Turn and Slip Indicating System Wiring Diagram	F-105
F-38	E Electrical Equipment Component Replacement Wiring Diagram	F-106
F-38.1	E Armament Relay Location	F-106.1
F-39	M AC Electrical Load Chart	F-108
F-40	M DC Electrical Load Chart	F-109
F-41	M Tachometer Indicating System	F-110
F-42	M Pressure Indicating Systems.	F-121
F-43	M Temperature Indicating Systems	F-131
F-44	M Attitude Indicating System (Equipment Location)	F-141
F-45	M Turn and Slip Indicating System	F-147
F-46	M Fuel Quantity Indicating System	F-151
F-47	M Altimeter Vibrator System.	F-160
F-48	M DC Generator Power System (Equipment Location)	F-167
F-49	M Battery System (Equipment Location)	F-177
F-50	M External Power Provisions	F-184
F-51	M DC Power Distribution and Interconnect Logic (Equipment Location)	F-189
F-52	M AC Power System (Equipment Location)	F-197
F-53	M Starter System	F-207
F-54	M Ignition System	F-213
F-55	M Interior Lights System (Equipment Location)	F-221
F-56	M Caution Lights System (Equipment Location)	F-235
F-57	M RPM Limit Warning System (Equipment Location)	F-259
F-58	M Position Lights System	F-269
F-59	M Anticollision Light System.	F-276
F-60	M Searchlight System	F-279
F-61	M Engine De-Ice System	F-284
F-62	M Fuel Valve and Engine Oil Bypass Valve Systems	F-292
F-63	M Fuel Boost System	F-300
F-64	M Governor Control System	F-307
F-65	M Idle Stop System	F-316
F-66	M Force Trim System	F-322
F-67	M Hydraulic Control System (Equipment Location)	F-331
F-68	M Environmental Control System	F-341
F-69	M Pitot Heater System	F-350
F-70	M TOW Blower Cooling System	F-354
F-71	M Radio Blower Cooling System	F-361
F-71.1	M Centrisep Particle Separator Wiring Diagram (After Incorporation of MWO 55-1520-236-50.12).	F-366.1
I F-71.2	M GPS Trimpack System	F-366.2
F-72	M Universal Turret Subsystem (Equipment Location)	F-367
F-73	M TOW Missile Armament Subsystem (Equipment Location)	F-383
F-74	M Fire Control System (Equipment Location)	F-399
F-75	M Wing Stores Amment Subsystem (Equipment Location)	F-413
I F-75.1	M AIM-1/EXL Laser Gunsight System (Equipment Location)	F-424.1
F-76	M Electrical Equipment Component Replacement	F-425
F-77	M Electrical Equipment Component Replacement (After MWO 55-1520-236-50-4)	F-466
F-78	MCN C-NITE Subsystem (Equipment Location)	F-469
F-79	MCN C-NITE Electrical Equipment Component Replacement	F-471
F-80	MCN FLIR Subsystem Jumper Cable Assembly 1ies	F-472
FO-1	P Hydraulic System Schematic	FO-1
FO-2	E M Hydraulic System Schematic	FO-2

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
FO-3	Balancer and Strobex Dscription	FO-3
FO-4	AC Electrical Load Chart	FO-4
FO-5	AC Eelectrical Load Chart	FO-5
FO-6	AC Electricd Load Chart.	FO-6
FO-7	AC Electricd Load Chart	FO-7
FO-8	DC Electrical Load Chart	FO-8
FO-9	DC Electrical Load Chart	FO-9
FO-10	DC Electrical Load Chart	FO-10
FO-11	DC Electricd Load Chart	FO-11
FO-12	DC Electricd Load Chart	FO-12
FO-13	DC Electrical Load Chart	FO-13
FO-14	DC Electrical Load Chart	FO-14
FO-15	DC Electrical Load Chart	FO-15
FO-16	DC Electrical Load Chart	FO-16
FO-17	Battery System	FO-17

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
FO-18	P Generator and DC Bus System	FO-18
FO-19	P AC Power Supply	FO-19
FO-20	P Interior Lights System	FO-20
FO-21	P Interior Lights System	FO-21
FO-21.1	P Interior Lights System	FO-21.1
FO-22	P Interior Lights System	FO-22
FO-22.1	P Interior Lights System	FO-22.1
FO-23	P Caution Lights System	FO-23
FO-24	P Caution Lights System	FO-24
FO-25	P RPM Limit Warning System	FO-25
FO-26	P Hydraulic Control System	FO-26
FO-27	P Armament Turret System	FO-27
FO-28	P Armament Turret System	FO-28
FO-29	P Armament Turret System	FO-29
FO-30	P Armament Wing Stores System	FO-30
FO-31	P Armament Wing Stores System	FO-31
FO-32	P Armament Wing Stores System	FO-32
FO-33	P Armament TOW Missile Wiring Diagram	FO-33
FO-34	P Armament TOW Missile Wiring Diagram	FO-34
FO-35	P Armament TOW Missile Wiring Diagram	FO-35
FO-36	P Armament TOW Missile Wiring Diagram	FO-36
FO-37	P Pressure Indicating System	FO-37
FO-38	P Tachometer Indicating Systems	FO-38
FO-39	P Temperature Indicating Systems	FO-39
FO-40	P RPM Limit Warning Test Set Schematic	FO-40
FO-41	E AC Electrical Load Chart	FO-41
FO-42	E DC Electrical Load Chart	FO-42
FO-43	E DC Electrical Load Chart	FO-43
FO-44	E Battery System	FO-44
FO-45	E DC Generator Power System	FO-45
FO-46	E DC Power Distribution and Interconnect Logic	FO-46
FO-47	E DC Power Distribution and Interconnect Logic	FO-47
FO-48	E AC Power System	FO-48
FO-49	E Ignition System	FO-49

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
FO-50	E Interior Lights System	FO-50
FO-50.1	E Interior Lights System	FO-50.1
FO-51	E Interior Lights System	FO-51
FO-51.1	E Interior Lights System	FO-51.1
FO-52	E Interior Lights System	FO-52
FO-53	E Caution Lights System	FO-53
FO-54	E Caution Lights System	FO-54
FO-54.1	E Caution Lights System (After Incorporation of MWO 1-1520-236-50-30)	FO-54.1
FO-54.2	E Caution Lights System (After Incorporation of MWO 1-1520-236-50-30)	FO-54.2
FO-54.3	E Caution Lights System (After Incorporation of MWO 1-1520-236-50-30)	FO-54.3
FO-54.4	E Caution Lights System (After Incorporation of MWO 1-1520-236-50-30)	FO-54.4
FO-55	E RPM Limit Warning System	FO-55
FO-56	E Anticollision and Position Lights System	FO-56
FO-57	E Hydraulic Control System	FO-57
FO-58	E Turret System	FO-58
FO-59	E Turret System	FO-59
FO-60	E Turret System	FO-60
FO-61	E Turret System	FO-61
FO-62	E Turret System	FO-62
FO-63	E Turret System	FO-63
FO-64	E Turret System	FO-64
FO-65	E Wing Stores System	FO-65
FO-66	E Wing Stores System	FO-66
FO-67	E Wing Stores System	FO-67
FO-68	E TOW Missile System	FO-68
FO-69	E TOW Missile System	FO-69
FO-70	E TOW Missile System	FO-70
FO-71	E TOW Missile System	FO-71
FO-72	E TOW Missile System	FO-72
FO-73	E TOW Missile System	FO-73
FO-74	E TOW Missile System	FO-74
FO-75	E TOW Missile System	FO-75
FO-76	E TOW Missile System	FO-76
FO-77	E TOW Missile System	FO-77

LIST OF ILLUSTRATIONS (CON'T)

NUMBER		TITLE	PAGE
FO-78	E	Pressure Indicating System	FO-78
FO-79	E	Temperature Indicating System	FO-79
FO-80	E	Electrical Equipment Component Replacement	FO-80
FO-81	E	Electrical Equipment Component Replacement	FO-81
FO-81.1	E	Electrical Equipment Component Replacement	FO-81.1
FO-82	E	Electrical Equipment Component Replacement	FO-82
FO-83	E	Electrical Equipment Component Replacement	FO-83
FO-84	E	Electrical Equipment Component Replacement	FO-84
FO-85	E	Electrical Equipment Component Replacement	FO-85
FO-86	E	Electrical Equipment Component Replacement	FO-86
FO-87	E	Electrical Equipment Component Replacement	FO-87
FO-88	E	Electrical Equipment Component Replacement	FO-88
FO-89	E	Electrical Equipment Component Replacement	FO-89
FO-90	E	Electrical Equipment Component Replacement	FO-90
FO-91	M	Pressure Indicating System	FO-91
FO-92	M	Temperature Indicating Systems	FO-92
FO-93	M	Attitude Indicating System	FO-93
FO-94	M	DC Generator Power System	FO-94
FO-95	M	Battery System	FO-95
FO-96	M	DC Power Distribution and Interconnect Logic	FO-96
FO-97	M	DC Power Distribution and Interconnect Logic	FO-97
FO-98	M	AC Power System	FO-98
FO-99	M	Ignition System	FO-99
FO-100	M	Interior Lights System	FO-100
FO-100.1	M	Interior Lights System	FO-100.1
FO-101	M	Interior Lights System	FO-101
FO-101.1	M	Interior Lights System	FO-101.1
FO-102	M	Interior Lights System	FO-102
FO-102.1	M	Interior Lights System	FO-102.1
FO-103	M	Interior Lights System	FO-103
FO-104	M	Caution Lights System	FO-104
FO-105	M	Caution Lights System	FO-105
FO-106	M	RPM Limit Warning System	FO-106
FO-107	M	RPM Limit Warning Test Set Schematic	FO-107
FO-108	M	Hydraulic Control System	FO-108
FO-109	M	Universal Turret Subsystem	FO-109
FO-110	M	Universal Turret Subsystem	FO-110

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
FO-111	M Universal Turret Subsystem	FO-111
FO-112	M Universal Turret Subsystem	FO-112
FO-113	M Universal Turret Subsystem	FO-113
FO-114	M Universal Turret Subsystem	FO-114
FO-115	M Universal Turret Subsystem	FO-115
FO-116	M Universal Turret Subsystem	FO-116
FO-117	M Universal Turret Subsystem	FO-117
FO-118	M Universal Turret Subsystem	FO-118
FO-119	M TOW Missile Armament Subsystem	FO-119
FO-120	M TOW Missile Armament Subsystem	FO-120
FO-121	M TOW Missile Armament Subsystem	FO-121
FO-122	M TOW Missile Armament Subsystem	FO-122
FO-123	M TOW Missile Armament Subsystem	FO-123
FO-124	M TOW Missile Armament Subsystem	FO-124
FO-125	M TOW Missile Armament Subsystem	FO-125
FO-126	M TOW Missile Armament Subsystem	FO-126
FO-127	M TOW Missile Armament Subsystem	FO-127
FO-128	M TOW Missile Armament Subsystem	FO-128
FO-129	M TOW Missile Armament Subsystem	FO-129
FO-130	M Fire Control System	FO-130
FO-131	M Fire Control System	FO-131
FO-132	M Fire Control System	FO-132
FO-133	M Fire Control System	FO-133
FO-134	M Wing Stores Armament Subsystem	FO-134
FO-135	M Wing Stores Armament Subsystem	FO-135
FO-136	M Wing Stores Armament Subsystem	FO-136
FO-137	M Electrical Equipment Component Replacement	FO-137
FO-138	M Electrical Equipment Component Replacement	FO-138
FO-139	M Electrical Equipment Component Replacement	FO-139
FO-140	M Electrical Equipment Component Replacement	FO-140
FO-141	M Electrical Equipment Component Replacement	FO-141
FO-142	M Electrical Equipment Component Replacement	FO-142
FO-143	M C N TOW Missile Armament Subsystem	FO-143
FO-144	M C N Fire Control System	FO-199
FO-145	E M Low G Warning System	FO-211
FO-146	M AIM-1/EXL Laser Gunsight System	FO-213
FO-147	M GPS Trimpack System	FO-215

LIST OF ILLUSTRATIONS (CON'T)

NUMBER	TITLE	PAGE
FO-18	P Generator and DC Bus System	FO-18
FO-19	P AC Power Supply	FO-19
FO-20	P Interior Lights System	FO-20
FO-21	P Interior Lights System	FO-21
FO-21.1	P Interior Lights System	FO-21.1
FO-22	P Interior Lights System	FO-22
FO-22.1	P Interior Lights System	FO-22.1
FO-23	P Caution Lights System	FO-23
FO-24	P Caution Lights System	FO-24
FO-25	P RPM Limit Warning System	FO-25
FO-26	P Hydraulic Control System	FO-26
FO-27	P Armament Turret System	FO-27
FO-28	P Armament Turret System	FO-28
FO-29	P Armament Turret System	FO-29
FO-30	P Armament Wing Stores System	FO-30
FO-31	P Armament Wing Stores System	FO-31
FO-32	P Armament Wing Stores System	FO-32
FO-33	P Armament TOW Missile Wiring Diagram	FO-33
FO-34	P Armament TOW Missile Wiring Diagram	FO-34
FO-35	P Armament TOW Missile Wiring Diagram	FO-35
FO-36	P Armament TOW Missile Wiring Diagram	FO-36
FO-37	P Pressure Indicating System	FO-37
FO-38	P Tachometer Indicating Systems	FO-38
FO-39	P Temperature Indicating Systems	FO-39
FO-40	P RPM Limit Warning Test Set Schematic	FO-40
FO-41	E AC Electrical Load Chart	FO-41
FO-42	E DC Electrical Load Chart	FO-42
FO-43	E DC Electrical Load Chart	FO-43
FO-44	E Battery System	FO-44
FO-45	E DC Generator Power System	FO-45
FO-46	E DC Power Distribution and Interconnect Logic	FO-46
FO-47	E DC Power Distribution and Interconnect Logic	FO-47
FO-48	E AC Power System	FO-28
FO-49	E Ignition System	FO-49
FO-50	E Interior Lights System	FO-50
FO-50.1	E Interior Lights System	FO-50.1
FO-51	E Interior Lights System	FO-51
FO-51.1	E Interior Lights System	FO-50.1
FO-52	E Interior Lights System	FO-52
FO-53	E Caution Lights System	FO-53
FO-54	E Caution Lights System	FO-54
FO-55	E RPM Limit Warning System	FO-55
FO-56	E Anticollision and Position Lights System	FO-56
FO-57	E Hydraulic Control System	FO-57
FO-58	E Turret System	FO-58
FO-59	E Turret System	FO-59
FO-60	E Turret System	FO-60
FO-61	E Turret System	FO-61
FO-62	E Turret System	FO-62
FO-63	E Turret System	FO-63
FO-64	E Turret System	FO-64

LIST OF ILLUSTRATIONS (CON'T)

NUMBER		TITLE	PAGE
FO-65	E	Wing Stores System	FO-65
FO-66	E	Wing Stores System	FO-66
FO-67	E	Wing Stores System	FO-67
FO-68	E	TOW Missile System	FO-68
FO-69	E	TOW Missile System	FO-69
FO-70	E	TOW Missile System	FO-70
FO-71	E	TOW Missile System	FO-71
FO-72	E	TOW Missile System	FO-72
FO-73	E	TOW Missile System	FO-73
FO-74	E	TOW Missile System	FO-74
FO-75	E	TOW Missile System	FO-75
FO-76	E	TOW Missile System	FO-76
FO-77	E	TOW Missile System	FO-77
FO-78	E	Pressure Indicating System	FO-78
FO-79	E	Temperature Indicating System	FO-79
FO-80	E	Electrical Equipment Component Replacement	FO-80
FO-81	E	Electrical Equipment Component Replacement	FO-81
FO-81.1	E	Electrical Equipment Component Replacement	FO-81.1
FO-82	E	Electrical Equipment Component Replacement	FO-82
FO-83	E	Electrical Equipment Component Replacement	FO-83
FO-84	E	Electrical Equipment Component Replacement	FO-84
FO-85	E	Electrical Equipment Component Replacement	FO-85
FO-86	E	Electrical Equipment Component Replacement	FO-86
FO-87	E	Electrical Equipment Component Replacement	FO-87
FO-88	E	Electrical Equipment Component Replacement	FO-88
FO-89	E	Electrical Equipment Component Replacement	FO-89
FO-90	E	Electrical Equipment Component Replacement	FO-90
FO-91	M	Pressure Indicating System	FO-91
FO-92	M	Temperature Indicating Systems	FO-92
FO-93	M	Attitude Indicating System	FO-93
FO-94	M	DC Generator Power System	FO-94
FO-95	M	Battery System	FO-95
FO-96	M	DC Power Distribution and Interconnect Logic	FO-96
FO-97	M	DC Power Distribution and Interconnect Logic	FO-97
FO-98	M	AC Power System	FO-98
FO-99	M	Ignition System	FO-99
FO-100	M	Interior Lights System	FO-100
FO-100.1	M	Interior Lights System	FO-100.1
FO-101	M	Interior Lights System	FO-101
FO-101.1	M	Interior Lights System	FO-101.1
FO-102	M	Interior Lights System	FO-102
FO-102.1	M	Interior Lights System	FO-102.1
FO-103	M	Interior Lights System	FO-103
FO-104	M	Caution Lights System	FO-104
FO-105	M	Caution Lights System	FO-105
FO-106	M	RPM Limit Warning System	FO-106
FO-107	M	RPM Limit Warning Test Set Schematic	FO-107
FO-108	M	Hydraulic Control System	FO-108
FO-109	M	Universal Turret Subsystem	FO-109
FO-110	M	Universal Turret Subsystem	FO-110
FO-111	M	Universal Turret Subsystem	FO-111

LIST OF TABLES

NUMBER	TITLE	PAGE
1-1	Engine Fuel Specifications	1-3
1-2	Approved Fuels	1-4
1-3	Consumable Maintenance Supplies and Materials	1-10.1
1-4	Special Tools and Test Equipment	1-19
1-5	Support Equipment	1-24.1
1-6	Root Mean Square/Abrasive Chart Equivalency	1-24.1
1-7	Deleted	
1-8	Deleted	
1-9	Deleted	
1-10	Deleted	
1-11	Adhesive Mix Ratio, Pot Life, and Cure Cycles	1-24.2
1-11.1	Mooring Hardware Chart.	1-54.1
1-12	Flight Safety Critical Aircraft Parts.	1-89
2-1	Main Beam Panels (Structural)	2-13
2-2	Structural Repair Materials	2-17
2-3	Forward Fuselage - Classification of Damage	2-26
2-4	Tailboom - Classification of Damage	2-69
2-5	Wing - Classification of Damage.	2-248
4-1	Repair Methods - IR Suppression System (AVIM)	4-43
4-1.1	IR Suppressor Damage and Repair Limits (Non Structural Area)	4-44.4
4-1.2	IR Suppressor Damage and Repair Limits (Major Structural Elements Only)	4-44.8
4-2	Troubleshooting Engine Oil System	4-51
4-2.1	Oil Debris Classification Chart	4-54.5
4-3	Dimension Tolerance - Turbine Fan	4-67
5-1	Difference Between Models	5-34
5-1.1	Classification of Damage - K747 Main Rotor Blades	5-45
5-1.2	Classification of Damage - K747 Main Rotor Blades	5-49
5-2	Plug Patch Data	5-58
5-3	Troubleshooting -Tail Rotor System	5-140
5-4	Troubleshooting the VIBREX4591 System with the VIBREX Tester, Model 11	5-218
6-1	Troubleshooting - Drive Train System	6-1
6-1.1	Oil Debris Classification Chart (Aircraft without ODDS)	6-6.2
6-1.2	Oil Debris Classification Chart (Aircraft with ODDS)	6-6.4
6-2	Gearbox Oil Debris Classification	6-90.1
6-3	Troubleshooting -Transmission Oil System	6-122
7-1	Maximum Allowable Leakage for Hydraulic System	7-11
7-2	P Emergency Hydraulic System Operational Stitching Sequence	7-15
7-3	P Troubleshooting of Hydraulic System	7-20
7-4	Torque Values for Fluid Connections	7-34
7-4.1	Inspection Criteria	7-68.3
7-4.2	Troubleshooting Chart	7-68.6
7-4.3	Leading Particulars (T/R Control Cylinder)	7-68.7
7-5	Leading Particulars for Solenoid Valve P/N 204-076-504-3 FSCM 94641 (1-U-1025-63)	7-71

LIST OF TABLES (CON'T)

 
NUMBER	TITLE	PAGE
7-6	Non-Destructive Test Requirements for Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63 (AVIM)	7-76
7-7	Diametrical Clearance Requirements for Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63 (AVIM)	7-77
7-8	Troubleshooting During Testing Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63 (AVIM)	7-79
7-9	P Non-Destructive Test Requirements for Solenoid Valve P/N 7U7464 (AVIM)	7-94
7-10	P Diametrical Clearance Requirements for Solenoid Valve P/N 7U7464 (AVIM)	7-95
7-11	Troubleshooting During Testing of Solenoid Valve P/N 7U7464 (AVIM)	7-97
7-12	E M Emergency Hydraulic System Operational Switching Sequence	7-122
7-13	E M Troubleshooting Hydraulic System	7-125
7-14	Leafing Particulars for Solenoid Valve P/N 204-076-504-3 FSCM 94641 P/N 1-U-1025-63.	7-142
8-1	Troubleshooting - Tachometer indicating System	8-8
8-2	Troubleshooting - Engine and Transmission Oil Temperature and Pressure indicating System	8-14
8-3	Troubleshooting -Turbine Gas Temperature indicating System	8-20
8-4	Troubleshooting - Torque Pressure Indicating System	8-22
8-4.1	Tolerance -(k Knots)	8-26
8-4.2	Vertical Speed Tolerance Test Scale Accuracy	8-26.1
8-4.3	Vertical Speed Tolerance Test Scale Accuracy	8-26.1
8-5	Troubleshooting -Airspeed Indicators	8-29
8-6	Troubleshooting -Altimeters	8-30
8-7	Troubleshooting -Attitude Indicators	8-32
8-8	Troubleshooting - Vertical Speed Indicators	8-34
8-9	Troubleshooting -Free Air Temperature Gage	8-38
8-10	Troubleshooting -Fuel Quantity indicating System	8-39
8-11	Fuel Tank Table of Limits	8-43
8-12	Troubleshooting -Voltmeter/Ammeter	8-48
8-13	P E Troubleshooting - Pilots Steering Indicator (PSI)	8-51
9-1	Troubleshooting-Battery System	9-29
9-2	Troubleshooting -External Power System	9-34
9-3	P Troubleshooting - Generator and DC Bus System	9-37
9-4	P M Troubleshooting - DC Generator Power System	9-41
9-4.1	Voltage Regulator Adjustment Settings	9-44.2
9-5	P M Troubleshooting - TRU Power System	9-46
9-6	P M DC Power Distribution and Interconnect Logic Chart	9-49
9-7	P M Troubleshooting - DC Power Distribution and Interconnect Logic	9-50
9-8	P Troubleshooting - Inverter System	9-58
9-9	P M Troubleshooting - AC Power System	9-62
9-10	Troubleshooting -Starting System	9-74

LIST OF TABLES (CON'T)

NUMBER	TITLE	PAGE
9-11	Troubleshooting - ignition System	9-75
9-12	Troubleshooting - Cockpit Lights	9-77
9-12.1	Dimmer Control Input/Output Voltages	9-78.1
9-13	Troubleshooting -Console, Engine, Flight, and Tactical Instrument Lights	9-79
9-14	Pilots Caution Panel Lights	9-83
9-15	Gunners Caution Panel Lights	9-83
9-15.1	Troubleshooting Pilots Caution Panel	9-88.2
6-15.2	Pilots Caution Panel Wiring Chart.	9-88.21
9-15.3	Gunners Caution Panel Fault Inputs	9-88.27
9-15.4	Troubleshooting - Gunners Caution Panel	9-88.28
9-15.5	Gunners Caution Panel Wiring Chart	9-88.36
9-16	Troubleshooting- RPM Limit Warning System	9-91
9-16.1	Troubleshooting -Skid Landing Light System	9-94.1
9-16.2	Troubleshooting -ODDS	9-94.3
9-17	Troubleshooting - Position Lights System	9-95
9-18	Troubleshooting - Anticollision Light	9-98
9-19	Troubleshooting -Searchlight System	9-100
9-20	Troubleshooting - Transmission Oil Level Light	9-102
9-21	Troubleshooting -Engine De-lag circuitry	9-103
9-22	Troubleshooting - Engine Oil Bypass valve circuitry	9-105
9-23	Troubleshooting -Fuel Valve Circuitry	9-106
9-24	Troubleshooting -Fuel BoostPumpS Circuitry	9-107
9-25	Troubleshooting - Governor Control Circuitry	9-108
9-26	Troubleshooting - Idle Stop Solenoid System circuitry	9-110
9-26.1	E M Troubleshooting Centrifuge Separator Circuitry (After Incorporation of MWO 55-1520-236-50-12).	9-110.1
9-27	Troubleshooting- Force Trim System Circuitry...	9-111
9-28	Troubleshooting - Hydraulic Control System Circuitry	9-113
9-29	Troubleshooting -Environmental Control System Circuitry	9-115
9-30	Troubleshooting - Pitot Heating System Circuitry	9-117
9-31	Troubleshooting- TOW Blower Cooling System	9-118
9-32	Troubleshooting -Radio Blower Cooling System	9-121
9-32.1	P Relay Matrix, Pilot in Control Mode	9-122.1
9-32.2	P Relay Matrix, Pilot in Fixed Forward Mode	9-122.3
9-32.3	P Relay Matrix, Gunner in Control Mode- HSS Controlling Turret	9-122.5
9-32.4	P Relay Matrix, Gunner in Control Mode - TSU Controlling Turret	9-122.7
9-32.5	P Relay Matrix, Gunner Controlling TOW and Pilot Controlling Turret and Wing Stores Mode	9-122.9
9-32.6	P Relay Matrix, TSU Acquisition of Target with Gunner or Pilot HSS Mode	9-122.11
9-32.7	P Relay Matrix, Pilot Override Mode	9-122.13
9-32.8	P Relay Matrix, Gunner Jettison Mode	9-122.15

LIST OF TABLES (CON'T)

NUMBER	TITLE	PAGE
9-32.9	P Relay Matrix, Pilot Jettison Mode	9-122.16
9-33	P Wing Stores Jettison Checklist Chart	9-143
9-34	P Troubleshooting – Rocket Launcher Circuitry	9-145
9-35	P Troubleshooting – XM-18 Minigun Circuitry	9-150
9-36	P Troubleshooting – Wing Stores Jettison Circuitry	9-152
9-36.1	E Relay Matrix, Gunner in Control Mode – HSS Controlling Turret	9-156.1
9-36.2	E Relay Matrix, Gunner in Control Mode – TSU Controlling Turret	9-156.3
9-36.3	E Relay Matrix, Gunner Controlling TOW and Pilot Controlling Turret and Wing Stores Mode	9-156.5
9-36.4	E Relay Matrix, Pilot in Control Mode	9-156.7
9-36.5	E Relay Matrix, Pilot Override Mode	9-156.9
9-36.6	E Relay Matrix, TSU Acquisition of Target with Gunner or Pilot HSS Mode	9-156.11
9-36.7	E Relay Matrix, Gunner Jettison Mode	9-156.13
9-36.8	E Relay Matrix, Pilot Jettison Mode	9-156.14
9-37	E XM-18 Minigun Checkout Chart	9-176
9-38	E Troubleshooting – XM-18 Minigun Circuitry	9-177
9-39	E Wing Stores Jettison Checkout Chart	9-181
9-40	E Troubleshooting – Wing Stores Jettison Circuitry	9-183
9-41	M XM-18 Minigun Checkout Chart	9-207
9-42	M Troubleshooting – XM-18 Minigun Circuitry	9-208
9-43	M Wing Stores Jettison Checkout Chart	9-212
9-44	M Troubleshooting – Wing Stores Jettison Circuitry	9-214
10-1	Troubleshooting – Fuel System	10-1
11-1	Troubleshooting – Flight Control System	11-1
12-1	Troubleshooting – Engine Fire Detection System	12-1
12-2	Troubleshooting – Low G Warning System	12-6
13-1	Troubleshooting – ECU	13-1
13-2	Troubleshooting – Rain Removal Valve	13-32
16-1	P Troubleshooting Ejector Racks	16-13
16-2	E M Troubleshooting Ejector Racks	16-16
16-3	M Troubleshooting – AIM-1/EXL Laser Gunsight Subsystem	16-39
F-1	P Equipment List (Electrical)	F-9
F-2	P Equipment List (Armament)	F-15
F-3	E Equipment List (Electrical)	F-19
F-4	E Equipment List (Armament)	F-26
F-5	M Equipment List (Electrical)	F-32
F-6	M Equipment List (Armament)	F-39

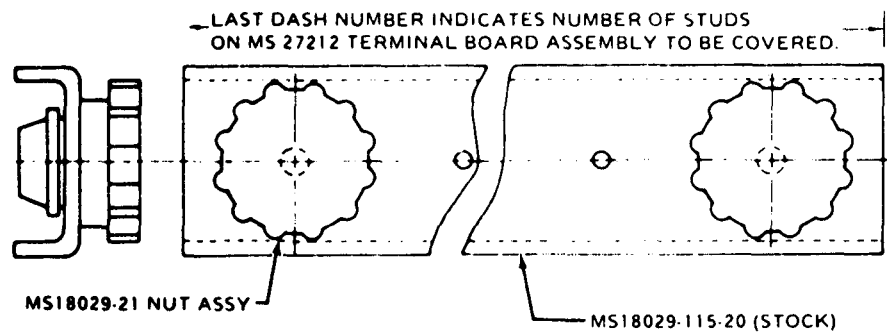


TERMINAL BOARD COVER

Part Number: MS18029-1S2
 MS18029-1S3
 MS18029-1S4
 MS18029-1S5
 MS18029-1S6
 MS18029-1S1
 MS18029-1S12
 MS18029-2S7
 MS18029-2S8
 MS18029-5S2

Fabricate from: NSN 5940-00-082-4642 MS18029-11S20 COVER
 NSN 5940-00-907-5939 MS18029-21 NUT ASSY

Material:

 Figure D-1


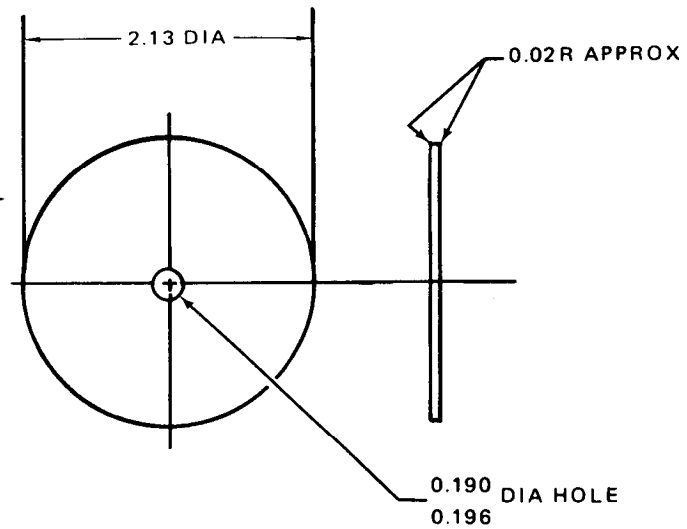


NOTE:
REMOVE ALL BURRS
AND SHARP EDGES

Part Number: 45D99 PLATE
Fabricate from: NSN 9535-00-232-7594
Material: Aluminum Alloy 5052-0,
Federal Specification QQ-A-318,
0.050 In. Thick, 2.5 In. Wide, 2.5 In. Long



  Figure D-2

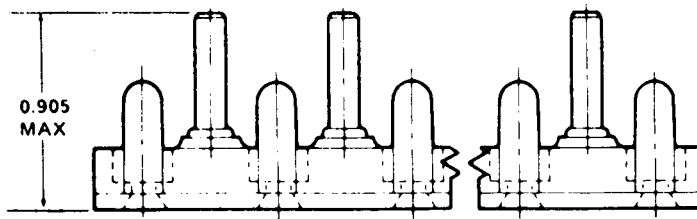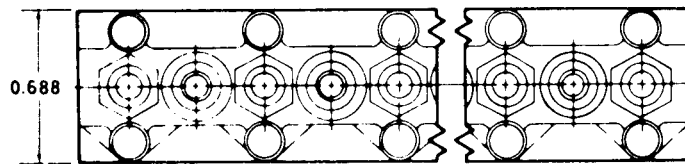


LAST DASH NUMBER INDICATES NUMBER OF 6-32 UNC-2A STUDS IN ASSEMBLY

Part Number: MS27212-1-2 thru -1-6, -1-8, -1-11, and -1-12 TERMINAL BOARD

Fabricate from: NSN 5940-00-950-1610


Material: MS27212-1-20 FMC 96906

 FIGURE D-3.

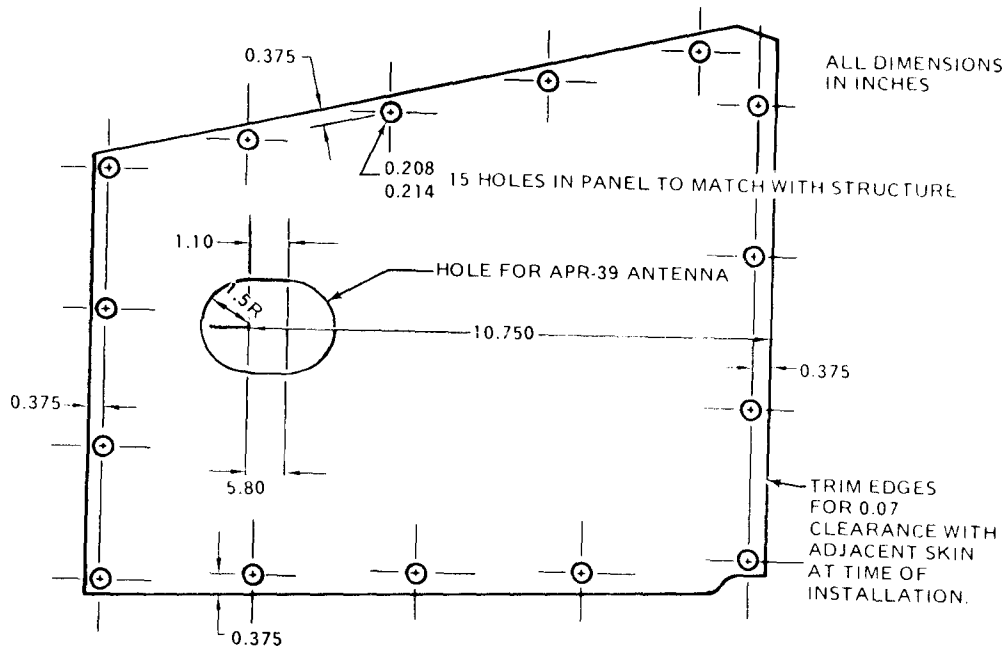

Part Number: 209-033-005-29 PANEL, NOSE INSTALLATION
 Fabricate from: NSN9535-00-554-1417
 Material: Aluminum Alloy, 2024,
 Federal Specification QQ-A-250/5, T42,
 0.063 inch thick, 14.0 inch wide, 16.0 inch long

 
Figure D-4

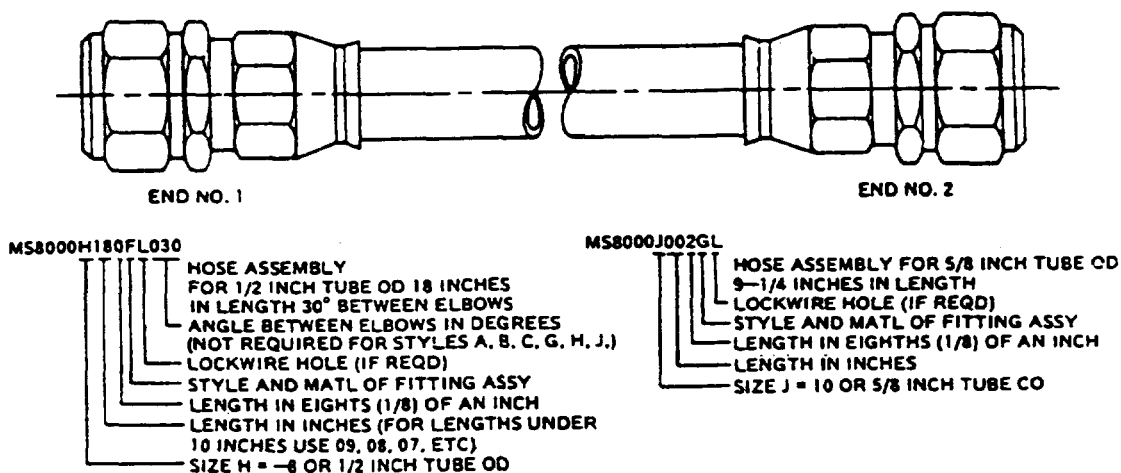

HOSE ASSEMBLIES


PART NUMBER	HOSE NSN	FITTING END NO. 1		FITTING END NO. 2	
		PART NO.	NSN	PART NO.	NSN
MS8000E100A	4720-00-857-1732	MS27053-4C	4730-00-889-2474	MS27060-4C	4730-00-013-6970
MS8000E160E270	4720-00-857-1732	MS27060-4C	4730-00-013-6970	MS27059-4C	4730-00-889-2465
MS8000E200A	4720-00-176-4649	MS27053-4C	4730-00-889-2474	MS27053-4C	4730-00-889-2474
MS8000E226E120	4720-00-857-1732	MS27059-4C	4730-00-889-2465	MS27060-4C	4730-00-013-6970
MS8000E304F345	4720-00-857-1732	MS27060-4C	4730-00-013-6970	MS27060-4C	4730-00-013-6970
MS8000E350E258	4720-00-857-1732	MS27060-4C	4730-00-013-6970	MS27059-4C	4730-00-889-2465
MS8000J107G	4720-00-857-1730	MS27053-10	4730-00-125-2640	MS27053-10	4730-00-125-2640
MS8000J190G	4720-00-857-1730	MS27053-10	4730-00-125-2640	MS27053-10	4730-00-125-2640
MS8000K324H	4720-00-857-1734	MS27053-12	4730-00-935-9382	MS27055-12	4730-00-935-9383
MS87028K072C	4720-00-555-3499	MS87018-12	4730-00-544-1957	MS87020-12	4730-00-238-5338
MS87028K200J043	4720-00-555-3499	MS87019-12	4730-00-618-7382	MS87020-12	4730-00-238-5338
MS87028K224D200	4720-00-555-3499	MS87019-12	4730-00-618-7382	MS87019-12	4730-00-618-7382
MS87028K082D180	4720-00-555-3499	MS87019-12	4730-00-618-7382	MS87019-12	4730-00-618-7382
MS87028E068A000					
MS8000E200A	4720-00-857-1732	MS27053-4C	4730-00-889-2724	MS27053-4C	4730-00-889-2724

 Figure D-5

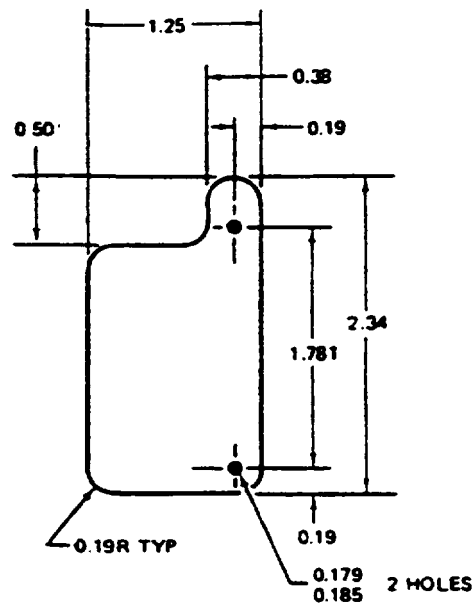


Part Number: 209-075-676-7 PLATE
Fabricate from: NSN 9535-00-167-2277
Material: Aluminum Alloy,
 Federal Specification QQ-A-250/5,
 0.020 in. thick, 1.8 in. wide, 2.8 in. long

 Figure D-6

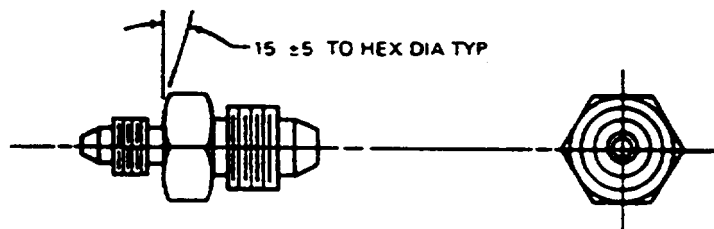

Part Number: 110-033-1 REDUCER
Fabricate from: NSN 4730-00-828-9974
Material: MS24399D2

 Figure D-7.

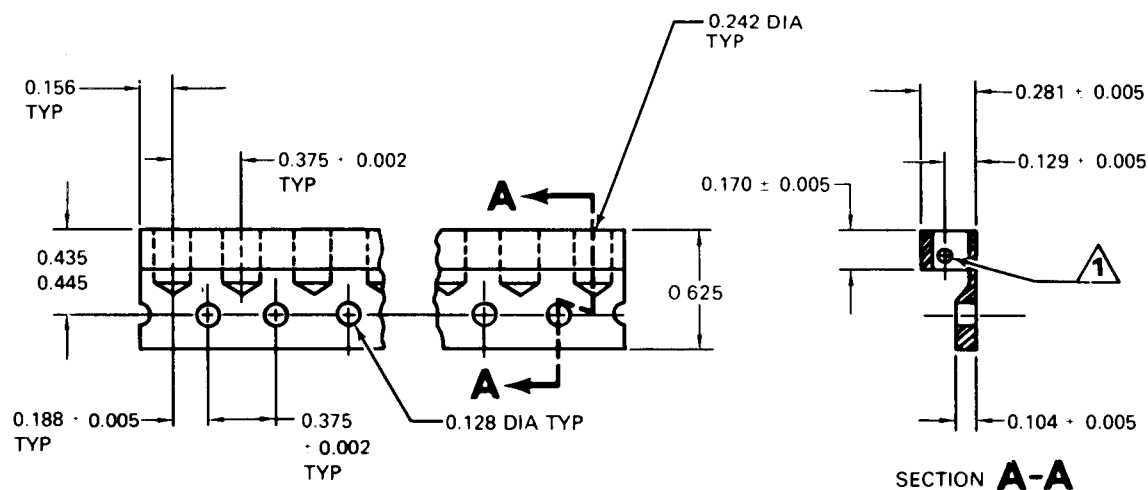

NOTES:



0.050 diameter stainless steel wire staked in place.

RECEPTACLE STRIP - PANEL

PART NO.	NO. HOLES	LENGTH	FABRICATE FROM NSN
110-045-6	6	2.562	5325-00-036-9305
110-045-7	7	2.562	5325-00-036-9305
110-045-10	10	4.062	5325-00-036-9305
110-045-12	12	4.437	5325-40-036-9305
110-045-13	13	5.187	5325-00-036-9305
110-045-18	18	6.831	5325-00-036-9305
110-045-19	19	7.062	5325-00-036-9305
110-045-20	20	7.812	5325-00-036-9305
110-045-23	23	8.562	5325-00-036-9305
110-045-29	29	10.812	5325-00-036-9305
110-045-30	30	11.187	5325-00-036-9305
110-045-32	32	11.937	5325-036-9305
110-045-64	64	23.937	5325-00-036-9305
110-045-65	65	24.312	5325-00-036-9305
110-045-94	94	35.187	5325-00-036-9305
110-045-95	95	35.562	5325-00-036-9305

Figure D-8