

TECHNICAL MANUAL

AVIATION UNIT AND
INTERMEDIATE MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)
FOR
HELICOPTER, ATTACK

NSN	1520-01-168-4259	AH-1P (PROD)
	1520-01-192-2478	AH-1E (ECAS)
	1520-01-168-4260	AH-1F (MC)

"Approved for public release; distribution is unlimited."

This manual together with TM 55-1520-236-23P-1 and TM 55-1520-236-23P-2 supersedes TM 55-1520-236-23P-1, 16 April 1985, TM 55-1520-236-23P-2, 16 April 1985 and TM 55-1520-239-23P, 16 November 1983, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY
14 APRIL 1987

TECHNICAL MANUAL

NO. 55-1520-236-23P-3

TM 55-1520-236-23P-3

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 14 April 1987

AVIATION UNIT AND INTERMEDIATE MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR

HELICOPTER, ATTACK

NSN 1520-01-168-4259 AH-1P (PROD)
1520-01-192-2478 AH-1 E (ECAS)
1520-01-168-4260 AH-1 F (MC)

(Current as of 3 September 1986)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <daf2028@dmhl .stl.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

NOTE:

This manual is printed in three volumes as follows:

TM 55-1520-236-23P-1, consisting of Table of Contents, Section I and Section II (Functional Groups 02 through 07).

TM 55-1520-236-23P-2, consisting of Table of Contents, Section II (Functional Groups 08 through 19, 50, and 60) and Section III.

TM 55-1520-236-23P-3, consisting of Table of Contents, and Section IV.

Change 12 i

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE	ILLUSTRATION FIGURE
I	INTRODUCTION		
	Exploded View of AH-1P/E/F Helicopter	9	1
II	REPAIR PARTS		
	FUNCTIONAL GROUP 02 AIRFRAME		
	Helicopter Assembly	2-1	2
	Forward Section Assembly	3-1	3
	Fuselage Assembly	4-1	4
	Wire Strike Components	4A-1	4 A
	Nose Installation	5-1	5
	Fairing Installation	6-1	6
	Canopy Installation	7-1	7
	Door Installation, Gunner	8-1	8
	Door Installation, Pilot	9-1	9
	Fairing Installation	10-1	10
	Skin Installation	11-1	11
	Panel Installation	12-1	12
	Door and Access Panel Installations	13-1	13
	Skin Installation	14-1	14
	Beam Installation, LH	15-1	15
	Beam Installation, LH	15A-1	15A
	Beam Installation, RH	16-1	16
	Beam Installation, RH	16A-1	16A
	Step and Console Installation	17-1	17
	Panel Installation	18-1	18
	Cowl Support and Engine Deck Installation	19-1	19
	Vent and Drain Installation	20-1	20
	Heel Rest Installation	21-1	21
	Heel Rest and Floor Installation	21A-1	21 A
	Bulkhead Installation	22-1	22
	Panel Installation	23-1	23
	Support Installation	24-1	24
	Bulkhead Installation	25-1	25
	Bulkhead Installation	25A-1	25 A
	Web and Guard Installation	26-1	26
	Bulkhead Installation	27-1	27
	Floor and Bulkhead Installation	28-1	28
	Support Installation	29-1	29
	Pylon Damper Assembly	29A-1	29 A
	Support Installation	30-1	30
	Closure Installation	31-1	31
	Arm Rest and Helmet Hook Installation	32-1	32
	Fairing Installation	33-1	33
	Fairing Installation	34-1	34
	Wing Installation	35-1	35

TABLE OF CONTENTS (Cont)

SECTION DESCRIPTION	PAGE	ILLUSTRATION FIGURE
Wing Installation	35A-1	35A
Gunner Seat Armor Installation	36-1	36
Pilot Seat and Armor Installation	37-1	37
Transmission Cowl Installation.....	38-1	38
Engine Cowl Installation	39-1	39
Fairing Assembly, Center	40-1	40
Baffle Assembly, Air	41-1	41
Fairing and Tail Pipe Installation	42-1	42
Engine Mount Installation	43-1	43
Aft Section Assembly	44-1	44
Tail Boom Installation	45-1	45
Fin Installation	46-1	46
Bulkhead Installation	47-1	47
Support and Longerons Installation.....	48-1	48
Spar Installation.....	49-1	49
Rib Installation	50-1	50
 FUNCTIONAL GROUP 03 ALIGHTING GEAR		
Landing Gear Assembly	51-1	51
Skid Shoes-Standard, Heavy Duty.....	51 A-1	51A
 FUNCTIONAL GROUP 04 POWER PLANT INSTALLATION (See TM 55-2840-247-23P for Engine Breakdown)		
Engine and Cowl Installation	52-1	52
Particle Separator.....	52A-1	52A
Suppressor System Installation, IR	52B-1	52B
Kit, Exhaust, Suppression	52C-1	52C
Oil System Installation.....	53-1	53
Oil System Installation (MWO 1-1520-236-50-30)	53A-1	53A
Unit Assembly, Engine Oil Filter (MWO 1-1520-236-50-30)	53B-1	53B
Engine External Oil Filter (MWO 1-1520-236-50-30)	53C-1	53C
Oil Separator Lubriclone (MWO 1-1520-236-50-30).....	53D-1	53D
Fan Installation	54-1	54
Turbine Fan Assembly	55-1	55
Controls Installation, Power Plant.....	56-1	56
Controls Installation, Droop Compensator	57-1	57
Engine Assembly.....	58-1	58
Starter-Generator	58A-1	58A
End Bell Assembly.....	58B-1	58B
Starter-Generator	58C-1	58C
Actuator, Linear	59-1	59
Actuator, Linear	61-1	61
Actuator, Linear	61A-1	61A
 FUNCTIONAL GROUP 05 ROTORS		
Pylon Installation	62-1	62
Blade Assembly, Main Rotor	63-1	63
Blade Assembly, Main Rotor	64-1	64
Hub Assembly, Main Rotor.....	65-1	65
Scissor and Sleeve Assembly	66-1	66
Swashplate and Support Assembly.....	67-1	67

TABLE OF CONTENTS (Cont)

SECTION DESCRIPTION	PAGE	ILLUSTRATION FIGURE
Tail Rotor Installation.....	68-1	68
Hub Assembly, Tail Rotor.....	69-1	69
FUNCTIONAL GROUP 06 DRIVE TRAIN		
Transmission and Mast Assembly	70-1	70
Transmission Assembly	71-1	71
Valve Installation	71 A-1 71A	
Quill Assembly, Fan Drive	72-1	72
Quill Assembly, Alternator	72A-1	72A
Upper Planetary Assembly.....	73-1	73
Lower Planetary Assembly.....	74-1	74
Quill Assembly.....	75-1	75
Case Assembly	76-1	76
Quill Assembly.....	77-1	77
Case Assembly	78-1	78
Manifold Assembly	79-1	79
Quill Assembly.....	80-1	80
Drive and Sump Assembly.....	81-1	81
Quill Assembly.....	82-1	82
Quill Assembly.....	83-1	83
Quill Assembly.....	84-1	84
Case Assembly	85-1	85
Driveshaft Installation, Engine to Transmission	86-1	86
Short Shaft Assembly.....	86A-1	86A
Driveshaft Installation, Tail Rotor	87-1	87
Gearbox Assembly, 42 Degree, Tail Rotor Drive	88-1	88
Quill Assembly, 42 Degree Gearbox.....	89-1	89
Gearbox Assembly, 90 Degree, Tail Rotor Drive	90-1	90
Quill Assembly, 90 Degree Gearbox.....	91-1	91
Oil System Installation, Transmission	92-1	92
FUNCTIONAL GROUP 07 HYDRAULIC SYSTEM		
Hydraulic System Installation	93-1	93
Hydraulic System Installation	93A-1	93A
Valve Assembly.....	94-1	94
Reservoir Assembly	95-1	95
Valve, Solenoid.....	96-1	96
Module Assembly	97-1	97
Solenoid Valve.....	97A-1	97A
Hydraulic System Installation, Armament.....	98-1	98
Cylinder Assembly.....	99-1	99
Servo Cylinder	100-1	100
Cylinder and Support Assembly	101-1	101
Servo Actuator.....	102-1	102
Servovalve.....	102A-1	102A
Filter, Fluid Pressure	103-1	103
Servo Cylinder Assembly	104-1	104
Servo Cylinder Assembly	105-1	105

TABLE OF CONTENTS (Cont)

SECTION	DESCRIPTION	PAGE	ILLUSTRATION FIGURE
FUNCTIONAL GROUP 08 INSTRUMENTS SYSTEMS			
	Tubing Installation, Instrument	106-1	106
	Panel and Glareshield Installation, Gunners	107-1	107
	Fire and Master Caution Switch	107A-1	107A
	Panel and Glareshield Installation, Pilots.	108-1	108
	Indicating Panel.	108A-1	108A
	Standby Compass Installation.	109-1	109
FUNCTIONAL GROUP 09 ELECTRICAL SYSTEM			
	Electrical Installation, Forward Section	110-1	110
	Electrical Installation, Forward Section	110A-1	110A
	Electrical Installation, Gunner's	111-1	111
	Panel Assembly, Gunners Miscellaneous	112-1	112
	Panel Assembly, Annunciator	112A-1	112A
	Electrical Installation, Pilot's Section	113-1	113
	Electrical Installation, Pilot's Section.	113A-1	113A
	Control Panel Assembly.	114-1	114
	Panel Assembly, Indicating Light	114A-1	114A
	Panel Subassembly, Indicating Light	114B-1	114B
	Circuit Card, Indicating Light	114C-1	114C
	Control Panel Assembly.	115-1	115
	Panel Assembly, Circuit Breaker	116-1	116
	Panel Assembly, Circuit Breaker.....	116A-1	116A
	Panel Assembly, Circuit Breaker	117-1	117
	Circuit Card Assembly, Night Lighting.	117A-1	117A
	Electrical Installation, Aft Compartment	118-1	118
	Electrical Installation, Aft Compartment	118A-1	118A
	Electrical Installation, Pylon	119-1	119
	Electrical Installation, Wing.	120-1	120
	Electrical Installation, Engine	121-1	121
	Electrical Installation, Armament.. . . .	122-1	122
	Electrical Installation, Armament	122A-1	122A
	Electrical Installation, Aft Section.	123-1	123
	Support Installation	124-1	124
	Harness Assembly, Forward Section.	125-1	125
	Harness Assembly, Forward Section	125A-1	125A
	Harness Assembly, Pilot's Section.	126-1	126
	Harness Assembly, Engine Electrical	127-1	127
	Harness Assembly, Armament Electrical	128-1	128
	Harness Assembly, Armament Electrical	128A-1	128A
	Equipment Installation	128B-1	128B
FUNCTIONAL GROUP 10 FUEL SYSTEM			
	Fuel System Installation	129-1	129
	Filter Assembly, Cap and Adapter Assembly	130-1	130
	Receiver, Refueling	131-1	131
	Deleted		131A
	Deleted		132
	Deleted		133
	Fuel Pump Cartridge.....	133A-1	133A

TABLE OF CONTENTS (Cont)

SECTION DESCRIPTION	PAGE	ILLUSTRATION FIGURE
FUNCTIONAL GROUP 11 FLIGHT CONTROL SYSTEM		
Controls Installation, Directional System.....	134-1	134
Controls Installation, Anti-Torque	135-1	135
Controls Installation, Collective	136-1	136
Controls Installation, Longitudinal Cyclic.....	137-1	137
Controls Installation, Lateral Cyclic	138-1	138
Controls Installation, Elevator, Forward.....	139-1	139
Controls Installation, Elevator, Aft	140-1	140
Elevator Installation	141-1	141
Stick Assembly, Gunner's Cyclic.....	142-1	142
Stick Assembly, Pilot's Cyclic.....	143-1	143
Grip Assembly	143A-1	143A
Stick Assembly, Gunner's Collective.....	144-1	144
Stick Assembly, Pilot's Collective.....	145-1	145
Brake Assembly, Magnetic.....	146-1	146
FUNCTIONAL GROUP 12 UTILITY SYSTEMS		
Miscellaneous Installations.....	147-1	147
Mirror, Thermometer and AshTray Installation.....	148-1	148
Fire Detection Installation	149-1	149
FUNCTIONAL GROUP 13 ENVIRONMENTAL CONTROL SYSTEMS		
Air Distribution Installation.....	150-1	150
Valve, Pressure, Air.....	150A-1	150A
Valve Assembly, Air Distribution.....	150B-1	150B
Valve Assembly, Air Distribution.....	150C-1	150C
Environmental Control Unit	151-1	151
Turbine Assembly, Cooling	152-1	152
Valve Assembly.....	153-1	153
Valve Assembly.....	154-1	154
Avionics Cooling Installation, Tail Boom	155-1	155
Fan, Vaneaxial.....	156-1	156
Motor Assembly, DC	157-1	157
Avionics Cooling Installation, Forward.....	158-1	158
FUNCTIONAL GROUP 16 MISSION EQUIPMENT		
Servo Control Unit Assembly.....	159-1	159
Wiring Assembly, Printed, A2 Standby.....	160-1	160
Wiring Assembly, Printed, AI Power	161-1	161
Wiring Assembly, Printed, A3 Port	162-1	162
Resolver Assembly.....	163-1	163
Weapon's Subsystem Installation	164-1	164
Weapon's Subsystem Installation	164A-1	164A
Pylon Installation, Outboard, LH and RH.....	165-1	165
Rack Assembly, Outboard, LH and RH.....	165A-1	165A
Actuator Assembly, Armament, LH and RH.....	166-1	166
Pylon Installation, Inboard, LH and RH	167-1	167

TABLE OF CONTENTS (Cont)

SECTION DESCRIPTION	PAGE	ILLUSTRATION FIGURE
Rack Assembly.....	167A-1	167A
Ejector Assembly.....	167B-1	167B
Rack Assembly, Inboard, RH and LH.....	167C-1	167C
Rack Assembly, External Ejector	168-1	168
Receiver Installation	168A-1	168A
Hub and Mount Installation.....	168B-1	168B
M130 Chaff Dispenser Installation	168C-1	168C
Connector Bracket Installation	168D-1	168D
Pilot Dispenser Switch Installation.....	168E-1	168E
Microswitch/Test Installation	168F-1	168F
Cable Routing.....	168G-1	168G
Gunnery Dispenser Switch Installation.....	168H-1	168H
Gunnery Switch Assembly	168I-1	168I
Window Installation, Gearbox Fairing.....	168J-1	168J
Circuit Breaker Box Installation	168K-1	168K
M130 Electronic Module Installation.....	168L-1	168L
M130 Electronic Module Installation.....	168M-1	168M
Chaff Dispenser.....	168N-1	168N
AIM-1 Installation.....	168O-1	168O
Switch/Relay Installation.....	168P-1	168P
Switch/Relay Assembly	168Q-1	168Q
Cable Routing.....	168R-1	168R
IR Laser Installation.....	168S-1	168S
FUNCTIONAL GROUP 17 EMERGENCY EQUIPMENT		
Emergency Equipment Installation.....	169-1	169
Canopy Removal System Installation.....	170-1	170
FUNCTIONAL GROUP 18 FM COMMUNICATIONS		
Radio Communication Upgrade	171-1	171
Battery Box Installation.....	172-1	172
IFM ARN-89 Installation	173-1	173
IFM Bypass Assembly	174-1	174
Doubler, Cable Feedthru	175-1	175
Aft Disconnect Bracket	176-1	176
Fairing Installation	177-1	177
Fairing Assembly	178-1	178
Cable Routing.....	179-1	179
Cable Routing.....	180-1	180
Switch Assembly Installation	181-1	181
FUNCTIONAL GROUP 19 COUNTERMEASURES (CM) EQUIPMENT		
AN/AVR-2 Laser Detection Set	182-1	182
Sensor and Fairing Installation.....	183-1	183
Comparator Installation	184-1	184
Cable Routing and Clamping stations.....	185-1	185

TABLE OF CONTENTS (Cont)

SECTION DESCRIPTION	PAGE	ILLUSTRATION FIGURE
FUNCTIONAL GROUP 50 KITS AND QUICK CHANGE ASSEMBLIES.....	KITS-1	
FUNCTIONAL GROUP 60 BULK MATERIALS	BULK-1	
III FUNCTIONAL GROUP 80 SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT		
Airframe Tools	A1-1	A1
Flyaway Items.....	F1-1	F1
Ground Support Items	G1-1	G1
IV NATIONAL STOCK NUMBER AND PART NUMBER INDEX	I-1	
Supplementary National Stock No and Part No Index C1.....	1-506	
Part No Supplemental Index C2.....	1-511	
Supplementary National Stock No and Part No Index C5.....	1-547	
Part No Supplemental Index C7	1-551	
National Stock No Supplemental Index C7	1-589	
National Stock No Supplemental Index C10	1-602A	
Supplemental National Stock No and Part No Index C8.....	1-603	
Supplemental National Stock No and Part No Index C8.....	1-625	
Supplemental National Stock No and Part No Index C10.....	1-639	
Supplemental National Stock No and Part No Index C11.....	1-641	
Supplemental National Stock No and Part No Index C12.....	1-643	
Supplemental National Stock No and Part No Index C12.....	1-655	

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

NATIONAL STOCK NUMBER INDEX					
STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
6210-00-001-1729	114A	23	1650-00-011-9022	137	75
	114A	33		138	73
	114A	43		63	28
	114A	54		37	30A
2915-00-003-5903	129	101	4730-00-013-6970	BULK	86
2915-00-003-5904	129	109	5315-00-013-7214	62	1
	130			66	1
2995-00-003-5906	59		5930-00-013-9136	143A	20
8305-00-003-6179	BULK	72	3120-00-014-1343	61	27
5320-00-004-4035	25	201	1650-00-014-2038	101	25
	28	7			
5315-00-005-0442	68	22	2995-00-014-4685	58	44
	167	41	3110-00-014-8335	58C	26
5935-00-005-2838	128B	64	3110-00-014-8337	58C	23
5935-00-005-2854	128B	68	5340-00-015-6566	29	59
5935-00-005-8845	128	16	1560-00-016-1195	38	42
	128B	16	1560-00-016-1197	56	47
5935-00-005-8856	128B	67	3040-00-016-1198	56	6
9540-00-006-4911	BULK	261	5365-00-016-6183	146	6
1730-00-007-2562	52C	20	5365-00-016-6187	146	5
1560-00-007-2575	16A	80	5365-00-016-6227	146	36
5306-00-007-6027	137	94	8040-00-016-8662	BULK	26
	138	95	5325-00-017-6414	112	33
	167	62		112	61
5935-00-008-6911	115	14	115	26	
	115	41	115	53	
	117	38	115	82	
	160	5	117	64	
5905-00-008-8324	162	30	4730-00-017-8846	BULK	87
5305-00-008-9120	129	99	2915-00-018-0012	129	41
5340-00-009-0136	19	94			
5975-00-009-0173	113	37	5120-00-018-0220	A6	12
	113A	57	1560-00-018-6447	38	41
	118A	134	1680-00-018-9343	142	26
	122A	215	2945-00-019-0280	130	
5320-00-009-0605	15	61A		KITS	
	16	65	4010-00-019-1506	130	9
	16	85	1560-00-019-5120	52	164
5935-00-009-6363	128	67	1560-00-019-5121	52	163
5340-00-010-7633	16	111	5310-00-019-5397	99	43
	25	76A	5310-00-019-5398	99	42
	16A	89	5330-00-020-0105	150	275
	25A	57	5330-00-020-0203	52B	102
5365-00-010-7634	40	17	5340-00-020-0392	62	50
1560-00-010-7868	26	3		111	40
1560-00-010-7869	26	10		113	28
1560-00-010-7870	26	7		122	36
1560-00-010-7871	26	13		123	13
1650-00-011-9022	102			129	54
	134	109		113A	42

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

NATIONAL STOCK NUMBER INDEX					
STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
5340-00-020-0392	118A	29B			
	122A	52			
5310-00-020-4144	11	119B			
	110	19			
	124	96	3110-00-034-5257	145	69
	124	109	5325-00-036-9305	35A	87
	124	219		BULK	221
	124	231	5340-00-040-9201	110	9
	124	240		113	25
	124	352		120	60
	110A	78		122	31
4920-00-021-2732	A18	2		110A	59
4920-00-021-2733	A9	2		113A	37
5330-00-021-3526	150	175		118A	29
5310-00-021-3884	6	5		122A	48
	6	150	3110-00-042-0440	144	37
	35	26		145	123
	167C	15	3110-00-042-1012	136	54
	167C	20	3110-00-042-4568	58	89A
	167C	50	5930-00-042-7034	122	139
				122A	127
			5930-00-042-7036	115	75
3120-00-022-2775	62	25	5340-00-043-0493	31	3
5315-00-023-4253	52	128	5305-00-043-2680	129	17
5315-00-023-4498	52B	84		167A	4
5325-00-023-5998	46	121	5340-00-043-3723	BULK	228
5325-00-023-6011	22	26	5340-00-043-3724	BULK	225
3110-00-023-6669	56	14	5999-00-043-4397	114C	21
	56	23		114C	35
	56	30		114C	67
	56	36		114C	84
3110-00-023-7007	143	9	5120-00-044-1426	A6	1
	143	19	5315-00-044-2884	21A	30
5330-00-023-7623	58	50	1560-00-044-2897	15	88
	119	7A		15A	94
8040-00-023-7725	BULK	211	1560-00-044-2898	16	127
	BULK	212		16A	67
4720-00-025-7548	52B	94	1560-00-044-2899	16A	1
3110-00-027-8758	58	83	1560-00-044-2931	52	2
3110-00-030-3381	142	17			
	142	28	5340-00-045-2868	27	128
	144	35	5310-00-045-3296	123	106
	145	125		124	2
1615-00-030-7199	65	71		124	7
1615-00-033-6314	65	78		124	11
3110-00-033-9851	144	36		58A	32
	145	124		58C	5
				61A	20
				143A	2
			5310-00-045-3299	7	79