

TECHNICAL MANUAL

OPERATORS
AND ORGANIZATIONAL
MAINTENANCE MANUAL
INCLUDING REPAIR PARTS AND SPECIAL
TOOLS LIST FOR HIGH ALTITUDE AIRDROP
RESUPPLY SYSTEM: 2,000 POUND CAPACITY

EQUIPMENT DESCRIPTION AND DATA
PAGE 1-3

OPERATING INSTRUCTIONS
PAGE 2-1

PREVENTIVE MAINTENANCE CHECKS AND
SERVICES
PAGE 2-3

MAINTENANCE PROCEDURES
PAGE 4-3

REPAIR PARTS AND SPECIAL TOOLS LIST
PAGE C-1

This copy is a reprint which includes current pages from Change 1.

H E A D Q U A R T E R S , D E P A R T M E N T O F T H E A R M Y

2 8 O C T O B E R 1 9 8 2

TECHNICAL MANUAL

No. 10-1670-265-12&P

HEADQUARTERS

DEPARTMENT OF THE ARMY

WASHINGTON, D.C., 28 October 1982

**OPERATOR'S AND ORGANIZATIONAL
MAINTENANCE MANUAL
INCLUDING
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR HIGH ALTITUDE AIRDROP RESUPPLY SYSTEM:
2,000 POUND CAPACITY**

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS
ARMY**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Troop Support and Aviation Materiel Readiness Command, ATTN: DRSTS-MPSD, 4300 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished to you.

AIR FORCE

Reports by US Air Force units should be submitted on AFTO Form 22, Technical Order Publication Improvement Report, and forwarded to the address prescribed above for the Army. An information copy of the prepared AFTO Form 22 shall be furnished to SAAMA/MMSTR, Kelly AFB, TX 78241.

	Page
CHAPTER 1. INTRODUCTION	1-1
SECTION I. General Information.....	1-1
SECTION II. Equipment Description and Data	1-3
SECTION III. Technical Principles of Operation	1-8
CHAPTER 2. OPERATING INSTRUCTIONS	2-1
SECTION I. Description and Use of Operator's Controls and Indicators	2-1
SECTION II. Operator Preventive Maintenance Checks and Services (PMCS)	2-3
SECTION III. Operation Under Usual Conditions	2-4
CHAPTER 3. OPERATOR MAINTENANCE INSTRUCTIONS	3-1
CHAPTER 4. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS	4-1
SECTION I. Repair Parts, Special Tools, TMDE, and Support Equipment.....	4-1
SECTION II. Service Upon Receipt	4-1
SECTION III. Preventive Maintenance Checks and Services (PMCS)	4-3
SECTION IV. Troubleshooting	4-3
SECTION V. Maintenance Procedures I	4-3
SECTION VI. Maintenance Procedures for 57-Foot-Long Center Line	4-5
SECTION VII. Maintenance Procedures for Altitude Sensor Parachute Staging Unit	4-13
SECTION VIII. Maintenance Procedures for G- 12E 64-Foot-Diameter Cargo Parachute	4-47
SECTION IX. Preparation for Storage or Shipment	4-85

		PAGE	ILLUS FIGURE
APPENDIX A	REFERENCES	A-1	
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-2	
APPENDIX C	REPAIR PARTS AND SPECIAL TOOLS LIST	C-1	
SECTION I.	Introduction	C-1	
SECTION II.	Repair Parts	C-4	
GROUP 01.	57-Foot-Long Center Line	C-4	C-1
GROUP 02.	Altitude Sensor Parachute Staging Unit	C-5	C-2
GROUP 03.	G-12E 64-Foot-Diameter Cargo Parachute	C-6	C-3
SECTION III.	Special Tools' List.....	C-7	C-4
SECTION IV.	NSN, Part No., Index	C-8	
APPENDIX D	EXPENDABLE SUPPLIES AND. MATERIALS LIST	D-1	
	SUBJECT INDEX	Index 1	

FIGURE NO.	LIST OF ILLUSTRATIONS TITLE	PAGE
1-1	High altitude airdrop resupply system (HAARS)	1-0

	LIST OF TABLES	
1-1	Equipment data	1-6
2-1	Altitude sensor parachute staging unit controls	2-1
2-2	Operator Preventative Maintenance Checks and Services ...	2-4
2-3	Barometric Pressure Setting	2-7

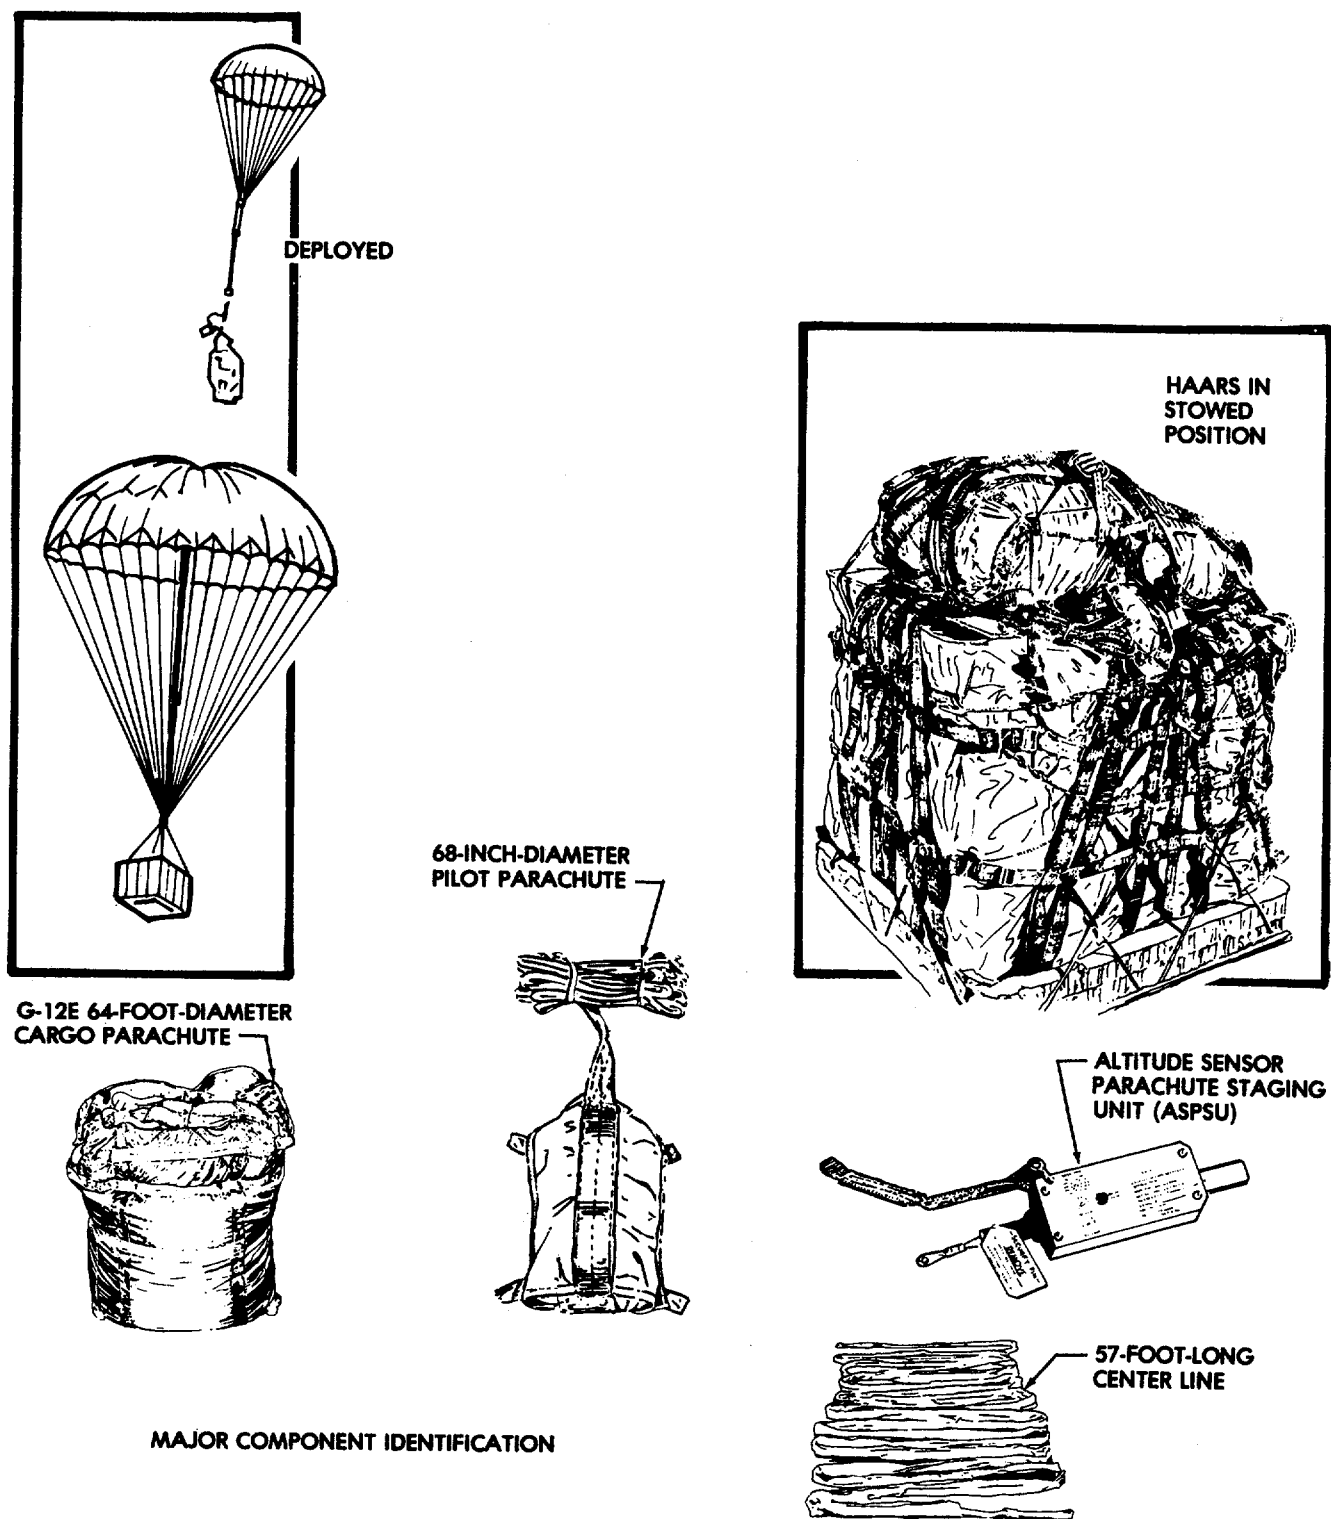


Figure 1-1. High altitude airdrop resupply system (HAARS).

CHAPTER 1 INTRODUCTION

SECTION I. GENERAL INFORMATION

1-1. Scope.

Type of Manual: Operator and Organizational

Equipment Name: High Altitude Airdrop Resupply System (HAARS)

Purpose of Equipment: Provide airdrops from high altitudes to avoid detection of aircraft from enemy ground forces.

1-2. Maintenance forms, records, and reports.

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by, TM 38-750. The Army Maintenance Management System (TAMMS).


1-3. Reporting equipment improvement recommendations (EIR's). If your parachute system needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF 368 Quality Deficiency Report. Mail it to us at: Commander, US Army Troop Support and Aviation Materiel Readiness Command, ATTN: DRSTS-MPSD, 4300 Goodfellow Blvd., St. Louis, MO 63120. We'll send you a reply.

1-4. Destruction of Army materiel to prevent enemy use.

a. Instructions for destruction of the High Altitude Airdrop Resupply System are contained in TM 750-244-1-1 / T.O. 13C3-1-10.

b. Instructions for destruction of the cutter module, (cutter), are contained in TM 750-244-5-1 and as follows:

WARNING
Explosive will discharge in 5 seconds.

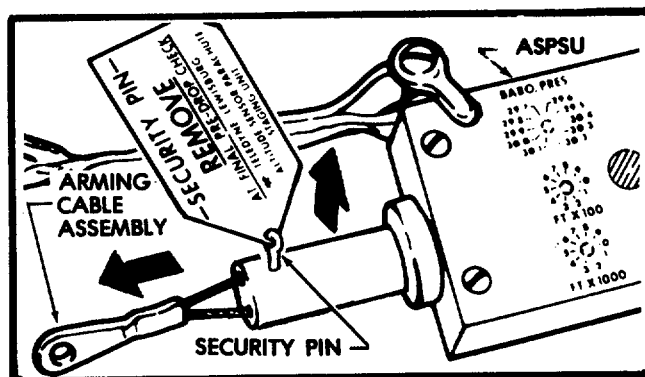

- Pull out security pin.
- Pull arming cable assembly and get rid of Altitude Sensor Parachute Staging Unit (ASPSU) in an area away from personnel.
- After explosive has discharged, destroy the sensor module by destroying the printed circuit board.

1-5. Preparation for storage or shipment. For storage, refer to TM 740-90-1. Additional requirements are contained in TM 10-1670-201-23 T.O. 13C-1-41. Preparations for storage and shipment for the cutter module is contained in TM 9-1370-203-20&P.