

TECHNICAL MANUAL

**GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
STROBOSCOPE TS-805B/
(NSN 6625-00-752-7992**

TECHNICAL MANUAL
No.11-6625-396-40P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 25 November 1976

GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS FOR

STROBOSCOPE TS-805B/U (NSN 6625-00-752-7992)

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Current as of 15 August 1976

Table of Contents

	Page	Figure
SECTION I. Introduction	1	
II. Repair parts list.		
Group 00 Stroboscope TS-805B/U	5	1
01 Chassis and front panel assembly	7	2
0101 Board assembly, resistor	8	3
00102 Board assembly, resistor	9	4
0103 Chassis assembly	13	5
0104 Panel Assembly, front	15	6
Group 02 Case.	17	7
SECTION III. Special tools list (Not applicable)		
IV. National stock number and part number index.	19	

***This manual supersedes that portion of TM 11-6625-396-40P, 14 MARCH 1975, as pertains to Stroboscope TS-805B/U.**

Section I

INTRODUCTION

1. Scope

This manual lists repair parts required for performance of general support maintenance of the TS-805B/U.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in ascending numerical sequence, of all National stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

b. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
------	------------

PA-Item procured and stocked for anticipated or known usage.	
--	--

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) *The maintenance code entered in the third position will indicate the lowest maintenance level*

authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O-Support item is removed, replaced, used at the organizational level.	
--	--

Code	Application/Explanation
------	-------------------------

H-Support item is removed, replaced, used at the general support level.	
---	--

(b) *The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:*

Code	Application/Explanation
------	-------------------------

H- The lowest maintenance level capable of complete repair of the support item is the general support level.	
--	--

Z- Nonrepairable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Code	Definition
------	------------

Z-Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in position 3.	
---	--

H-Repairable item. When economically repairable, condemn and dispose at the general support level.	
--	--

c. *National Stock Number.* Indicates the National stock numbers assigned to the item and will be used for requisitioning purposes.

d. *Part Number.* Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the designs and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements, to identify an item or range of items.

NOTE

When a stock-numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e.

The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item,

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc.). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

The following publications pertain to the TS-805B/U and its components

Publication and Short Title

TM 11-6625-396-12, Stroboscope TS-805B/U
 TM 11-6625-396-20P, Stroboscope TS-805B/U
 TM 11-6625-396-40, Stroboscope TS-805B/U
 DMWR11-6625-396, Stroboscope TS-805/U

5. How to Locate Repair Parts

a. When National stock number or part number is unknown:

(1) *First.* Using the table of contents, determine the functional group within which the repair part belongs. This is necessary since illustrations are prepared for functional groups, and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the repair part belongs.

(3) *Third.* Identify the repair part on the illustration and note the illustration figure and item number of the repair part.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known:

(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in ascending NSN sequence, followed by a list of part numbers in ascending alphanumeric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations.

(Not applicable)

(Next printed page is 5)

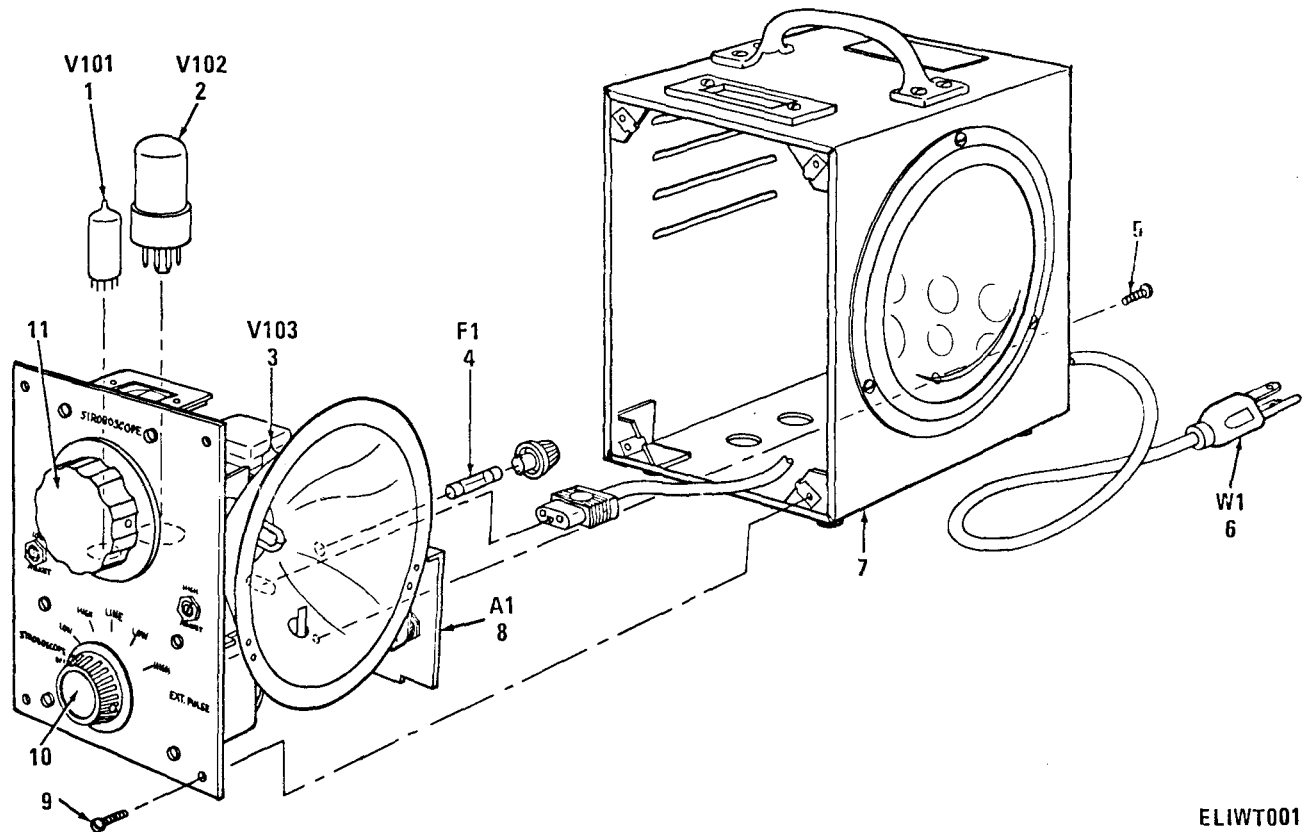


Figure 1. Stroboscope TS-805B/U.

SECTION II REPAIR PARTS LIST

(1)		(2)	(3)	(5)	(6)	(7)	(8)
ILLUSTRATION					DESCRIPTION		QTY
(a) FIG NO	(b) TEM NO	SMR CODE	NATIONAL STOCK NUMBER	PART	FSCM	USABLE ON CODE	INC IN UNIT
GROUP: 00 STROBOSCOPETS-805B/U							
1	1	PAHZZ	5960-00-179-444	12A7HC	81349	ELECTRON TUBE	EA 1
1	2	PAHZZ	5960-00-262-0162	65N7W6TA	81349	ELECTRON TUBE	EA 1
1	3	PAHZZ	5960-00-272-9182	6X4WA	81349	ELECTRON TUBE	EA 1
1		PAOZZ	5920-00-280-834	312001	75915	FUSE, CARTRIDGE	EA 1
1	5	XDHZZ		AN508-6-5	88044	SCREW, MACHINE	EA 1
1	6	PAOZZ	6625-00-445-994	51A504	83490	CABLE ASSEMBLY, POWER ELECTRICAL	EA 1
1		XDHHH		51E101	83490	CASE ASSEMBLY, OUTER	EA 1
1		XDHHH		51D102	83490	CHASSIS & FRONT PANEL ASSEMBLY	EA 1
1		XDHZZ		AN508-6-8	88044	SCREW, MACHINE	EA 4
1	1	PAOZZ	5355-00-453-6690	R881-7	86797	KNOB	EA 1
1	11	PAOZZ		R8811	86797	KNOB	EA 1