

TECHNICAL MANUAL

DIRECT SUPPORT AND

GENERAL SUPPORT MAINTENANCE

INCLUDING DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS

FOR

LASER TARGET

DESIGNATOR TEST SET

AN/PAM-1

4931-01-040-3117

LASER TARGET DESIGNATOR SYSTEM

HEADQUARTERS, DEPARTMENT OF THE ARMY

DECEMBER 1984

TECHNICAL MANUAL

No. 9-4931-599-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C., 5 December 1984

Direct Support and General Support Maintenance
(Including Depot Maintenance Repair Parts and Special Tools)

FOR

LASER TARGET DESIGNATOR TEST SET

AN/PAM-1

4931-01-040-3117

(LASER TARGET DESIGNATOR SYSTEM)

Current as of 22 August 1984

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, U. S. Army Missile Command, ATTN: AMSMI-SNPS, Redstone Arsenal, AL 35898-5238. A reply will be furnished to you.

Table of Contents

		Page	Illus Figure
Section	I. Introduction	1	
	II. Repair parts list	II-1	
Group			
0010	..Target Designator Test Set Laser AN/PAM-1, 13034400	II-1	1
0100	..MX-9654/PAM-1 Test Adapter, 13034420	II-1	2
0200	..SM-712/PAM-1 Transmitter Simulator, 13034410.....	II-2	3
0300	...Control Panel Assembly, 13034409	II-2	4
0400	..Test Set, Adapter Assembly, 13033994.....	II-3	5
9998	..Bulk Material.....	II-3	-

*This manual supersedes TM 9-4931-599-34P, dated 8 March 1980.

Section	III. Special Tools List (Not Applicable)	
	IV. Illustrations	IV-1
	V. NSN, Part No. Index	I-1

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of direct support and general support maintenance including depot maintenance repair of the Target Designator Test Set Laser AN/PAM-1. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source maintenance recoverability (SMR) Codes.

2. General.

In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence.

b. Section III. Special Tools List. Not applicable.


c. Section IV. Illustrations. A series of exploded views of assemblies and subassemblies arranged in functional group and figure number sequence. All exploded parts are identified with callout numbers placed in clockwise sequence. These exploded views reflect repair parts plus those parts which must be removed in the process of disassembly for replacement or repair of the authorized item.

c. Section V. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listing. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) Code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

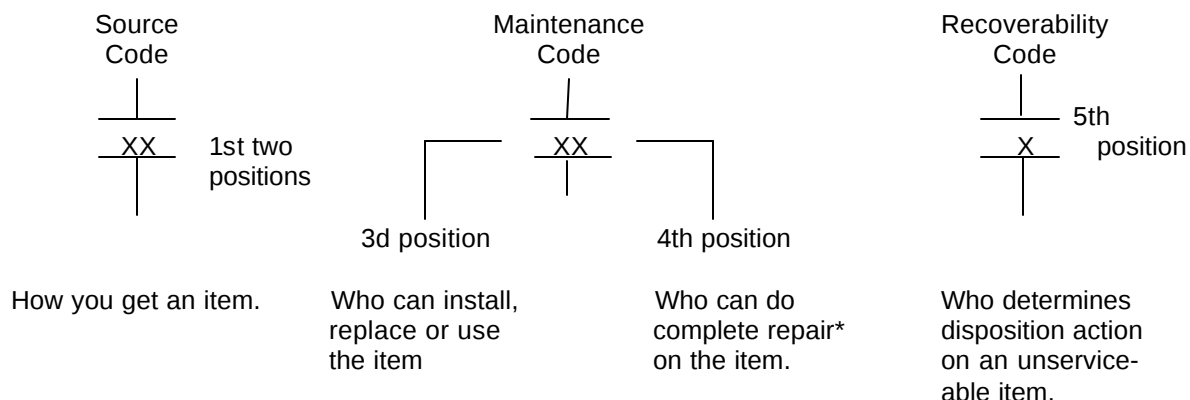

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how you get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow:

Code

Explanation

PA
PB
PC**
PD
PE
PF
PG

Stocked items; use the applicable SSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR Code.

****NOTE: Items coded PC are subject to deterioration.**

KD
KF
KB

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR Code. The complete kit must be requisitioned and applied.

MO-(Made at Org Level)
MF-(Made at DS Level)
MH-(Made at GS Level)
ML-(Made at Specialized Repair Act (SRA))
MD-(Made at Depot)

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by part number in the DESCRIPTION AND USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR Code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.