TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

COMPRESSOR, ROTARY; AIR SKID MOUNTED; DIESEL ENGINE DRIVEN, 125 CFM, 100 PSIG (DAVEY MODEL 6M125) NSN 4310-01-043-7604

Approved for public release; distribution is unlimited.

This manual supersedes TM 5-4310-354-24P, dated 29 November 1979, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY

14 JULY 1989

TECHNICAL MANUAL

No. 5-4310-354-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 14 July 1989

Organizational, Direct Support and General Support Maintenance Repair Parts and Special Tools List for COMPRESSOR, ROTARY; AIR, SKID MOUNTED; DIESEL ENGINE DRIVEN, 125 CFM, 100 PSIG (DAVEY MODEL 6M125) NSN 4310-01-043-7604

Current as of 20 April 1989

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT-I-MTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

		Page	Illust/ Figure
Section I.	Introduction	1	
Section II.	Repair Parts List		
Group 01	Air Cleaner	1-1	1
Group 02	Exhaust Muffler	2-1	2
Group 03	Battery Box	3-1	3
Group 04	Hose and Hose Reel	4-1	4
Group 05	Compressor Enclosure	5-1	5
Group 06	Radiator, Hoses, and Drain	6-1	6
Group 07	Fuel Lines, Hoses, and Fittings	7-1	7
Group 08	Air Lines, Hoses, and Fittings	8-1	8
Group 09	Fuel Filter	9-1	9
Group 10	Alternator Assembly	10-1	10
Group 11	Starter Assembly, Engine	11-1	11
Group 12	Oil Cooler, Hoses, and Fittings	12-1	12
Group 13	Switch Assembly, Speed	13-1	13
Group 14	Engine Assembly		
	Fuel Injection Nozzles and Fuel Transfer Pump	14-1	14
	Fuel Injection Pump	15-1	15
	Cooling Fan, Inlet Pipe, Bypass Tube, and Water Pump Assembly	16-1	16
	Thermostat and Housing	17-1	17
	Overspeed Drive Adapter	18-1	18
	Engine Water Temperature Switch	19-1	19
	Exhaust Manifold	20-1	20

*This manual supersedes TM 5-4310-354-24P, dated 29 November 1979, including all changes.

		Page	Illust/ Figure
Group 14	Intake Manifold	21-1	21
	Valve Cover, Rocker Arm, Cylinder Head, and Valves	22-1	22
	Oil Pan, Seal, and Drain	23-1	23
	Oil Pump Assembly	24-1	24
	Flywheel, Ring Gear, and Flywheel Housing	25-1	25
	Timing Gear Cover, Timing Gears, and Gear Housing	26-1	26
	Connecting Rod, Bearings, Piston, and Piston Rings	27-1	27
	Crankshaft and Main Bearings	28-1	28
	Camshaft and Camshaft Bearings	29-1	29
Group 14	Cylinder Block and Dipstick	30-1	30
	Engine Oil Filter	31-1	31
Group 15	Pneumatic Equipment		
	Air Compressor Assembly	32-1	32
	Compressor Oil Filter and Thermal Bypass Assembly	33-1	33
	Oil Separator Group	34-1	34
	Minimum Pressure Valve Assembly	35-1	35
Group 16	Instrument Panel Assembly		
	Instrument Panel Wire Assemblies	36-1	36
	Instrument Panel Assembly	37-1	37
	Tachometer Cable and Drive	38-1	38
	Quick-Start Assembly	39-1	39
Group 17	Speed Control	40-1	40
	Blowdown Valve Assembly	41-1	41
	Air Pressure Regulator Assembly	42-1	42
Group 18	Fuel Tank Assembly	43-1	43
Group 19	Battery Cables and Battery	44-1	44
Group 20	Skid and Frame	45-1	45
	Engine Vibration Mounts	46-1	46
Section III.	Special Tools List (Not Applicable)		
Section IV.	National Stock Number and Part Number Index		
	Cross Reference Indexes		
	National Stock Number Index	I-1	
	Part Number Index	I-7	
	Figure and Item Number Index	I-29	

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of operator, organizational and direct support of the CCR Nozzle Assembly. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross-references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

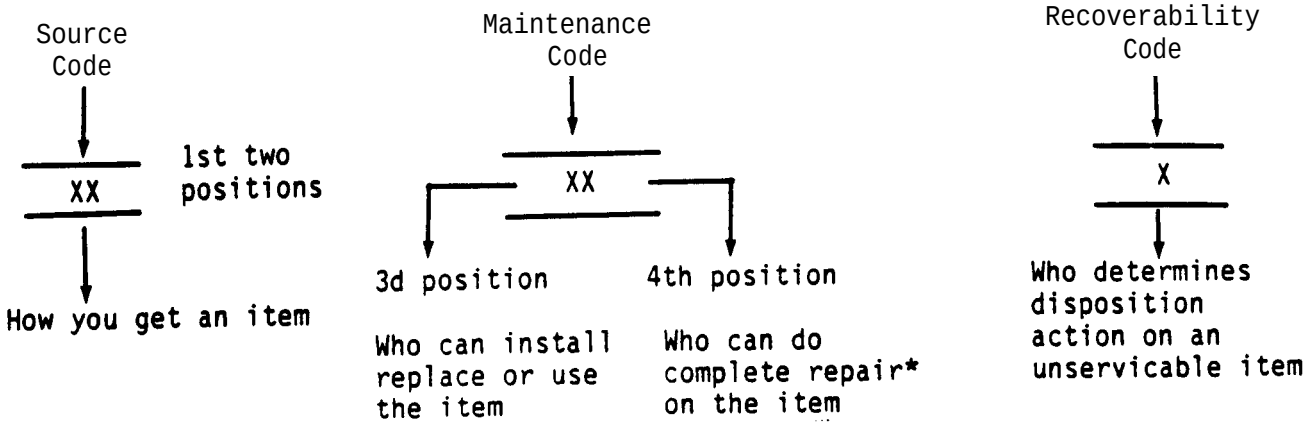

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. ** NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

Code	Explanation
MO--(Made at org. AVUM Level MF--(Made at DS/ AVUM Level MH--(Made at GS Level) ML--Made at Specialized Repair Activity (SRA)) MD--(Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.

	Explanation
AO--(Assembled by org/AVUM Level) AF--(Assembled by DS/AVIM Level) AH--(Assembled by GS Category) AL--(Assembled by SRA) AD--(Assembled by Depot)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.

Code	Explanation
XA	DO not requisition an "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
XB	If an "XB" item is not available from salvage, order it using the FSCM and part number given.
XC	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
XD	Item is not stocked. Order an "XD"-coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) Maintenance Code. Maintenance codes tells you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance.

Code	Application/Explanation
C	--Crew or operator maintenance done within organizational or aviation unit maintenance.
O	--Organizational or aviation unit category can remove, replace, and use the item.
F	--Direct support or aviation intermediate level can remove, replace, and use the item.