TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

CRANE, CRAWLER-MOUNTED:
SELF-PROPELLED
NSN 3810-01-145-8288

HARNISCHFEGER CORP MODEL 5060

This manual supersedes TM 5-3810-303-24P, dated 23 May 1988.

Approved for public release; distribution is unlimited,

HEADQUARTERS, DEPARTMENT OF THE ARMY

25 OCTOBER 1993

TECHNICAL MANUAL

TM 5-3810-303-24P*

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., *25 October 1993*

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS) CRANE, CRAWLER-MOUNTED:

SELF-PROPELLED
NSN 3810-01-145-8288

HARNISCHFEGER CORP MODEL 5060

Current as of 30 June 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 *(Recommended Changes to Publications and Blank Forms),* or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I	INTRODUCTION	1	
SECTION II	REPAIR PARTS LISTS	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE MOUNTING	1-1	1
	0101 - CRANKCASE, BLOCK, CYLINDER,HEAD	2-1	
	CYLINDER BLOCK ASSEMBLY	2-1	2
	CYLINDER HEAD	3-1	3
	0102 - CRANKSHAFT	4-1	
	CRANKSHAFT	4-1	4
	CRANKSHAFT PULLEY	5-1	5
	CRANKSHAFT FRONT COVER	6-1	6
	0103 - FLYWHEEL ASSEMBLY	7-1	
	FLYWHEEL ASSEMBLY	7-1	7
	0104 - PISTONS AND CONNECTING RODS	8-1	
	PISTONS AND CONNECTING RODS	8-1	8

*This manual supersedes TM 5-3810-303-24P, dated 23 May 1988.

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
	0105	VALVES. CAMSHAFTS, AND TIMING SYSTEM	9-1	
		ROCKER COVER	9-1	9
		VALVE OPERATING MECHANISM	1-1	10
		CAMSHAFT AND BALANCE SHAFT	11-1	11
		BALANCE WEIGHT COVER	12-1	12
		IDLER GEAR	13-1	13
	0106	ENGINE LUBRICATION SYSTEM	14-1	
		OIL PUMP MOUNTING	14-1	14
		OIL PUMP ASSEMBLY	15-1	15
		OIL FILTER ASSEMBLY	16-1	16
		OIL COOLER	17-1	17
		BREATHER AND OIL SAMPLING VALVE	18-1	18
		OIL PAN	19-1	19
		OIL DISTRIBUTION LINES	20-1	20
		TURBOCHARGER OIL LINES	21-1	21
	0108 -	MANIFOLDS	22-1	
		EXHAUST MANIFOLD	22-1	22
	0109 -	ACCESSORY DRIVING MECHANISMS	23-1	
		ACCESSORY DRIVE	23-1	23
GROUP 03	FUEL SYSTEM			
	0301 -	CARBURETOR, FUEL INJECTOR	24-1	
		FUEL INJECTOR MOUNTING	24-1	24
		INJECTOR ASSEMBLY	25-1	25
	0302 -	FUEL PUMPS	26-1	
		FUEL LINES	26-1	26
		FUEL PUMP	27-1	27
	0304 -	AIR CLEANER	28-1	
		AIR CLEANER	28-1	28
	0305 -	SUPERCHARGER, BLOWER, TURBOCHARGER, OR ALTITUDE COMPENSATOR	29-1	
		AIR INLET HOUSING	29-1	29
		BLOWER DRIVE	30-1	30
		BLOWER ASSEMBLY	31-1	31
		TURBOCHARGER MOUNTING	32-1	32
		TURBOCHARGER	33-1	33
	0306 -	TANKS, LINES, FITTINGS, HEADERS	34-1	
		FUEL TANK	34-1	34
	0308 -	ENGINE SPEED GOVERNOR AND CONTROLS	35-1	
		GOVERNOR MOUNTING	35-1	35
		GOVERNOR SPRING HOUSING	36-1	36
		GOVERNOR HOUSING AND COVER	37-1	37
		GOVERNOR WEIGHT HOUSING ASSEMBLY	38-1	38
		THROTTLE DELAY	39-1	39
		INJECTOR CONTROLS	40-1	40
	0309 -	FUEL FILTERS	41-1	
		FUEL FILTER AND STRAINER	41-1	41
	0311 -	ENGINE STARTING AIDS	42-1	
		STARTING AID	42-1	42
	0312 -	ACCELERATOR, THROTTLE, OR CHOKE CONTROLS	43-1	
		THROTTLE ASSEMBLY	43-1	43
		THROTTLE CONTROL LINKAGE	44-1	44
		THROTTLE CONTROL PEDAL ASSEMBLY	45-1	45

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
GROUP 04	EXHAUST SYSTEM			
	0401 -	MUFFLER AND PIPES	46-1	
		EXHAUST SYSTEM	46-1	46
GROUP 05	COOLING SYSTEM			
	0501 -	RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	47-1	
		RADIATOR MOUNTING	47-1	47
		RADIATOR ASSEMBLY	48-1	48
	0503 -	WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET	49-1	
		WATER MANIFOLD	49-1	49
	0504 -	WATER PUMP	50-1	
		WATER PUMP	50-1	50
	0505 -	FAN ASSEMBLY	51-1	
		FAN MOUNTING	51-1	51
GROUP 06	ELECTRICAL SYSTEM			
	0601 -	GENERATOR, ALTERNATOR	52-1	
		ALTERNATOR MOUNTING	52-1	52
		ALTERNATOR ASSEMBLY	53-1	53
	0603 -	STARTING MOTOR	54-1	
		STARTER MOUNTING	54-1	54
		STARTER ASSEMBLY	55-1	55
	0607 - I	NSTRUMENT OR ENGINE CONTROL PANEL	56-1	
		DIPPER TRIP CONTROL ASSEMBLY	56-1	56
		CIRCUIT BREAKER AND REMOTE INDICATOR	57-1	57
		OPTION CONTROL PANEL	58-1	58
		SIDE CONSOLE ASSEMBLY	59-1	59
		GAGE COLUMN ASSEMBLY	60-1	60
		TACH-HOURMETER	61-1	61
	0609 -	LIGHTS	62-1	
		FLOODLIGHT ASSEMBLY	62-1	62
		MODULE FLOODLIGHT	63-1	63
		FLOODLIGHT	64-1	64
	0610 -	SENDING UNITS AND WARNING SWITCHES	65-1	
		TRANSMITTER AND SENDERS	65-1	65
	0611 -	HORN, SIREN	66-1	
		HORNS	66-1	66
	0612 -	BATTERIES, STORAGE	67-1	
		BATTERY INSTALLATION	67-1	67
	0613 -	HULL OR CHASSIS WIRING HARNESS	68-1	
		MAIN JUMPER WIRING HARNESS	68-1	68
		MAIN MACHINE ELECTRICAL ASSEMBLY	69-1	69
		ENGINE ELECTRICAL SYSTEM	70-1	70
GROUP 07	TRANSMISSION			
	0705 -	TRANSMISSION SHIFTING COMPONENTS	71-1	
		CLUTCH CONTROL ASSEMBLY	71-1	71
		CLUTCH ACTUATOR	72-1	72

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
	0710 -	TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	73-1	
		OUTPUT SHAFT AND FLANGE	73-1	73
		TORQUE CONVERTER ASSEMBLY	74-1	74
		FLEXIBLE DISK AND FLYWHEEL CLUTCH	75-1	75
		CONVERTER	76-1	76
		CONVERTER HOUSING	77-1	77
	0713 -	INTERMEDIATE CLUTCH	78-1	
		INPUT DISCONNECT CLUTCH	78-1	78
	0721 -	COOLERS. PUMPS, MOTORS	79-1	
		CHARGING OIL PUMP	79-1	79
		HYDRAULIC RESERVOIR MOUNTING	80-1	80
		HYDRAULIC RESERVOIR	81-1	81
		HYDRAULIC OIL FILTER	82-1	82
GROUP 09		PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
	0900 -	PROPELLER SHAFTS	83-1	
		TORQUE CONVERTER TO WORM GEAR PROPELLER SHAFT	83-1	83
		ENGINE TO PROPEL PUMP PROPELLER SHAFT	84-1	84
GROUP 13		WHEELS AND TRACKS		
	1305 -	TRACK ASSEMBLY	85-1	
		TRACKS, LINKS. AND SHOES	85-1	85
GROUP 15		FRAME. TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1502 -	COUNTERWEIGHTS	86-1	
		COUNTERWEIGHT	86-1	86
GROUP 18		BODY, CAB, HOOD, AND HULL		
	1801 -	BODY CAB, HOOD, AND HULL ASSEMBLIES	87-1	
		OPERATOR'S CAB SHEET METAL	87-1	87
		OPERATOR'S CAB FOAM INSULATION	88-1	88
		OPERATOR'S MODULE	89-1	89
		CANOPY, ACCESS DOORS, AND RELATED PARTS	90-1	90
		DRUM COVER, HANDRAIL, ACCESS DOORS, AND RELATED PARTS	91-1	91
		LADDERS	92-1	92
	1802 -	FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC.	93-1	
		OPERATOR'S CAB WINDOWS	93-1	93
	1806 -	UPHOLSTERY SEATS, AND CARPETS	94-1	
		SEAT ASSEMBLY	94-1	94
GROUP 22		BODY CHASSIS, AND HULL ACCESSORY ITEMS		
	2202 -	ACCESSORY ITEMS	95-1	
		WINDSHIELD WIPERS	95-1	95
		DEFROSTER FAN	96-1	96
		HEATER	97-1	97
	2210 -	DATA PLATES AND INSTRUCTION HOLDERS	98-1	
		PLATES AND DECALS	98-1	98

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2401 - PUMP AND MOTOR	99-1	
	PUMP DRIVE ASSEMBLY	99-1	99
	PUMP DRIVE MOUNTING	100-1	100
	PROPEL PUMP COMPONENTS	101-1	101
	PROPEL PUMP COMPONENTS, DRIVE SHAFT SIDE	102-1	102
	HYDRAULIC PUMP AND MOUNTING	103-1	103
	PROPEL MOTOR	104-1	104
	MANUAL VALVE	105-1	105
	PROPEL BRAKE	106-1	106
	2402 - MANIFOLD AND/OR CONTROL VALVES	107-1	
	CONTROL VALVE	107-1	107
	SOLENOID VALVE ASSEMBLY	108-1	108
	CRAWLER LIFT AND EXTEND SOLENOID VALVES	109-1	109
	SHUTTLE	110-1	110
	DOUBLE SOLENOID VALVE	111-1	111
	CONTROL VALVES	112-1	112
	COMBINATION SOLENOID VALVE	113-1	113
	HYDRAULIC SWIVEL	114-1	114
	2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	115-1	
	ACCUMULATOR	115-1	115
	CONSOLE VALVE ASSEMBLY RELATED PARTS	116-1	116
	CONSOLE VALVE ASSEMBLY	117-1	117
	THIRD DRUM CONTROL	118-1	118
	2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	119-1	
	MAIN MACHINE HYDRAULIC LINES AND RELATED	119-1	119
	MACHINE HYDRAULIC LINES	120-1	120
	MAIN MACHINE HYDRAULIC LINES, RIGHT SIDE	121-1	121
	MAIN MACHINE HYDRAULIC LINES, LEFT SIDE	122-1	122
	UPPER HYDRAULIC	123-1	123
	UPPER HYDRAULIC LINES	124-1	124
	LOWER HYDRAULIC LINES	125-1	125
	LOWER HYDRAULIC LINES	126-1	126
	THIRD DRUM HYDRAULIC LINES	127-1	127
	BRAKE CONTROL HYDRAULIC LINES	128-1	128
	CAB AND CONSOLE HYDRAULIC LINES, AND COMPONENTS	129-1	129
	CAB AND CONSOLE HYDRAULIC LINES AND, RELATED PARTS	130-1	130
	CAB AND CONSOLE RELATED HYDRAULIC HOSE, AND TUBE ASSEMBLIES	131-1	131
	HYDRAULIC FILTER	132-1	132
	HIGH PRESSURE HYDRAULIC FILTER	133-1	133
	2407 - HYDRAULIC CYLINDERS	134-1	
	CLUTCH HYDRAULIC CYLINDER	134-1	134
	BOOM HOIST HYDRAULIC CYLINDER	135-1	135
	MAIN BRAKE HYDRAULIC CYLINDER	136-1	136
	BOOM HOIST BRAKE HYDRAULIC CYLINDER	137-1	137
	PLANETARY BRAKE HYDRAULIC CYLINDER	138-1	138
	CRAWLER EXTEND HYDRAULIC CYLINDER	139-1	139
	2408 - LIQUID TANKS OR RESERVOIRS	140-1	
	HYDRAULIC OIL RESERVOIR	140-1	140

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
GROUP 74	CRANES, SHOVELS, AND EARTHMOVING EQUIPMENT COMPONENTS			
	7401 -	CRANE	141-1	
		IDLER SHEAVE	141-1	141
		BOOM POINT SHEAVE	142-1	142
		UPPER SPREADER ASSEMBLY	143-1	143
		CABLE GUIDE ASSEMBLY	144-1	144
		ROLLER ASSEMBLY	145-1	145
		ROPE ASSEMBLY	146-1	146
	7402 -	HOIST	147-1	
		DRUM TURN INDICATOR	147-1	147
		MAIN BRAKE ASSEMBLY	148-1	148
		BOOM HOIST BRAKE AND PAWL	149-1	149
		MAIN HOIST PAWL ASSEMBLY	150-1	150
		THIRD DRUM INSTALLATION	151-1	151
		BRAKE DRUM PLANETARY BRAKE	152-1	152
		THIRD DRUM BRAKE	153-1	153
		BRAKE CONTROLS	154-1	154
	7403 -	SWINGER	155-1	
		SWING BRAKE ASSEMBLY	155-1	155
	7404 -	ELECTRICAL CONTROLS	156-1	
		LOAD MOMENT DEVICE	156-1	156
	7411 -	CRANE DRAGLINE OR CLAMSHELL ATTACHMENTS	157-1	
		BOOM BASE ASSEMBLY	157-1	157
		THREE SHEAVE HOOK BLOCK	158-1	158
		BOOM BACKSTOP	159-1	159
		BOOM ANGLE INDICATOR	160-1	160
		INDICATOR ELECTRICAL CONNECTIONS	161-1	161
	7413 -	PILE DRIVE ATTACHMENT	162-1	
		PILE DRIVER LEAD	162-1	162
	7414 -	BASE DECK	163-1	
		CATWALK AND REVOLVING FRAME	163-1	163
		PLATFORM ASSEMBLY	164-1	164
		LOWER FINAL ASSEMBLY	165-1	165
	7415 -	CLUTCH	166-1	
		BOOM HOIST CLUTCH ASSEMBLY	166-1	166
		THIRD DRUM CLUTCH	167-1	167
		MAIN DRUM CLUTCH, RIGHT-HAND AND LEFT-HAND	168-1	168
		SWING CLUTCH ASSEMBLY RIGHT-HAND AND LEFT-HAND	169-1	169
	7416 -	SHAFTS	170-1	
		MAIN DRUM SHAFT	170-1	170
		PLANETARY BRAKEDRUM	171-1	171
		WORM SHAFT	172-1	172
		VERTICAL SWING SHAFT	173-1	173
		WORM WHEEL, BOOM HOIST DRUM. AND PLANETARY SHAFT	174-1	174
		HORIZONTAL SWING SHAFTS	175-1	175
		INTERMEDIATE SWING SHAFT	176-1	176
	7419 -	TURNTABLE	177-1	
		SWING LOCK ASSEMBLY	177-1	177
	7420 -	MACHINERY GEAR CASE OR FRAME	178-1	
		CHAIN AND GEAR HOUSING	178-1	178
	7422 -	MACHINERY MECHANISM CONTROLS	179-1	
		SWING CONSOLE ASSEMBLY	179-1	179

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
	7423 -	GANTRY	180-1	
		GANTRY	180-1	180
		LOWER SPREADER	181-1	181
	7424 -	CRAWLER BED. FRAME, AND RING GEAR	182-1	
		SLEWING RIM AND CRAWLER STEP	182-1	182
	7425 -	PROPEL AND STEERING MECHANISM	183-1	
		PROPEL ASSEMBLY	183-1	183
		IDLER SPROCKET	184-1	184
		DRIVE SPROCKET	185-1	185
		CRAWLER TRACK ROLLER	186-1	186
		GEARBOX	187-1	187
	7427 -	MISCELLANEOUS VALVES	188-1	
		PRESSURE REGULATING VALVE	188-1	188
		MANUAL BRAKE VALVE	189-1	189
GROUP 94	REPAIR KITS			
	9401 -	REPAIR KITS	KITS-1	
		REPAIR KITS	KITS-2	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS			
	9501 -	BULK MATERIEL	BULK-1	
		BULK MATERIEL	BULK-1	BULK
SECTION III	SPECIAL TOOLS (NOT APPLICABLE)			
SECTION IV	CROSS-REFERENCE INDEXES			
		NATIONAL STOCK NUMBER INDEX	I-1	
		PART NUMBER INDEX	I-40	
		FIGURE AND ITEM NUMBER INDEX	I-131	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment CTMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Crawler-Mounted Crane. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as Indicated by the source, maintenance and recoverability (SMR) codes.

2. General

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List*. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing In the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number Index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition Instructions, as shown in the following breakout:

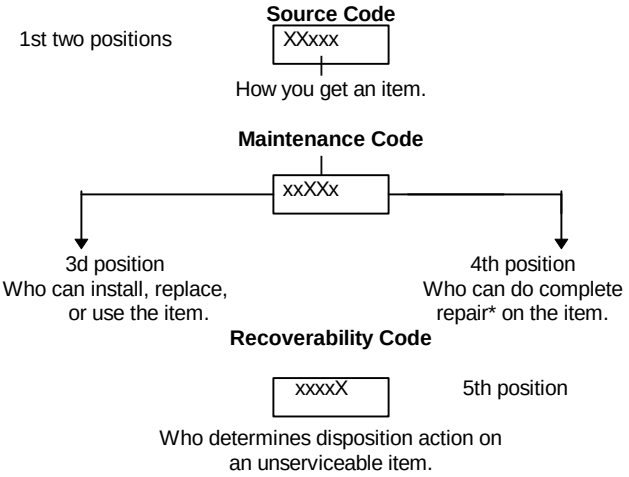

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment In order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end Item/equipment. Explanations of source codes follows: