TECHNICAL MANUAL HEADQUARTERS

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

TRUCK, FORKLIFT: ELECTRIC MOTOR DRIVEN, SOLID RUBBER TIRES, 4,000 POUND CAPACITY

ARMY MODEL MHE-196
BAKER MODEL FTD-040-EE

NSN 3930-00-709-6342 (100 IN. LIFT)
NSN 3930-00-709-6341 (130 IN. LIFT)
NSN 3930-00-709-6358 (144 IN. LIFT)

This manual supersedes TM 10-3930-257-20P, dated 6 May 1970 and TM 10-3930-257-35P, dated 6 May 1970, and all changes.

Approved for public release; distribution is unlimited.

H E A D Q U A R T E R S , D E P A R T M E N T O F T H E A R M Y
J U L Y 1 9 9 3

TECHNICAL MANUAL

TM 10-3930-257-24P*

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., *30 July 1993*

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

TRUCK, FORKLIFT: ELECTRIC MOTOR DRIVEN, SOLID RUBBER TIRES, 4,000 POUND CAPACITY

ARMY MODEL MHE-196
BAKER MODEL FTD-040-EE

NSN 3930-00-709-6342 (100 IN. LIFT)
NSN 3930-00-709-6341 (130 IN. LIFT)
NSN 3930-00-709-6358 (144 IN. LIFT)

Current as of 9 March 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, Ml 48397-5000. A reply will be furnished to you.

Approved for public release; distribution Is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 03	FUEL SYSTEM		
	0312 - ACCELERATOR. THROTTLE, OR CHOKE CONTROLS	1-1	
	ACCELERATOR PEDAL	1-1	1
GROUP 06	ELECTRICAL SYSTEM		
	0608 - MISCELLANEOUS ITEMS	2-1	
	MISCELLANEOUS ELECTRICAL COMPONENTS	2-1	2
	0609 - LIGHTS	3-1	
	STOPLIGHT-TAILLIGHT ASSEMBLY	3-1	3
	HEADLIGHT ASSEMBLY	4-1	4

*** This manual supersedes TM 10-3930-257-20P, dated 6 May 1970 and TM 10-3930-257-35P dated 6 May 1970, and al changes.**

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0611 - HORN, SIREN	5-1	
	HORN BUTTON AND CONNECTIONS	5-1	5
	HORN AND MOUNTING HARDWARE	6-1	6
	0612 - BATTERIES, STORAGE	7-1	
	BATTERY COMPARTMENT COMPONENTS	7-1	7
GROUP 08	TRANSFER, FINAL DRIVE, PLANETARY, AND DROP GEARBOX ASSEMBLIES		
	0801 - POWER TRANSFER, FINAL DRIVE, PLANETARY, OR DROP GEARBOX ASSEMBLIES	8-1	
	MECHANICAL ADAPTER	8-1	8
GROUP 10	FRONT AXLE		
	1000 - FRONT AXLE ASSEMBLY	9-1	
	DRIVE AXLE AND RELATED COMPONENTS	9-1	9
	1002 - DIFFERENTIAL	10-1	
	DIFFERENTIAL, FRONT	10-1	10
GROUP 11	REAR AXLE		
	1100 - REAR AXLE ASSEMBLY	11-1	
	REAR AXLE ASSEMBLY	11-1	11
	1104 - STEERING, SIDESHIFT, AND WHEEL LEANING MECHANISM	12-1	
	KINGPIN AND RELATED PARTS	12-1	12
GROUP 12	BRAKES		
	1201 - HANDBRAKES	13-1	
	HANDBRAKE	13-1	13
	1202 - SERVICE BRAKES	14-1	
	SERVICE BRAKES AND RELATED PARTS	14-1	14
	1204 - HYDRAULIC BRAKE SYSTEM	15-1	
	WHEEL CYLINDER AND MOUNTING HARDWARE	15-1	15
	MASTER CYLINDER AND MOUNTING HARDWARE	16-1	16
	BRAKE LINES AND FITTINGS	17-1	17
	1206 - MECHANICAL BRAKE SYSTEM	18-1	
	BRAKE PEDAL AND RELATED PARTS	18-1	18
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	19-1	
	FRONT WHEEL ASSEMBLY COMPONENTS	19-1	19
	REAR WHEEL ASSEMBLY COMPONENTS	20-1	20
	1313 - TIRES, TUBES, TIRE CHAINS	21-1	
	TIRES	21-1	21
GROUP 14	STEERING		
	1401 - MECHANICAL STEERING GEAR ASSEMBLY	22-1	
	STEERING GEAR AND RELATED COMPONENTS	22-1	22
	STEERING SHAFT AND COLUMN COMPONENTS	23-1	23
	DRAG LINK AND TIE-ROD	24-1	24
	TIE-ROD RELATED COMPONENTS	25-1	25

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	1410 - HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	26-1	
	HYDRAULIC STEERING PUMP ASSEMBLY	26-1	26
	POWER STEERING PUMP MOTOR	27-1	27
	POWER STEERING PUMP MOTOR. EXPLODED VIEW	28-1	28
	1411 - HOSES, LINES, FITTINGS	29-1	
	POWER STEERING HOSES AND FITTINGS	29-1	29
GROUP 18	BODY. CAB, HOOD, AND HULL		
	1801 - BODY, CAB, HOOD,. AND HULL ASSEMBLIES	30-1	
	BODY RELATED PARTS	30-1	30
	1806 - UPHOLSTERY SEATS. AND CARPETS	31-1	
	SEAT	31-1	31
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2401 - PUMP AND MOTOR	32-1	
	HYDRAULIC PUMP MOTOR	32-1	32
	HYDRAULIC PUMP MOTOR, EXPLODED VIEW	33-1	33
	HYDRAULIC PUMP	34-1	34
	2402 - MANIFOLD AND/OR CONTROL VALVES	35-1	
	DIRECTIONAL CONTROL VALVE	35-1	35
	2404 - TILT CYLINDERS AND TILT CRANK	36-1	
	TILT CYLINDER ASSEMBLY	36-1	38
	2405 - MAST COLUMN	37-1	
	HOIST CYLINDER ASSEMBLY	37-1	37
	MAST COLUMN COMPONENTS	38-1	38
	2408 - STRAINERS, FILTERS. LINES. AND FITTINGS. ETC	39-1	
	HYDRAULIC LINES AND FITTINGS	39-1	39
	HYDRAULIC OIL FILTER	40-1	40
GROUP 40	ELECTRIC MOTORS AND GENERATORS		
	4000 - MAJOR ASSEMBLAGE: MOTOR GENERATOR AND ROTATING EXCITER ASSEMBLIES	41-1	
	TRAVELING MOTOR AND RELATED PARTS	41-1	41
	4002 - STATOR ASSEMBLIES .	42-1	
	TRAVELLING MOTOR COMPONENTS	42-1	42
	4003 - BRUSH HOLDERS	43-1	
	TRAVELING MOTOR BRUSHES AND RELATED COMPONENTS	43-1	43
	4011 - CIRCUIT BREAKERS. CUTOUTS. FUSES, AND FUSEHOLDERS	44-1	
	FUSEHOLDER ASSEMBLY	44-1	44
	4012 - SWITCHES	45-1	
	DIRECTIONAL SWITCH ASSEMBLY	45-1	45
	4014 - RESISTORS	46-1	
	RESISTORS AND RELATED PARTS	46-1	46
GROUP 42	ELECTRICAL EQUIPMENT		
	4202 - ELECTRICAL CONTROLS	47-1	
	ACCELERATING RELAY (1)	47-1	47
	ACCELERATING RELAY (2)	48-1	48
	FIELD WEAKENING RELAY.	49-1	49

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
	4202 -	ELECTRICAL CONTROLS (Con't)	50-1	
		REVERSING RELAY	50-1	50
		MAIN PUMP RELAY	51-1	51
		POWER STEERING RELAY	52-1	52
		ELECTRICAL CONTROL BOX	53-1	53
		ACCELERATOR LEVEL SWITCH	54-1	54
GROUP 94	REPAIR KITS			
	9401 -	REPAIR KITS	KITS-1	
		REPAIR KITS	KITS-1	KIT
SECTION III.	SPECIAL TOOLS (NOT APPLICABLE)			
SECTION IV.	CROSS-REFERENCE INDEXES			
		NATIONAL STOCK NUMBER INDEX	I-1	
		PART NUMBER INDEX	I-7	
		FIGURE AND ITEM NUMBER INDEX	I-30	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Forklift Truck. It authorizes the requisitioning, Issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List Is18 divided Into the following sections:

a. *Section II. Repair Parts List.* A 118ist of spares and repair parts authorized by this RPSTL for use In the performance of maintenance. The list also Includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts In each group listed In ascending figure and Item number sequence. Bulk materials are listed In Item name sequence. Repair kits are 118isted separately In their own functional group within Section II. Repair parts for reparable special tools are also listed In the section. Items listed are shown on the associated Illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) Information In DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV Cross-reference Indexes.* A list, In National Item Identification Number (NIIN) sequence, of all National stock numbered Items appearing In the listing, followed by a list in alphanumeric sequence of all part numbers appearing In the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and Item number Index lists figure and Item numbers In alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to Identify items called out In the Illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code Is a 5.positlon code containing supply/requisitioning Information, maintenance category authorization criteria, and disposition Instructions, as shown In the following breakout:

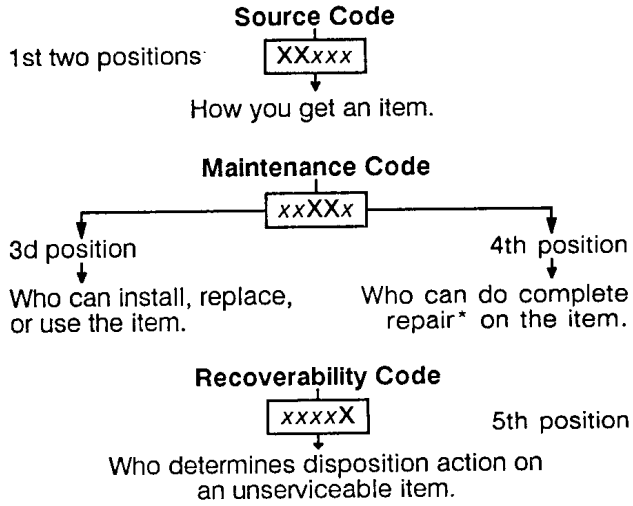

**Complete Repair*: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair' function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: