TM 10-3930-621-24P

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

TRUCK, LIFT, FORK: GED, SOLID RUBBER TIRED WHEELS, 4000 LB CAPACITY, 180 IN. LIFT, ARMY MODEL MHE 209 (NSN 3930-00-459-5948)

ALLIS-CHALMERS MODEL F40-24PS

AND

100 IN. LIFT, ARMY MODEL MHE 224 (NSN 3930-00-165-4102)

ALLIS-CHALMERS MODEL F40-24PS100

This manual supersedes TM 10-3930-621-20P, dated 7 June 1983 and TM 10-3930-621-34P, dated 2 June 1983, and all changes.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

AUGUST 1992

TECHNICAL MANUAL

*TM 10-3930-621-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., *26 August 1992*

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

TRUCK, LIFT FORK: GED, SOLID RUBBER TIRED WHEELS, 4000 LB CAPACITY, 180 IN. LIFT, ARMY MODEL MHE 209 (NSN 3930-00-459-5948)

ALLIS-CHALMERS MODEL F40-24PS

AND

100 IN. LIFT, ARMY MODEL MHE 224 (NSN 3930-00-165-4102)

ALLIS-CHALMERS MODEL F40-24PS100

Current as of 14 February 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 *(Recommended Changes to Publications and Blank Forms),* or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE, MOUNTS, AND LIFTING EYE	1-1	1
	ENGINE AND ENGINE MOUNTS FOR P/N F163 08554	2-1	2

*** This manual supersedes TM 10-3930-621-20P dated 7 June 1983 and TM 10-3930-621-34P, dated 2 June 1983, and all changes.**

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	3-1	
ENGINE BLOCK AND RELATED PARTS	3-1	3
ENGINE BLOCK AND RELATED PARTS FOR ENGINE P/N F163 08554	4-1	4
CYLINDER HEAD AND RELATED PARTS	5-1	5
CYLINDER HEAD AND RELATED PARTS FOR ENGINE P/N F163 08554	6-1	6
0102 - CRANKSHAFT	7-1	
CRANKSHAFT	7-1	7
CRANKSHAFT FOR ENGINE P/N F163 08554	8-1	8
0103 - FLYWHEEL ASSEMBLY	9-1	
FLYWHEEL ASSEMBLY AND HOUSING.	9-1	9
FLYWHEEL AND HOUSING ASSEMBLY FOR ENGINE P/N F163 08554	10-1	10
0104 - PISTONS AND CONNECTING RODS	11-1	
PISTONS AND CONNECTING RODS	11-1	11
PISTONS AND CONNECTING RODS FOR ENGINE P/N F163 08554	12-1	12
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM	13-1	
VALVE COVERS	13-1	13
VALVE COVERS FOR ENGINE P/N F163 08554	14-1	14
TIMING GEAR COVER AND RELATED PARTS	15-1	15
TIMING GEAR COVER AND RELATED PARTS FOR ENGINE P/N F163 08554	16-1	16
CAMSHAFT, VALVES, TIMING GEAR, AND RELATED PARTS	17-1	17
CAMSHAFT, VALVES, TIMING GEAR, AND RELATED PARTS FOR ENGINE P/N F163 08554	18-1	18
0106 - ENGINE LUBRICATION SYSTEM	19-1	
OIL FILTER, LINES, AND RELATED PARTS	19-1	19
OIL FILTER. LINES, AND RELATED PARTS FOR ENGINE P/N F163 08554	20-1	20
OIL DIPSTICK	21-1	21
OIL DIPSTICK FOR ENGINE P/N F163 08554	22-1	22
OILFILLER	23-1	23
OIL FILLER FOR ENGINE P/N F163 08554	24-1	24
OIL PAN	25-1	25
OIL PAN FOR ENGINE P/N F163 08554	26-1	26
OIL PUMP	27-1	27
OIL PUMP FOR ENGINE P/N F163 08554	28-1	28
0108 - MANIFOLDS	29-1	
MANIFOLD AND RELATED PARTS	29-1	29
MANIFOLD AND RELATED PARTS FOR ENGINE P/N F163 08554	30-1	30

GROUP 03 FUEL SYSTEM

0301 - CARBURETOR, FUEL INJECTOR	31-1	
CARBURETOR..	31-1	31
CARBURETOR FOR ENGINE PIN F163 08554	32-1	32
0302 - FUELPUMPS	33-1	
FUEL PUMP	33-1	33
FUEL PUMP FOR ENGINE P/N F163 08554	34-1	34
0304 - AIRCLEANER	35-1	
AIR CLEANER (MODEL MHE 209)	35-1	35
AIR CLEANER CONNECTIONS FOR ENGINE P/N F163 08554	36-1	36
AIR CLEANER (MODEL MHE 224)	37-1	37
0306 - TANKS, LINES, FITTINGS, HEADERS	38-1	
FUEL TANK (MODEL MHE 209)	38-1	38
FUEL TANK (MODEL MHE 224)	39-1	39

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0306 - ENGINE SPEED GOVERNOR AND CONTROLS	40-1	
	GOVERNOR AND RELATED PARTS	40-1	40
	GOVERNOR, EXPLODED VIEW	41-1	41
	GOVERNOR AND RELATED PARTS FOR ENGINE P/N F163 08554	42-1	42
	0312 - ACCELERATOR, THROTTLE, OR CHOKE CONTROLS	43-1	
	ACCELERATOR PEDAL, LINKAGE, AND RELATED PARTS	43-1	43
	CHOKE CONTROL	44-1	44
GROUP 04	EXHAUST SYSTEM		
	0401 - MUFFLER AND PIPES	45-1	
	MUFFLER, EXHAUST PIPES, AND RELATED PARTS	45-1	45
	EXHAUST PIPE FOR ENGINE P/N F163 08554	46-1	46
GROUP 05	COOLING SYSTEM		
	0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	47-1	
	RADIATOR AND RELATED PARTS	47-1	47
	RADIATOR FOR ENGINE P/N F163 08554	48-1	48
	RADIATOR GRILLE AND RELATED PARTS	49-1	49
	0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET	50-1	
	THERMOSTAT	50-1	50
	THERMOSTAT FOR ENGINE P/N F163 08554	51-1	51
	RADIATOR HOSES	52-1	52
	RADIATOR HOSES FOR ENGINE P/N F163 08554	53-1	53
	0504 - WATER PUMP	54-1	
	WATER PUMP AND RELATED PARTS	54-1	54
	WATER PUMP AND RELATED PARTS FOR ENGINE P/N F163 0854	55-1	55
	0505 - FAN ASSEMBLY	56-1	
	FAN AND RELATED PARTS	56-1	56
	FAN ASSEMBLY AND RELATED PARTS FOR ENGINE P/N F163 08554	57-1	57
GROUP 06	ELECTRICAL SYSTEM		
	0601 - GENERATOR, ALTERNATOR	56-1	
	ALTERNATOR	56-1	58
	ALTERNATOR, EXPLODED VIEW	59-1	59
	ALTERNATOR BRACKET FOR ENGINE P/N F163 08654	60-1	60
	0602 - GENERATOR REGULATOR	61-1	
	VOLTAGE REGULATOR	61-1	61
	0603 - STARTING MOTOR	62-1	
	STARTER SOLENOID RELAY	62-1	62
	STARTER	63-1	63
	STARTER FOR ENGINE P/N F163 08554	64-1	64
	0605 - IGNITION COMPONENTS	65-1	
	DISTRIBUTOR	65-1	65
	DISTRIBUTOR FOR ENGINE P/N F163 08554	66-1	66
	IGNITION, COIL, AND CABLE SET	67-1	67
	IGNITION WIRES AND SPARK PLUGS FOR ENGINE P/N F163 08554	66-1	68
	DISTRIBUTOR DRIVE AND RELATED PARTS	69-1	69
	IGNITION CABLE SUPPORT	70-1	70
	0607 - INSTRUMENT OR ENGINE CONTROL PANEL	71-1	
	INSTRUMENT PANEL AND RELATED PARTS	71-1	71

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0608 - MISCELLANEOUS ITEMS	72-1	
	FUSES AND RELATED PARTS	72-1	72
	STOPLIGHT PRESSURE SWITCH	73-1	73
	0609 - LIGHTS	74-1	
	HEADLIGHT, STOPLIGHT, TAILLIGHT, AND RELATED PARTS	74-1	74
	0610 - SENDING UNITS AND WARNING SWITCHES	75-1	
	FUEL TANK TRANSMITTER (MODEL MHE 209)	75-1	75
	FUEL TANK TRANSMITTER (MODEL MHE 224)	76-1	76
	OIL PRESSURE TRANSMITTERS	77-1	77
	SENDING UNIT FOR ENGINE P/N F163 08554	78-1	78
	0611 - HORN,SIREN	79-1	
	HORN BUTTON ASSEMBLY	79-1	79
	HORN	80-1	80
	0612 - BATTERIES. STORAGE	81-1	
	BATTERY AND RELATED PARTS	81-1	81
	0613 - HULL OR CHASSIS WIRING HARNESS	82-1	
	WIRINGHARNESS	82-1	82
GROUP 07	TRANSMISSION		
	0705 - TRANSMISSION SHIFTING COMPONENTS	83-1	
	GEARSHIFT ASSEMBLY	83-1	83
	0708 - TORQUE CONVERTER OR FLUID COUPLING	84-1	
	TORQUE CONVERTER ASSEMBLY AND RELATED PARTS	84-1	84
	0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	85-1	
	TRANSMISSION ASSEMBLY.	85-1	85
	0713 - INTERMEDIATE CLUTCH	86-1	
	CLUTCH ASSEMBLY, FORWARD AND REVERSE	86-1	86
	0714 - SERVO UNIT	87-1	
	TRANSMISSION VALVE ASSEMBLY	87-1	87
	0721 - COOLERS, PUMPS, MOTORS	88-1	
	TRANSMISSION OIL FILTER AND COOLER LINES (MODEL MHE 209)	88-1	88
	TRANSMISSION OIL FILTER AND COOLER LINES (MODEL MHE 224)	89-1	89
	TRANSMISSION CONVERTER PUMP AND RELATED PARTS (MODEL MHE 209)	90-1	90
	TRANSMISSION CONVERTER PUMP AND RELATED PARTS (MODEL MHE 224)	91-1	91
	0726 - BRAKES	92-1	
	INCHING PEDAL AND RELATED PARTS	92-1	92
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
	0900 - PROPELLER SHAFTS	93-1	
	PROPELLER SHAFT ASSEMBLY	93-1	93
	PROPELLER SHAFT FOR ENGINE P/N F163 08554	94-1	94
GROUP 10	FRONT AXLE		
	1000 - FRONT AXLE ASSEMBLY	95-1	
	DRIVE AXLE HOUSING AND SHAFT	95-1	95
	1002 - DIFFERENTIAL	96-1	
	DIFFERENTIAL ASSEMBLY	96-1	96
GROUP 11	REAR AXLE		
	1104 - STEERING, SIDESHIFT, AND WHEEL LEANING MECHANISM	97-1	
	STEERING AXLE ASSEMBLY	97-1	97

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 12	BRAKES		
	1201 - HANDBRAKES	98-1	
	PARKING BRAKE LEVER AND RELATED PARTS	98-1	98
	PARKING BRAKE ASSEMBLY	99-1	99
	1202 - SERVICE BRAKES	100-1	
	SERVICE BRAKES	100-1	100
	1204 - HYDRAULIC BRAKE SYSTEM	101-1	
	WHEEL CYLINDER ASSEMBLY	101-1	101
	MASTER CYLINDER AND RELATED PARTS	102-1	102
	1206 - MECHANICAL BRAKE SYSTEM	103-1	
	BRAKE PEDAL AND RELATED PARTS	103-1	103
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	104-1	
	STEERING WHEEL ASSEMBLY	104-1	104
	DRIVE WHEEL ASSEMBLY	105-1	105
GROUP 14	STEERING		
	1401 - MECHANICAL STEERING GEAR ASSEMBLY	106-1	
	STEERING WHEEL AND STEERING GEAR	106-1	106
	1412 - HYDRAULIC OR AIR CYLINDERS	107-1	
	POWER STEERING CYLINDER AND RELATED PARTS	107-1	107
	POWER STEERING CYLINDER, EXPLODED VIEW	108-1	108
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1501 - FRAME ASSEMBLY	109-1	
	FRAME	109-1	109
	1502 - COUNTERWEIGHTS	110-1	
	COUNTERWEIGHTS AND RELATED PARTS	110-1	110
	1503 - PINTLES AND TOWING ATTACHMENTS	111-1	
	TOWING SHACKLE	111-1	111
GROUP 18	BODY, CAB. HOOD, AND HULL		
	1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	112-1	
	OVERHEAD GUARD (MODEL MHE 209)	112-1	112
	OVERHEAD GUARD (MODEL MHE 224)	113-1	113
	SIDE PANELS AND SEAT SUPPORT (MODEL MHE 209)	114-1	114
	SIDE PANELS AND SEAT SUPPORT (MODEL MHE 224)	115-1	115
	COWLS, FENDERS, AND RELATED PARTS	116-1	116
	1805 - FLOORS, SUBFLOORS, AND RELATED COMPONENTS	117-1	
	FLOORS AND TOE PLATES	117-1	117
	1805 - UPHOLSTERY; SEATS, AND CARPETS	118-1	
	SEAT	118-1	118

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2401 - PUMP AND MOTOR	119-1	
	HYDRAULICPUMP	119-1	119
	HYDRAULIC PUMP DRIVE FOR ENGINE P/N F163 08554	120-1	120
	HYDRAULIC PUMP: EXPLODED VIEW FOR ENGINE P/N F163 08554	121-1	121
	HYDRAULIC PUMP MOUNTING PLATE	122-1	122
	2402 - MANIFOLD AND/OR CONTROL VALVES	123-1	
	HYDRAULIC CONTROL VALVE (MODEL MHE 209)	123-1	123
	HYDRAULIC CONTROL VALVE (MODEL MHE 224)	124-1	124
	2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	125-1	
	HYDRAULIC CONTROL LEVERS (MODEL MHE 209)	125-1	125
	HYDRAULIC CONTROL LEVERS (MODEL MHE 224)	126-1	126
	2404 - TILT CYLINDERS AND TILT CRANK	127-1	
	TILT CYLINDER (MODEL MHE 209)	127-1	127
	TILT CYLINDER (MODEL MHE 224)	126-1	128
	2405 - MASTCOLUMN	129-1	
	LIFTING FORK AND RELATED PARTS	129-1	129
	BACKREST AND CARRIAGE FRAME	130-1	130
	MASTS	131-1	131
	LIFT CYLINDER CLUSTER	132-1	132
	LIFT CYLINDER (MODEL MHE 209).	133-1	133
	2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC.	134-1	
	HYDRAULIC FILTER (MODEL MHE 209)	134-1	134
	HYDRAULIC FILTER (MODEL MHE 224)	135-1	135
	HYDRAULIC LINES AND FITTINGS (MODEL MHE 209)	136-1	136
	HYDRAULIC LINES AND FITTINGS (MODEL MHE 224)	137-1	137
	HYDRAULIC LINES AND FITTINGS FOR ENGINE P/N F163 08554	136-1	138
	2408 - LIQUID TANKS OR RESERVOIRS	139-1	
	HYDRAULIC OIL RESERVOIR	139-1	139
GROUP 47	GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES		
	4702 - GAGES, MOUNTINGS. LINES, AND FITTINGS	140-1	
	TRANSMISSION TEMPERATURE INDICATOR.	140-1	140
GROUP 94	REPAIR KITS		
	9401 - REPAIRKITS	KIT-1	
	REPAIRKITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULKMATERIEL	BULK-1	
	BULKMATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS LISTS (NOT APPLICABLE)		
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-15	
	FIGURE AND ITEM NUMBER INDEX	I-66	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Forklift. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information In DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

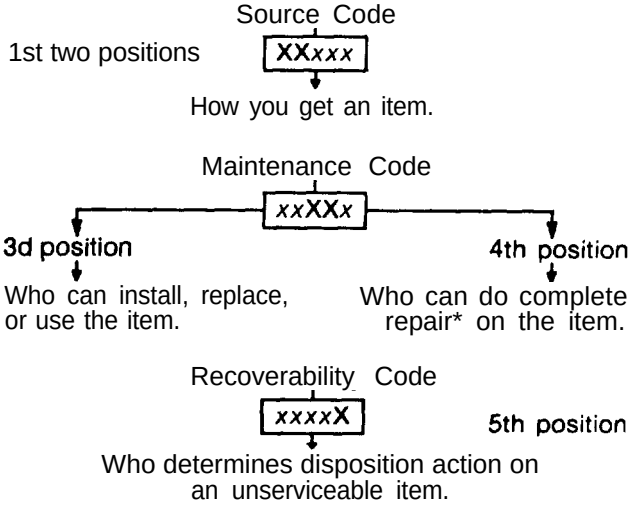

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment In order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: