TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

TRUCK, LIFT, FORK, GASOLINE ENGINE DRIVEN, SOLID RUBBER TIRES, 127 INCH LIFT, 2000 LB CAPACITY
ARMY MODEL MHE-229
CLARK EQUIPMENT CO.
MODEL 2329397
NSN 3930-00-315-9699

This manual supersedes TM 10-3930-632-20P, 10 November 1982 and TM 10-3930-632-34P, 8 November 1982.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY FEBRUARY 1991

TECHNICAL MANUAL

HEADQUARTERS

*TM 10-3930-632-24P DEPARTMENT OF THE ARMY

Washington D.C., 11 February 1991

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST) TRUCK, LIFT, FORK, GASOLINE ENGINE DRIVEN, SOLID RUBBER TIRES, 127 INCH LIFT, 2000 LB CAPACITY ARMY MODEL MHE-229 CLARK EQUIPMENT CO. MODEL 2329397 NSN 3930-00-315-9699

Current as of 22 June 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE AND MOUNTS	1-1	1
	0101 - CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
	ENGINE BLOCK COVERS AND PLUGS	2-1	2
	FILLER BLOCKS	3-1	3
	CYLINDER HEAD	4-1	4

*This manual supersedes TM 10-3930-632-20P, 10 November 1982 and TM 10-3930-632-34P, 8 November 1982 and all changes.

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0102 - CRANKSHAFT	5-1	
	CRANKSHAFT AND RELATED PARTS	5-1	5
	0103 - FLYWHEEL ASSEMBLY	6-1	
	FLYWHEEL AND RELATED PARTS	6-1	6
	0104 - PISTONS, CONNECTING RODS	7-1	
	PISTON, CONNECTING ROD	7-1	7
	0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM	8-1	
	TIMING GEAR COVER AND RELATED PARTS	8-1	8
	VALVE COVER	9-1	9
	VALVES, CAMSHAFTS, TIMING GEAR, AND RELATED PARTS	10-1	10
	0106 - ENGINE LUBRICATION SYSTEM	11-1	
	OIL DIPSTICK AND RELATED PARTS	11-1	11
	ENGINE OIL LINES AND FITTINGS	12-1	12
	OIL FILLER	13-1	13
	OIL PAN AND RELATED PARTS	14-1	14
	OIL PUMP	15-1	15
	0108 - MANIFOLDS	16-1	
	POSITIVE CRANKCASE VENTILATION PARTS	16-1	16
	INTAKE AND EXHAUST MANIFOLD	17-1	17
GROUP 03	FUEL SYSTEM		
	0301 - CARBURETOR, FUEL INJECTOR	18-1	
	CARBURETOR	18-1	18
	0302 - FUEL PUMPS	19-1	
	FUEL PUMP	19-1	19
	0304 - AIR CLEANER	20-1	
	AIR INTAKE SYSTEM	20-1	20
	0306 - TANKS, LINES, FITTINGS, HEADERS	21-1	
	FUEL TANK FITTINGS	21-1	21
	FUEL LINES	22-1	22
	0308 - ENGINE SPEED GOVERNOR AND CONTROLS	23-1	
	ENGINE GOVERNOR	23-1	23
	0309 - FUEL FILTERS	24-1	
	FUEL FILTER	24-1	24
	0312 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS	25-1	
	ACCELERATOR PEDAL AND LINKAGE	25-1	25
	CHOKE CONTROL AND RELATED PARTS	26-1	26
GROUP 04	EXHAUST SYSTEM		
	0401 - MUFFLER AND PIPES	27-1	
	EXHAUST SYSTEM	27-1	27
GROUP 05	COOLING SYSTEM		
	0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	28-1	
	RADIATOR AND RELATED PARTS	28-1	28
	0503 - WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET	29-1	
	THERMOSTAT, HOSES, AND RELATED PARTS	29-1	29

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0504 - WATER PUMP	30-1	
	WATER PUMP HOSE AND RELATED PARTS	30-1	30
	WATER PUMP	31-1	31
	0505 - FAN ASSEMBLY	32-1	
	FAN, BELTS, AND RELATED PARTS	32-1	32
GROUP 06	ELECTRICAL SYSTEM		
	0601 - GENERATOR, ALTERNATOR	33-1	
	GENERATOR	33-1	33
	GENERATOR, EXPLODED VIEW	34-1	34
	0602 - GENERATOR REGULATOR	35-1	
	VOLTAGE REGULATOR AND RELATED PARTS	35-1	35
	0603 - STARTING MOTOR	36-1	
	STARTER	36-1	36
	STARTER, EXPLODED VIEW	37-1	37
	0605 - IGNITION COMPONENTS	38-1	
	DISTRIBUTOR	38-1	38
	IGNITION COIL AND RELATED PARTS	39-1	39
	0607 - INSTRUMENT OR ENGINE CONTROL PANEL	40-1	
	INSTRUMENT PANEL AND INSTRUMENTS	40-1	40
	0608 - MISCELLANEOUS ITEMS	41-1	
	PRESSURE SWITCH AND FUSES	41-1	41
	0609 - LIGHTS	42-1	
	HEADLIGHT ASSEMBLY	42-1	42
	TAILLIGHT ASSEMBLY	43-1	43
	0610 - SENDING UNITS AND WARNING SWITCHES	44-1	
	SWITCHES	44-1	44
	PRESSURE SWITCHES	45-1	45
	FUEL TANK SENDING UNIT	46-1	46
	0611 - HORN, SIREN	47-1	
	HORN BUTTON ASSEMBLY	47-1	47
	HORN	48-1	48
	0612 - BATTERIES, STORAGE	49-1	
	BATTERY AND MOUNTING PARTS	49-1	49
	0613 - HULL OR WIRING HARNESS	50-1	
	ELECTRICAL WIRING	50-1	50
	0615 - RADIO INTERFERENCE SUPPRESSION	51-1	
	CAPACITOR AND RELATED PARTS	51-1	51
GROUP 07	TRANSMISSION		
	0705 - TRANSMISSION SHIFTING COMPONENTS	52-1	
	DIRECTIONAL CONTROL	52-1	52
	0708 - TORQUE CONVERTOR OR FLUID COUPLING	53-1	
	TORQUE CONVERTOR	53-1	53
	0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	54-1	
	TRANSMISSION AND MOUNTING PARTS	54-1	54
	TRANSMISSION, EXPLODED VIEW	55-1	55
	0713 - INTERMEDIATE CLUTCH	56-1	
	REVERSE CLUTCH PACK	56-1	56
	FORWARD CLUTCH PACK	57-1	57

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0714 - SERVO UNIT	58-1	
	CONTROL VALVE AND RELATED PARTS	58-1	58
	CONTROL VALVE, EXPLODED VIEW	59-1	59
	CONTROL VALVE, MISCELLANEOUS PARTS	60-1	60
	0721 - COOLERS, PUMPS, MOTORS	61-1	
	TRANSMISSION OIL LINES	61-1	61
GROUP 10	FRONT AXLE		
	1000 - FRONT AXLE ASSEMBLY	62-1	
	DRIVE AXLE ENDS	62-1	62
	1002 - DIFFERENTIAL	63-1	
	DIFFERENTIAL ASSEMBLY	63-1	63
GROUP 11	REAR AXLE		
	1104 - STEERING, SIDESHIFT AND WHEEL LEANING MECHANISM	64-1	
	STEERING AXLE ASSEMBLY	64-1	64
GROUP 12	BRAKES		
	1201 - HANDBRAKES	65-1	
	PARKING BRAKE LEVER AND RELATED PARTS	65-1	65
	PARKING BRAKE AND RELATED PARTS	66-1	66
	1202 - SERVICE BRAKES	67-1	
	DRIVE AXLE BRAKE ASSEMBLY	67-1	67
	1204 - HYDRAULIC BRAKE SYSTEM	68-1	
	BRAKE LINES AND FITTINGS	68-1	68
	INCHING CYLINDER ASSEMBLY	69-1	69
	MASTER CYLINDER	70-1	70
	1206 - MECHANICAL BRAKE SYSTEM	71-1	
	BRAKE PEDALS AND LINKAGE	71-1	71
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	72-1	
	FRONT WHEEL ASSEMBLY	72-1	72
	REAR WHEEL ASSEMBLY	73-1	73
GROUP 14	STEERING		
	1401 - MECHANICAL STEERING GEAR ASSEMBLY	74-1	
	STEERING GEAR	74-1	74
	STEERING LINKAGE	75-1	75
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1502 - COUNTERWEIGHTS	76-1	
	COUNTERWEIGHT	76-1	76

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 18	BODY, CAB, HOOD AND HULL		
	1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	77-1	
	OVERHEAD GUARD	77-1	77
	BODY, HOODS, AND COVERS	78-1	78
	1806 - UPHOLSTERY, SEATS, AND CARPETS	79-1	
	SEAT	79-1	79
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2401 - PUMP AND MOTOR	80-1	
	HYDRAULIC PUMP	80-1	80
	HYDRAULIC PUMP, EXPLODED VIEW	81-1	81
	2402 - MANIFOLD AND/OR CONTROL VALVES	82-1	
	HYDRAULIC VALVE	82-1	82
	HYDRAULIC VALVE, INLET SECTION	83-1	83
	HYDRAULIC VALVE, OUTLET SECTION	84-1	84
	FLOW CONTROL VALVE	85-1	85
	2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	86-1	
	HYDRAULIC CONTROL LEVERS	86-1	86
	2404 - TILT CYLINDERS AND TILT CRANK	87-1	
	TILT CYLINDER AND MOUNTING	87-1	87
	TILT CYLINDER, EXPLODED VIEW	88-1	88
	2405 - MAST COLUMN	89-1	
	LIFT CARRIAGE BACKREST AND FORKS	89-1	89
	LIFT CHAIN, SHEAVES, AND CARRIER	90-1	90
	HYDRAULIC LIFT CYLINDER	91-1	91
	MAST ASSEMBLY	92-1	92
	2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	93-1	
	HYDRAULIC LINES AND FITTINGS	93-1	93
	HYDRAULIC SUMP FILTER AND BREATHER	94-1	94
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS	KIT-1	
	REPAIR KITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV.	NATIONAL STOCK NUMBER AND PART NUMBER INDEX		
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-10	
	FIGURE AND ITEM NUMBER INDEX	I-41	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Fork Lift Truck . It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s) /figure (s).

b. Section II/. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

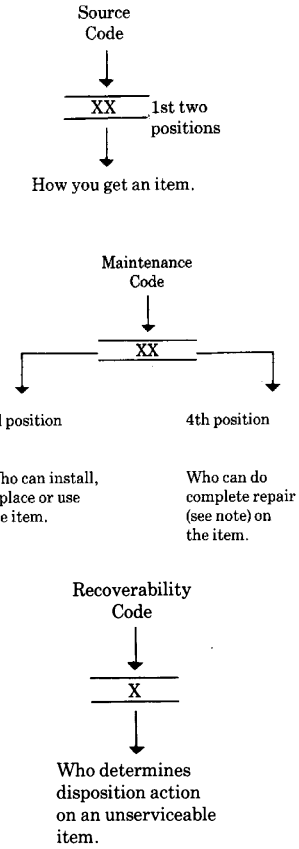

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: