TM10-3930-638-24P

TECHNICAL MANUAL

UNIT MAINTENANCE,
DIRECT SUPPORT
AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS

TRUCK, FORKLIFT, DED, PNEUMATIC TIRE, ARTICULATED FRAME STEER, 4000 LB CAPACITY ROUGH TERRAIN, ARMY MODEL MHE 237 NSN 3930-01-076-4237

J. I. CASE MODEL M4K

This manual supersedes TM 10-3930-638-24P, 28 March 1990

Approved for Public Release; Distribution is Unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY APRIL 1992

TECHNICAL MANUAL

*TM10-3930-638-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D. C., *30 April 1992*

UNIT MAINTENANCE,
DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

TRUCK, FORKLIFT, DED,
PNEUMATIC TIRE, ARTICULATED,
FRAME STEER, 4000 LB CAPACITY
ROUGH TERRAIN, ARMY MODEL MHE 237
NSN 3930-01-076-4237

J. L CASE MODEL M4K

CURRENT AS OF 11 NOVEMBER 1991

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA–MB, Warren, Mi 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		PAGE	ILLUS FIG
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100-ENGINE ASSEMBLY 1-1		
	ENGINE MOUNTING 1-1		1

*This publication supersedes TM 10-3930-638-24P, dated 28 March 1990.

TABLE OF CONTENTS

		PAGE	ILLUS FIG
	0101-CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
	CYLINDER BLOCK ASSEMBLY	2-1	2
	CYLINDER HEAD	3-1	3
	0102-CRANKSHAFT	4-1	
	CRANKSHAFT	4-1	4
	0103-FLYWHEEL ASSEMBLY	5-1	
	FLYWHEEL AND HOUSING	5-1	5
	0104-PISTONS, CONNECTING RODS	6-1	
	PISTON AND CONNECTING RODS	6-1	6
	0105-VALVES, CAMSHAFTS AND TIMING SYSTEM	7-1	
	ROCKER ARMS AND VALVES	7-1	7
	TIMING GEAR COVER AND IDLER GEAR	8-1	8
	CAMSHAFT	9-1	9
	0106-ENGINE LUBRICATION SYSTEM	10-1	
	OIL PUMP	10-1	10
	OIL PAN	11-1	11
	OIL FILTER AND DIPSTICK	12-1	12
	ARMY OIL ANALYSIS PROGRAM (AOAP) KIT	13-1	13
	0108–MANIFOLDS	14-1	
	MANIFOLDS	14-1	14
GROUP 03	FUEL SYSTEM		
	0301-CARBURETOR, FUEL INJECTOR	15-1	
	FUEL INJECTOR LINES	15-1	15
	FUEL INJECTOR	16-1	16
	0302-FUEL PUMPS	17-1	
	FUEL INJECTION PUMP MOUNTING AND GEAR	17-1	17
	FUEL INJECTION PUMP GOVERNOR AND SOLENOID	18-1	18
	FUEL INJECTION PUMP, EXPLODED VIEW	19-1	19
	ELECTRIC FUEL PUMP AND LINES	20-1	20
	0304-AIR CLEANER	21-1	
	AIR CLEANER	21-1	21
	0306-TANKS, LINES, FITTING SAND HEADERS	22-1	
	FUEL TANK AND LINES	22-1	22
	0309-FUEL FILTERS	23-1	
	FUEL STRAINER AND IN-LINE FUEL FILTER	23-1	23
	FUEL FILTERS	24-1	24
	0311-ENGINE STARTING AIDS	25-1	
	QUICK START KIT	25-1	25
	0312–ACCELERATOR, THROTTLE OR CHOKE CONTROLS	26-1	
	ACCELERATOR	26-1	26
GROUP 04	EXHAUST SYSTEM		
	0401-MUFFLER AND PIPES	27-1	
	MUFFLER AND PIPES	27-1	27

TABLE OF CONTENTS

		PAGE	ILLUS FIG
GROUP 05	COOLING SYSTEM		
	0501-RADIATOR, EVAPORATIVE COOLER OR HEAT EXCHANGER	28-1	
	RADIATOR	28-1	28
	0503-WATER MANIFOLDS, HEADERS, THERMOSTATS AND HOUSING GASKET	29-1	
	THERMOSTAT	29-1	29
	0504-WATER PUMP	30-1	
	WATER PUMP	30-1	30
	0505-FAN ASSEMBLY	31-1	
	FAN BLADE	31-1	31
GROUP 06	ELECTRICAL SYSTEM		
	0601-GENERATOR, ALTERNATOR	32-1	
	ALTERNATOR AND MOUNTING	32-1	32
	ALTERNATOR	33-1	33
	0603-STARTING MOTOR	34-1	
	STARTER AND MOUNTING	34-1	34
	STARTER	35-1	35
	0607-INSTRUMENT OR CONTROL PANEL	36-1	
	INSTRUMENT PANEL	36-1	36
	0608-MISCELLANEOUS ITEMS	37-1	
	SLAVE RECEPTACLE	37-1	37
	0609-LIGHTS	38-1	
	FLOOD LIGHTS	38-1	38
	BLACKOUT DRIVING IAMB	39-1	39
	BLACKOUT STOPLIGHT-TAILLIGHT	40-1	40
	STOP AND TAILLIGHT	41-1	41
	0610-SENDING UNITS AND WARNING SWITCHES	42-1	
	SENDING UNITS	42-1	42
	0611-HORN, SIREN	43-1	
	HORN AND BACK-UP ALARM	43–1	43
	0612–BATTERIES, STORAGE	44-1	
	BATTERIES	44-1	44
	0613-HULL OR CHASSIS WIRING HARNESS	45-1	
	FRONT MAIN WIRING HARNESS	45–1	45
	REAR MAIN WIRING HARNESS	46-1	46
GROUP 07	TRANSMISSION		
	0700-TRANSMISSION ASSEMBLY	47-1	
	TRANSMISSION MOUNTING	47-1	47
	0708-TORQUE CONVERTER OR FLUID COUPLING	48-1	
	TORQUE CONVERTER GROUP	48-1	48
	CONVERTER HOUSING	49-1	49

TABLE OF CONTENTS

		PAGE	ILLUS FIG
	0710-TRANSMISSION ASSEMBLY	50-1	
	TRANSMISSION ASSEMBLY (UPPER)	50-1	50
	TRANSMISSION ASSEMBLY (LOWER)	51-1	51
	TRANSMISSION CASE	52-1	52
	0713-INTERMEDIATE CLUTCH	53-1	
	LOW CLUTCH ASSEMBLY	53-1	53
	FORWARD CLUTCH ASSEMBLY	54-1	54
	THIRD CLUTCH ASSEMBLY	55-1	55
	REVERSE AND SECOND CLUTCH ASSEMBLY	56-1	56
	0721-COOLERS, PUMPS, MOTORS	57-1	
	CHARGING PUMP AND MOTOR	57-1	57
	CONTROL VALVE AND MOUNTING	58-1	58
	MODULATION VALVE ASSEMBLY	59-1	59
	TRANSMISSION LINKAGE CONTROLS (FORWARD)	60-1	60
	TRANSMISSION LINKAGE CONTROLS (AFT)	61-1	61
	AXLE DISCONNECT	62-1	62
	TRANSMISSION COOLER AND LINES	63-1	63
GROUP 09	PROPELLER AND PROPELLER SHAFTS		
	0900-PROPELLER SHAFTS	64-1	
	FRONT DRIVE SHAFT ASSEMBLY	64-1	64
	CENTER DRIVE SHAFT ASSEMBLY	65-1	65
	REAR DRIVE SHAFT ASSEMBLY	66-1	66
GROUP 10	FRONT AXLE		
	1000-FRONT AXLE ASSEMBLY	67-1	
	FRONT AXLE ASSEMBLY AND MOUNTING	67-1	67
	1002–DIFFERENTIAL	68-1	
	FRONT AXLE DIFFERENTIAL CARRIER ASSEMBLY	68-1	68
GROUP 11	REAR AXLE		
	1100-REAR AXLE ASSEMBLY	69-1	
	REAR AXLE ASSEMBLY AND MOUNTING	69-1	69
	1102-DIFFERENTIAL	70-1	
	REAR AXLE DIFFERENTIAL CARRIER ASSEMBLY	70-1	70
GROUP 12	BRAKES		
	1201-HAND BRAKES	71-1	
	PARKING BRAKE LINKAGE	71-1	71
	PARKING BRAKE ASSEMBLY	72-1	72
	1202-SERVICE BRAKES	73-1	
	SERVICE BRAKES	73-1	73
	1204-HYDRAULIC BRAKE SYSTEM	74-1	
	SERVICE BRAKE PEDAL AND DECLUTCH PEDAL	74-1	74
	SERVICE BRAKE HYDRAULIC BRAKE VALVE	75-1	75
	SERVICE BRAKE LINES	76-1	76

TABLE OF CONTENTS

		PAGE	ILLUS FIG
GROUP 13	WHEELS AND TRACKS		
	1311-WHEEL ASSEMBLY	77-1	
	WHEELS AND TIRES	77-1	77
GROUP 14	STEERING		
	1407-POWER STEERING GEAR ASSEMBLY	78-1	
	STEERING GEAR AND STEERING COLUMN	78-1	78
	1410-HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	79-1	
	HYDRAULIC PUMP AND MOUNTING	79-1	79
	1411–HOSES, LINES, FITTINGS	80-1	
	HOSES, LINES AND FITTINGS	80-1	80
	1412-HYDRAULIC OR AIR CYLINDERS	81-1	
	STEERING CYLINDER ASSEMBLY AND MOUNTING	81-1	81
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1501-FRAME ASSEMBLY	82-1	
	ROLL-OVER PROTECTIVE STRUCTURE	82-1	82
	CHASSIS FRAME	83-1	83
	1503-PINTLES AND TOWING ATTACHMENTS	84-1	
	TOW BAR AND PINTLE HOOK	84-1	84
GROUP 18	BODY, CAB, HOOD AND HULL		
	1801-BODY, CAB, HOOD AND HULL ASSEMBLIES	85-1	
	GRILLE	85-1	85
	HOOD AND REAR FENDERS	86-1	86
	HOOD AND FRONT FENDERS	87-1	87
	1806-UPHOLSTERY SEATS	88-1	
	OPERATOR'S SEAT ASSEMBLY	88-1	88
	NOISE BAFFLE PLATE	89-1	89
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2402–HYDRAULIC CONTROL VALVE	90-1	
	HYDRAULIC CONTROL VALVE AND MOUNTING	90-1	90
	HYDRAULIC CONTROL VALVE LEFT SIDE COVER PLATE	91-1	91
	HYDRAULIC CONTROL VALVE, ROTATE, SIDE SHIFT AND TILT SECTIONS	92-1	92
	HYDRAULIC CONTROL VALVE, LIFT SECTION	93-1	93
	2403-HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	94-1	
	HYDRAULIC CONTROL LEVERS AND LINKAGE	94-1	94
	2404-HYDRAULIC TILT CYLINDERS AND TILT CRANK	95-1	
	TILT CYLINDER ASSEMBLY AND MOUNTING	95-1	95

TABLE OF CONTENTS

		PAGE	ILLUS FIG
	2405-HYDRAULIC MAST COLUMN	96-1	
	MAST AND CARRIAGE (UPPER)	96-1	96
	MAST AND CARRIAGE (LOWER)	97-1	97
	LIFT CYLINDER ASSEMBLY	98-1	98
	SIDESHIFT CYLINDER ASSEMBLY	99-1	99
	2406-HYDRAULIC LINES AND FITTINGS	100-1	
	MAST AND CARRIAGE HOSES, LINES AND FITTINGS (SERIAL NUMBERS 9150572 AND BELOW)	100-1	100
	MAST AND CARRIAGE HOSES, LINES AND FITTINGS (SERIAL NUMBERS 9150572 AND ABOVE)	101-1	101
	HYDRAULIC FILTER ASSEMBLY AND HOSES, LINES, AND FITTINGS	102-1	102
	2407-HYDRAULIC CYLINDERS	103-1	
	ROTATION CYLINDER ASSEMBLY	103-1	103
	2408-LIQUID TANKS OR RESERVOIRS	104-1	
	HYDRAULIC TANK	104-1	104
GROUP 94	REPAIR KITS		
	9401-REPAIR KITS	KIT-1	
	REPAIR KITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 -BULK MATERIEL	BULK-1	
	BULK	BULK-1	BULK
SECTION III.	SPECIAL TOOLS LIST		
GROUP 26	SPECIAL TOOLS AND TEST EQUIPMENT		
	2604-SPECIAL TOOLS	105-1	
	SPECIAL TOOLS	105-1	105
SECTION IV.	CROSS-REFERENCE INDEXES	I-1	
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I–22	
	FIGURE AND ITEM NUMBER INDEX	I–78	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Truck, Lift, Fork. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross–referenced to each illustration, figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross–references NSN, CAGE and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b.SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5–position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instructions, as shown in the following breakout:

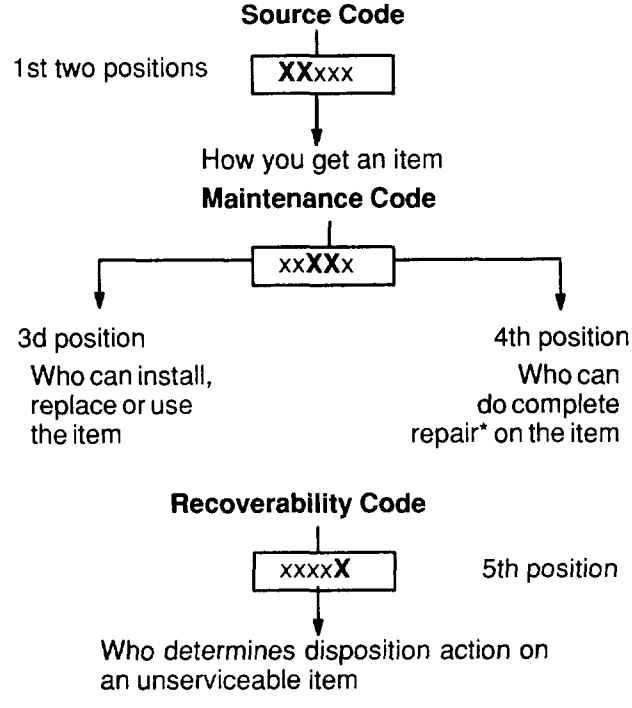

**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.