*TM 10-3930-643-10

TECHNICAL MANUAL
OPERATOR'S MANUAL

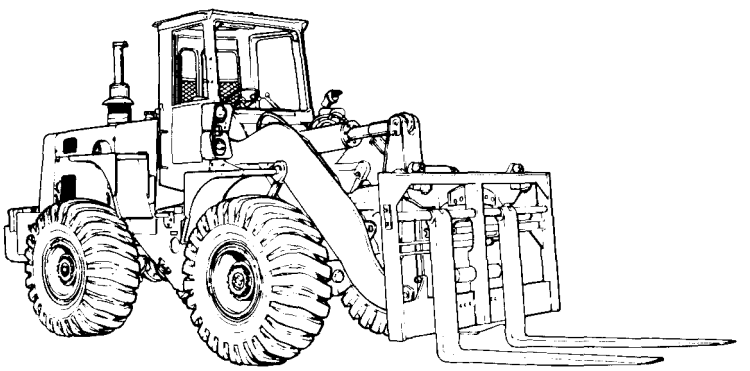

S/N 2000 AND BELOW

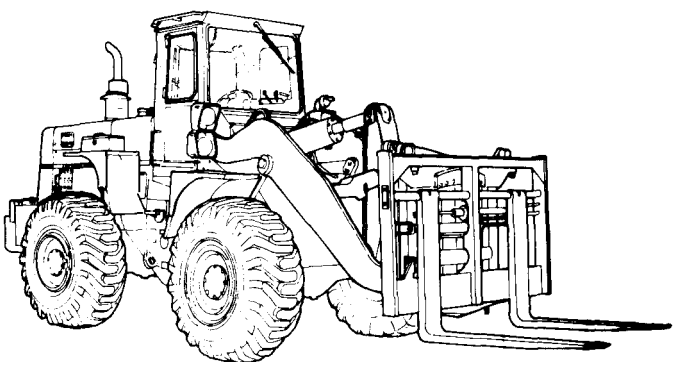

S/N 2001 AND ABOVE

TRUCK, FORKLIFT, DED PNEUMATIC TIRE, 10,000 LB. CAPACITY ROUGH TERRAIN, ARTICULATED FRAME STEER (DRESSER INDUSTRIES MODEL M10A, MHE 236) (NSN 3930-01-054-3833)

TABLE OF CONTENTS Page i

EQUIPMENT DESCRIPTION Page 1-6

OPERATING INSTRUCTIONS Page 2-1

PREVENTIVE MAINTENANCE Page 2-14

LUBRICATION INSTRUCTIONS Page 3-1

TROUBLESHOOTING PROCEDURES Page 3-4

MAINTENANCE PROCEDURES Page 3-12

SUBJECT INDEX Page Index-1

*This manual supersedes the Operator's portion of TM 10-3930-643-14&P, dated 30 Nov 81 with all changes

APPROVED FOR PUBLIC RELEASE. DISTRIBUTION IS UNLIMITED.

Headquarters, Department of the Army **19 January 1990**

OPERATOR'S MANUAL

TRUCK, FORKLIFT, DED, PNEUMATIC TIRE, 10,000 LB. CAPACITY, ROUGH TERRAIN, ARTICULATED FRAME STEER, DRESSER INDUSTRIES MODEL M10A, MHE MODEL 236, (NSN 3930-01-054-3833)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publication and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

TABLE OF CONTENTS

		Paragraph	Page
CHAPTER 1.	INTRODUCTION		
	CHAPTER OVERVIEW		1-1
	HOW TO USE THIS MANUAL		1-1
	INDEX		1-1
Section I	GENERAL INFORMATION		
	Scope	1-1	1-3
	Maintenance Forms and Records	1-2	1-3
	Reporting Equipment Improvement Recommendations	1-3	1-3
	Hand Receipt	1-4	1-3
	Warranty Information	1-5	1-4
	Serial Number Location	1-6	1-4
	List of Abbreviations	1-7	1-5
Section II	EQUIPMENT DESCRIPTION AND DATA		
	Equipment Characteristics, Capabilities and Features	1-8	1-6
	Location and Description of Major Components	1-9	1-7
	Differences Between Models	1-10	1-8
	Equipment Data	1-11	1-13
Section III	PRINCIPLES OF OPERATION		
	Engine	1-12	1-14
	Fuel System	1-13	1-14
	Exhaust System	1-14	1-15
	Cooling System	1-15	1-15
	Electrical System	1-16	1-16
	Transmission Controls	1-17	1-19
	Air System	1-18	1-20
	Brakes	1-19	1-21
	Steering	1-20	1-22
	Hydraulic System and Implements	1-21	1-22

APPROVED FOR PUBLIC RELEASE. DISTRIBUTION lS UNLlMlTED.

* This manual supersedes the Operator's portion of TM 10-3930-643-14&P, dated 30 Nov 81 with all changes.

TABLE OF CONTENTS-Continued

		Paragraph	Page
CHAPTER 2.	OPERATING INSTRUCTIONs~		2-1
	CHAPTER OVERVIEW		2-1
	INDEX		2-1
Section I	DESCRIPTION AND USE OF OPERATOR'S CONTROLS AND INDICATORS		
	Operator's Compartment	2-1	2-3
	Instrument Console	2-2	2-4
	Steering Wheel and Hand Throttle Control	2-3	2-8
	Service Brakes, Brake and Transmission Disconnect Pedal and Accelerator	2-4	2-9
	Transmission Gear Range Lever, Transmission Direction Lever, and Transmission Safety Lock	2-5	2-9
	Lift Control Lever, Tilt Control Lever, and Fork Control Lock	2-6	2-10
	Sideshift, Oscillate, and Fork Positioner Lever	2-7	2-10
	Mode Selector Switch	2-8	2-11
	Windows	2-9	2-11
	Heater Controls	2-10	2-12
	Defroster Fan Speed Switches	2-11	2-12
	Windshield Wiper Controls	2-12	2-12
	Rear Window Wiper Controls	2-13	2-12
	Air Cleaner Service Indicator	2-14	2-13
	Electrical System Master Disconnect Switch	2-15	2-13
	Coolant Level Sight Gage	2-16	2-13
	Engine Oil Dipstick	2-17	2-13
Section II	PREVENTIVE MAINTENANCE CHECKS AND SERVICES		
	Preventive Maintenance Checks and Services	2-18	2-14
Section III	OPERATION UNDER USUAL CONDITIONS		
	Initial Adjustments, Daily Checks, and Self Test	2-19	2-31
	Operating Procedures	2-20	2-32
	Preparation For Movement	2-21	2-44
	Operating Instructions on Decals and Instruction Plates	2-22	2-45
Section IV	OPERATION UNDER UNUSUAL CONDITIONS		
	Operation in Unusual Weather	2-23	2-54
	Operation in Dusty or Sandy Areas	2-24	2-57
	Operation in Saltwater Areas	2-25	2-57
	Operation in High Altitudes	2-26	2-57
	Operation in Snow	2-27	2-57
	Fording	2-28	2-57

TABLES OF CONTENTS-Continued

		Paragraph	Page
CHAPTER 3.	OPERATOR/CREW MAINTENANCE INSTRUCTIONS		3-1
	CHAPTER OVERVIEW		3-1
	INDEX		3-1
Section I	LUBRICATION		
	Lubrication Instructions	3-1	3-1
	Lubrication Information	3-2	3-2
Section II	OPERATOR/CREW TROUBLESHOOTING PROCEDURES		
	Troubleshooting Information	3-3	3-2
	Troubleshooting Symptom Index	3-4	3-3
	Troubleshooting Procedures	3-5	3-4
Section III	MAINTENANCE PROCEDURES		
	Operator Maintenance	3-6	3-12
APPENDIX A	REFERENCES		A-1
APPENDIX B	COMPONENTS OF END ITEM LIST AND BASIC ISSUE ITEMS LIST		B-1
APPENDIX C	ADDITIONAL AUTHORIZATION LIST		C-1
APPENDIX D	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST		D-1
	SUBJECT INDEX		INDEX 1
	ERROR REPORTING FORM (DA-2028-2)		
	METRIC CONVERSION TABLE		

MHE 236 FORKLIFT TRUCK

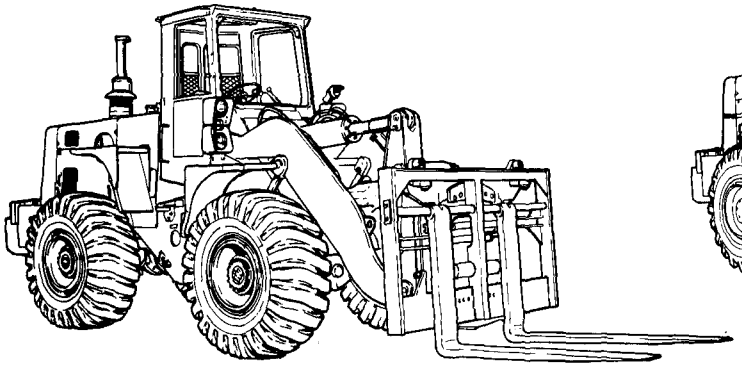

(Right Front View (S/N 2000 and below)

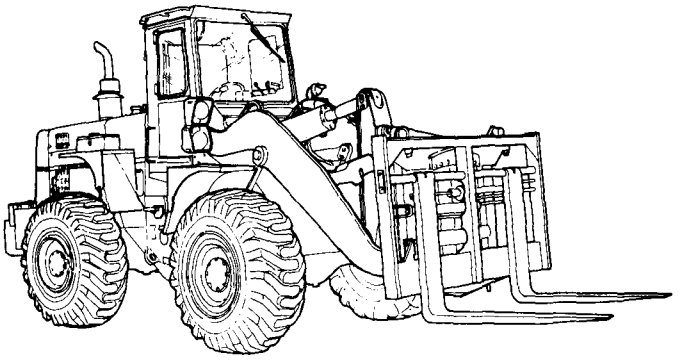

(Right Front View (S/N 2001 and above)

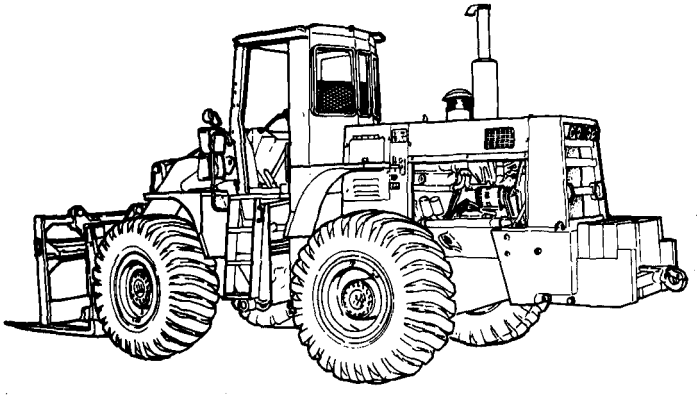

(Left Rear View (S/N 2000 and below)

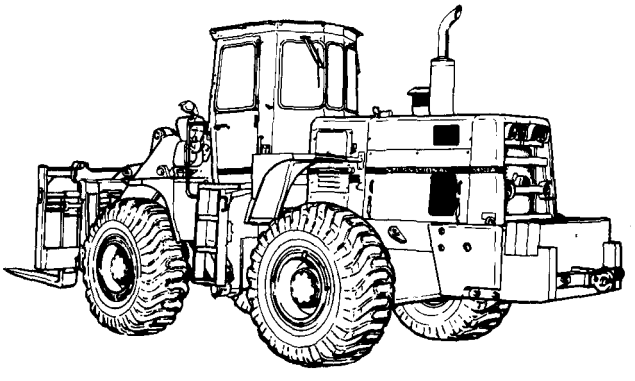

(Left Rear View (S/N 2001 and above)

TA327892

CHAPTER 1

INTRODUCTION

CHAPTER OVERVIEW

The purpose of this chapter is to acquaint you with the maintenance forms, records, and reports that you must maintain for the forklift truck, to familiarize you with the purpose and capabilities of the forklift truck and to give you a brief description of the different systems and components of the forklift truck.

HOW TO USE THIS MANUAL

This manual is designed to help you operate and maintain the M10A Forklift. It is divided into chapters, sections, and appendices. Chapter 1 contains information concerning the vehicle, its characteristics, systems, and components. Chapter 2 contains operating instructions, preventive maintenance information, and instructions for operation under unusual conditions. Chapter 3 contains procedures necessary for troubleshooting, maintenance, and general upkeep. The appendices contain supplemental information which you need to assist in the performance of the maintenance procedures.

In addition to the text, you will have either an assembled view or an exploded view illustration of the associated parts. The illustration is keyed to the text by numbers and shows you where an item is located on the vehicle. The text will tell you how an item functions or how to take a part off and put it on. The right side or left side of the forklift is defined as the right side or left side according to the operator seated in the operator's compartment.

INDEX

Section	Title	Paragraph	Page
I	GENERAL INFORMATION		
	Scope	1-1	1-3
	Maintenance Forms and Records	1-2	1-3
	Reporting Equipment Improvement Recommendations	1-3	1-3
	Hand Receipts	1-4	1-3
	Warranty Information	1-5	1-4
	Serial Number Location	1-6	1-4
	List of Abbreviations	1-7	1-5
II	EQUIPMENT DESCRIPTION AND DATA		
	Equipment Characteristics, Capabilities, and Features	1-8	1-6
	Location and Description of Major Components	1-9	1-7
	Differences Between Models	1-10	1-8
	Equipment Data	1-11	1-13

INDEX-Continued

III	PRINCIPLES OF OPERATION		
	Engine	1-12	1-14
	Fuel System	1-13	1-14
	Exhaust System	1-14	1-15
	Cooling System	1-15	1-15
	Electrical System	1-16	1-16
	Transmission Controls	1-17	1-19
	Air System	1-18	1-20
	Brakes	1-19	1-21
	Steering	1-20	1-22
	Hydraulic System and Implements	1-21	1-22