TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

TRUCK, LIFT, FORK, CLEAN BURN DIESEL, FRONT/SIDE LOADING 6,000 LB CAPACITY

MODEL R60SL-DC

NSN 3930-01-378-7497

Approved for public release;
distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JANUARY 1997

TECHNICAL MANUAL

HEADQUARTERS
DEPARTMENT OF THE ARMY

No. 10-3930-669-24P

Washington, DC *21 JANUARY 1997*

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

TRUCK, LIFT, FORK, CLEAN BURN DIESEL FRONT/SIDE LOADING 6,000 LB CAPACITY

MODEL R60SL-DC
NSN 3930-01-378-7497

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located at the back of this manual direct to: Commander, US Army Tank-automotive and Armament Command, ATTN: AMSTA-IM-OPIT, Warren, MI 48397-5000. A reply will be furnished to you. You may also provide DA Form 2028-2 information to TACOM via datafax or e-mail. TACOM's datafax number for AMSTA-IM-OPIT is (810) 574-6323 and the e-mail address is: amsta-im-opit@cc.tacom.army.mil.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I	INTRODUCTION	1	
Section II	REPAIR PARTS LIST		
Group 01	Engine System		
	0100 Engine Installation	1-1	1
	0100 Engine Mountings Installation	2-1	2
	0101 Crankcase Assembly	3-1	3
	0101 Cylinder Installation	4-1	4
	0101 Cylinder Head Assembly	5-1	5
	0102 Crankshaft Assembly	6-1	6
	0103 Flywheel Assembly	7-1	7
	0103 Flywheel Housing	8-1	8
	0104 Piston and Connecting Rod	9-1	9
	0105 Engine Front Cover Installation	10-1	10
	0105 Idler Gear	11-1	11
	0105 Valves and Valve Cover	12-1	12
	0105 Rocker Arms and Pushrods	13-1	13
	0105 Camshaft Assembly	14-1	14

TABLE OF CONTENTS (CONT)

		Page	Illus/ Figure
Group 01	0106 Breather Valve Installation	15-1	15
	0106 Oil Pan	16-1	16
	0106 Oil Pump and Pipes	17-1	17
	0106 Engine Oil Cooler	18-1	18
	0106 Oil Spray Nozzle	19-1	19
	0106 Engine Oil Filter	20-1	20
	0106 Remote Oil Filter Adapter	21-1	21
	0106 Oil Filler Cap and Dipstick	22-1	22
	0106 AOAP Valve	23-1	23
Group 03	Fuel System		
	0301 Fuel Injector	24-1	24
	0301 Fuel Injector Lines	25-1	25
	0302 Fuel Injection Pump	26-1	26
	0302 Injection Pump Timing Gear	27-1	27
	0304 Air Cleaner Assembly	28-1	28
	0305 Intake Manifold	29-1	29
	0306 Fuel Lines	30-1	30
	0306 Fuel Tank Installation	31-1	31
	0309 Fuel Filter	32-1	32
	0309 Fuel Filter Head	33-1	33
	0309 Fuel Water Separator	34-1	34
	0312 Throttle Pedal and Linkage Assembly	35-1	35
	0312 Oil Filter Tray	36-1	36
Group 04	Exhaust System		
	0401 Exhaust Manifold	37-1	37
	0401 Muffler and Exhaust Stack	38-1	38
Group 05	Cooling System		
	0502 Engine Ducts and Shrouds	39-1	39
	0502 Engine Ventilation Panel	40-1	40
	0505 Air Blower Installation	41-1	41
	0505 V Belt Tensioning Pulley	42-1	42
Group 06	Electrical System		
	0601 Alternator Mounting and Belt	43-1	43
	0601 Alternator Assembly	44-1	44
	0602 Voltage Regulator Installation	45-1	45
	0603 Starter Assembly	46-1	46
	0605 Glow Plug	47-1	47
	0606 Engine Shutdown Solenoid	48-1	48
	0606 Throttle and Engine Shutdown Solenoid Levers	49-1	49
	0607 Broken Fan Belt Warning Switch and Cable	50-1	50
	0607 Starter Switch	51-1	51
	0607 Master Disconnect Switch	52-1	52
	0607 Switches	53-1	53
	0607 Instrument Panel	54-1	54
	0607 Warning Lights and Alarms	55-1	55
	0607 Instrument Panel Gauges	56-1	56
	0607 Instrument Panel Switches	57-1	57
	0608 Transmission Shift Lever	58-1	58
	0608 NATO Plug	59-1	59

TABLE OF CONTENTS (CONT)

		Page	Illus/ Figure
Group 06	0608 Transmission Inching Valve	60-1	60
	0609 Brake Tail Light Installation	61-1	61
	0609 Flood Lights	62-1	62
	0609 Cab Interior Light	63-1	63
	0609 Shunt Assembly	64-1	64
	0609 Fuse Panel	65-1	65
	0609 Relay Panel	66-1	66
	0610 Transmission Fluid Temperature Switch	67-1	67
	0610 Oil Senders	68-1	68
	0610 Axle Cooling Fan	69-1	69
	0610 Tachometer Adapter	70-1	70
	0610 Fuel Level Sensor	71-1	71
	0611 Horn Installation	72-1	72
	0611 Horn Button	73-1	73
	0612 Battery Installation	74-1	74
	0612 Battery Cable Installation	75-1	75
	0613 Wire Harnesses, Cab and Chassis	76-1	76
	0613 Wire Harnesses, Steering and Instrument Panel	77-1	77
Group 07	Transmission		
	0710 Transmission Installation	78-1	78
	0710 Transmission Oil Filter	79-1	79
	0710 Transmission Oil Filter Adapter and Lines	80-1	80
	0710 Torque Converter	81-1	81
	0710 Transmission Case and Output Shaft	82-1	82
	0710 Input Shaft Assembly	83-1	83
	0710 Forward Shaft Assembly	84-1	84
	0710 Auxiliary Pump Drive	85-1	85
	0714 Transmission Valve Body	86-1	86
	0721 Transmission Oil Cooler	87-1	87
Group 08	Transfer and Final Drive Assemblies		
	0801 Axle Cooling Pump	88-1	88
	0802 Axle Oil Cooler	89-1	89
	0802 Axle Oil Cooler Hoses	90-1	90
Group 09	Propeller, Shafts, Universal Joints		
	0900 Driveshaft Assembly	91-1	91
Group 10	Front Axle		
	1000 Drive Axle Assembly	92-1	92
	1000 Front Axle Housing	93-1	93
	1000 Drive Axle Guard	94-1	94
	1002 Differential	95-1	95
	1003 Planetary Reduction Drive	96-1	96
Group 11	Rear Axle		
	1100 Rear Axle Installation	97-1	97
	1100 Rear Axle Housing	98-1	98
	1104 Steering Cylinder	99-1	99
	1104 Steering Knuckles and Tie Rods	100-1	100
Group 12	Brakes		
	1201 Parking Brake Levers	101-1	101
	1201 Brake Linkage	102-1	102

TABLE OF CONTENTS (CONT)

		Page	Illus/ Figure
Group 12	1201 Parking Brake Installation	103-1	103
	1202 Brake Piston and Discs	104-1	104
	1204 Brake Lines	105-1	105
	1204 Master Cylinder Installation	106-1	106
	1206 Brake Pedal Installation	107-1	107
Group 13	Wheels and Tracks		
	1311 Drive Wheel Assemblies	108-1	108
	1311 Rear Wheel and Hub	109-1	109
Group 14	Steering		
	1401 Steering Column and Steering Wheel	110-1	110
	1410 Power Steering Unit	111-1	111
	1411 Steering Lines	112-1	112
Group 15	Frame, Towing Attachments, Drawbars and Articulation Systems		
	1501 Frame	113-1	113
	1502 Rear Counterweights	114-1	114
	1502 Frame Counterweights	115-1	115
Group 18	Body, Cab, Hood and Hull		
	1801 Cab Installation	116-1	116
	1801 Side Covers Installation	117-1	117
	1801 Rear Engine Access Covers	118-1	118
	1801 Cab Miscellaneous Items	119-1	119
	1801 Cab Door Assembly	120-1	120
	1802 Cab Windshield and Glass	121-1	121
	1806 Seat Assembly	122-1	122
Group 22	Body, Chassis, and Hull Accessory Items		
	2202 Fan Installation	123-1	123
	2202 Windshield Wipers (Front/Rear)	124-1	124
	2202 Top Window Wiper	125-1	125
	2202 Heater Control	126-1	126
	2202 Oil to Air Heater	127-1	127
	2202 Oil to Air Heater Lines	128-1	128
	2210 Data Plates and Decals	129-1	129
Group 24	Hydraulic Lift Components		
	2401 Transmission Hydraulic Pump	130-1	130
	2402 Changeover Valve	131-1	131
	2402 Priority Valve	132-1	132
	2402 Stack Valve	133-1	133
	2402 Stack Valve Fittings	134-1	134
	2403 Joystick Controls	135-1	135
	2404 Mast Tilt Cylinder	136-1	136
	2405 Pivot Cylinder	137-1	137
	2405 Shift Cylinder	138-1	138
	2405 Carriage and Forks	139-1	139
	2405 Mast Secondary Cylinder	140-1	140
	2405 Mast Primary Cylinder	141-1	141
	2405 Mast Rail Assembly	142-1	142
	2405 Mast Primary Chain	143-1	143
	2405 Mast Secondary Chain	144-1	144
	2405 Bearing Assembly	145-1	145

TABLE OF CONTENTS (CONT)

		Page	Illus/ Figure
Group 24	2405 Tandem Pump	146-1	146
	2405 Pivot Arm Assembly	147-1	147
	2405 Pivot and Shift Assembly	148-1	148
	2406 Mast Lines	149-1	149
	2406 Mast Hoses, Tubes, and Fittings	150-1	150
	2406 Umbilical Assembly	151-1	151
	2406 Hydraulic Hoses	152-1	152
	2406 Hydraulic Oil Filter Head	153-1	153
	2406 Stack Valve Lines	154-1	154
	2408 Hydraulic Reservoir	155-1	155
Group 94	Repair Kits		
	9401 Repair Kits	KITS-1	
Group 95	General Use Standardized Parts		
	9501 Hardware Supplies and Bulk Materiels	BULK-1	
Section III	SPECIAL TOOLS LIST		
	2604 Unit Maintenance Special Tools	156-1	156
	2604 Direct Support Maintenance Special Tools	157-1	157
	2604 General Support Maintenance Special Tools	158-1	158
Section IV	CROSS-REFERENCE INDEX		
	National Stock Number Index	I-1	
	Part Number Index	I-14	

UNIT, DIRECT/GENERAL SUPPORT MAINTENANCE MANUAL (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST FOR:

TRUCK, LIFT, FORK, CLEAN BURN DIESEL, FRONT/SIDE LOADING, 6,000 LB CAPACITY

SECTION I - INTRODUCTION

1. SCOPE

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the FORKLIFT. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. GENERAL

In addition to Section I, Introduction, this repair parts and special tools list is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Cross-Reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration, figure and item number appearance.

3. EXPLANATION OF COLUMNS (SECTION II AND III)

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The source, maintenance, and recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

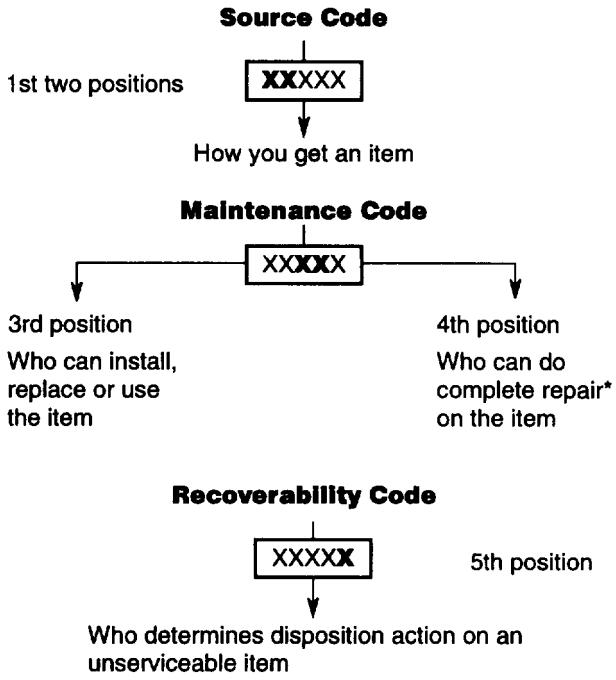

*Complete Repair. Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair or overhaul of an end item/equipment. Explanations of source codes follow:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/ requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. **Items coded PC are subject to deterioration.
KD KF	Items with these codes are not to be requested/ requisitioned individually. They are part of a kit which is authorized to the maintenance level indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
MO (Made at UM AVUM Level) MF (Made at DS/ AVUM level) MH (Made at GS level) ML (Made at Specialized Repair Act (SRA))	Items with these codes are not to be requested/ requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION AND USABLE ON CODE (UOC) column and listed in the bulk material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position of the SMR code, but if the MD (Made at source code indicates it is made at Depot) is at a higher level, order the item from the higher level of maintenance.
AO - (Assembled by UM/AVUM Level) AF - (Assembled by DS/AVUM Level) AH - (Assembled by GS Category) AL - (Assembled by SRA) AD - (Assembled by Depot)	Items with these codes are not to be requested/ requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates it is assembled at a higher level, order the item from the higher level of maintenance.
XA	Do not requisition an "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
XB	If an item is not available from salvage, order it using the CAGE and part number given.
XC	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
XD	Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGE and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those coded "XA" or those aircraft support items restricted by requirements of AR 700-42.