MIXER, ROTARY TILLER: DIESEL ENGINE DRIVEN; 4 WHEEL, PNEUMATIC TIRES, SELF-PROPELLED; WITH FLAT HOOK TINES (REX CHAINBELT, INC. MODEL HDTM)

FSN 3895-987-5536

Reference; LO 5-3895-280-15-1, -3, C9100-IL

Intervals are based on normal hours of operations. Adjust to compensate for abnormal operations and severe conditions.
During inactive periods sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing or fording.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shaft on both sides of equipment.

A dotted circle indicates a drain below.

Drain crankcase when hot. Fill and check level.

FOLD

FOLD

LUBRICANT		INTERVAL
Rear Axle Nose Box Fill and Level (Check level)(See Key)	GO	50
Rear Axle Nose Box Drain (Drain and Refill)		500
Rear Axle Differential Drain(Drain and Refill)		500
Rear Axle Differential Fill and Level (Check Level)(See Key)	GO	50
Rotor Arm Bearing	GAA	50
End Drive Differential Drain(Drain and Refill)		500
End Drive Chain Case Fill(Remove plate to fill) (See Key)	GO	
End Drive Chain Case Level(Check Level)		50

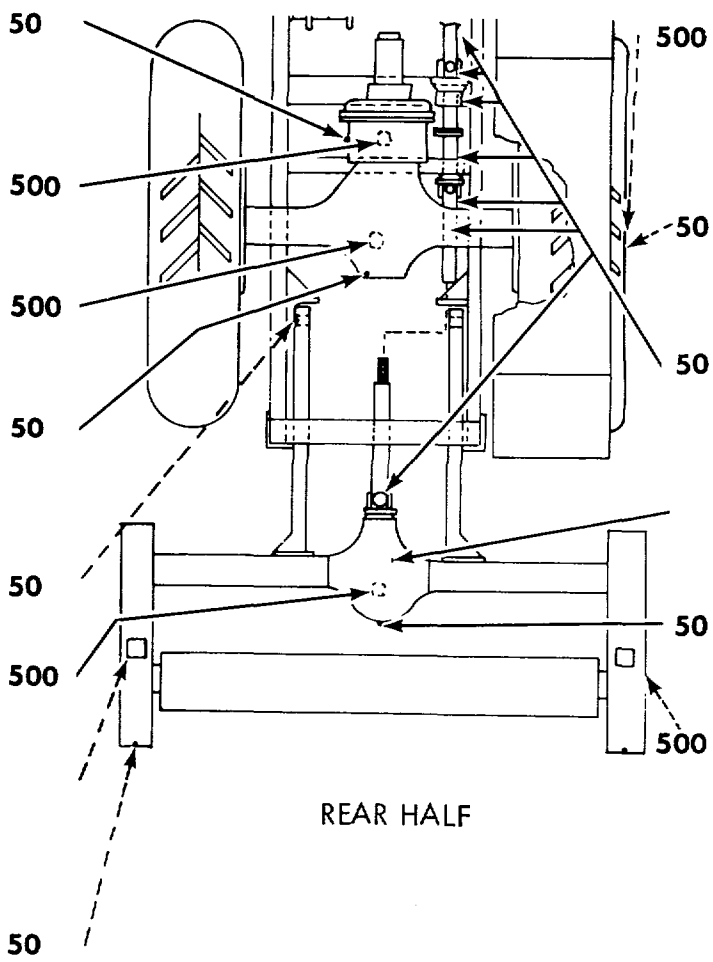

REAR HALF

INTERVAL		LUBRICANT
500	GO	Wheel and Hub Assembly Fill and Drain(follow directions on wheel cover) (Drain and Refill)(See Key)
50		Wheel and Hub Assembly Level Plug(Check level) Follow directions on wheel cover.
50	GAA	Universal Joints and Pillow Blocks (Use hand gun) (7 Fittings)
	GO	End Drive Differential Fill (See key)
50		End Drive Differential Level (Check level)
500		End Drive Chain Case Drain (Drain and Refill)