TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SPREADER, AGGREGATE, TOWED, 128 FT WIDTH NSN 3895-00-130-3633

BURCH CORPORATION MODEL FF-8

This manual supersedes TM 5-3895-330-24P, 15 March 1984 and all changes.

Approved for public release; distribution Is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

This copy is a reprint which includes current pages from Change 1.

28 DECEMBER 1990

TECHNICAL MANUAL

HEADQUARTERS
DEPARTMENT OF THE ARMY

*TM 5-3895-330-24P

Washington *D. C.*, *28 December 1990*

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SPREADER, AGGREGATE, TOWED, FORCE FEED, PNEUMATIC TIRES, 8 FT WIDTH NSN 3895-00-130-3633

BURCH CORPORATION MODEL FF-8

Current as of 31 July 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of away to improve the procedures, please let us know. Mail your letter, DA Form 2028 *(Recommended Changes to Publications and Blank Forms),* or DA Form 2028-2, located in the back of this manual, direct to: Commander, U. S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 11	REAR AXLE		
	1100 - REAR AXLE ASSEMBLY	1-1	
	TRANSPORT TRUCK	1-1	1
	AXLE SHAFT, MAIN DRIVE	2-1	2
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	3-1	
	TRANSPORT WHEEL ASSEMBLY	3-1	3
	TRACTION WHEEL ASSEMBLY	4-1	4
	1313 - TIRES, TUBES, TIRE CHAINS	5-1	
	TIRES AND TUBES	5-1	5
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1501 - FRAME ASSEMBLY	6-1	
	PLATFORM	6-1	6

*** This manual supersedes TM 5-3895-330-24P, 15 March 1984 and all changes.**

TABLE OF CONTENTS

		Page	Illus Fig
	1503 - PINTLES AND TOWING ATTACHMENTS	7-1	
	TRUCK HITCH	7-1	7
	TRANSPORT TONGUE	8-1	8
	CRANK AND COUPLER HITCH	9-1	9
GROUP 73	CONCRETE AND ASPHALT EQUIPMENT COMPONENTS		
	7303 -CONTROLS	10-1	
	CLUTCH CONTROL LEVER	10-1	10
	GATE CONTROLS	11-1	11
	7304 -HOPPERS. GATES, AND CHUTES	12-1	
	HOPPERS, GATES, AND CHUTES	12-1	12
	7309 -VANE OR SCREW FEEDERS OR CONVEYORS	13-1	
	ROLLER	13-1	13
GROUP 75	CONVEYING. FEEDING AND CRUSHING, SCREENING AND WASHING EQUIPMENT COMPONENTS		
	7511 -RECIPROCATING AND VIBRATING PLATES AND GRIZZLEYS		
	AGITATOR ASSEMBLY	14-1	14
	FEED ROLL	15-1	15
	7512 -FEEDING SHAFTS	16-1	
	GEAR BOX	16-1	16
SECTION III.	SPECIAL TOOLS LIST (NOT APPUCABLE)		
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-3	
	FIGURE AND ITEM NUMBER INDEX	I-9	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Aggregate Spreader. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List* A list of special tools, special TMDE, And other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. me figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NON, FSCM or CAGE, and part I numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO*. *(Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2))* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

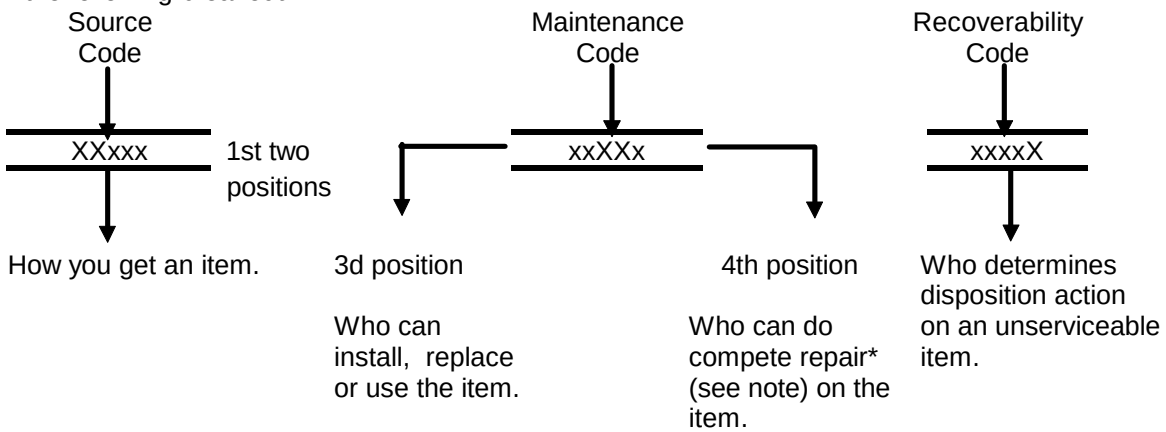

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the `'Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: