LUBRICATION

ORDER **31 JANUARY 1969** (Supersedes LO 5-3805-219-15-1, 9 Dec 1960)

LOADER, SCOOP TYPE: DIESEL DRIVEN: 4 WHEELS; 2-1/4 CU. YD.;

(HOUGH MODEL H-90M) W/ENGINE CUMMINS MODEL JT-6-BI

Reference: LO 5-3805-219-12-2, C9100-IL

Intervals are based on normal hours of operations. Adjust to compensate for abnormal operations and severe conditions. During inactive periods sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing or fording.

A dotted circle indicates a drain below.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Drain crankcase and gearcases only when hot after operation; replenish and check level when cool.
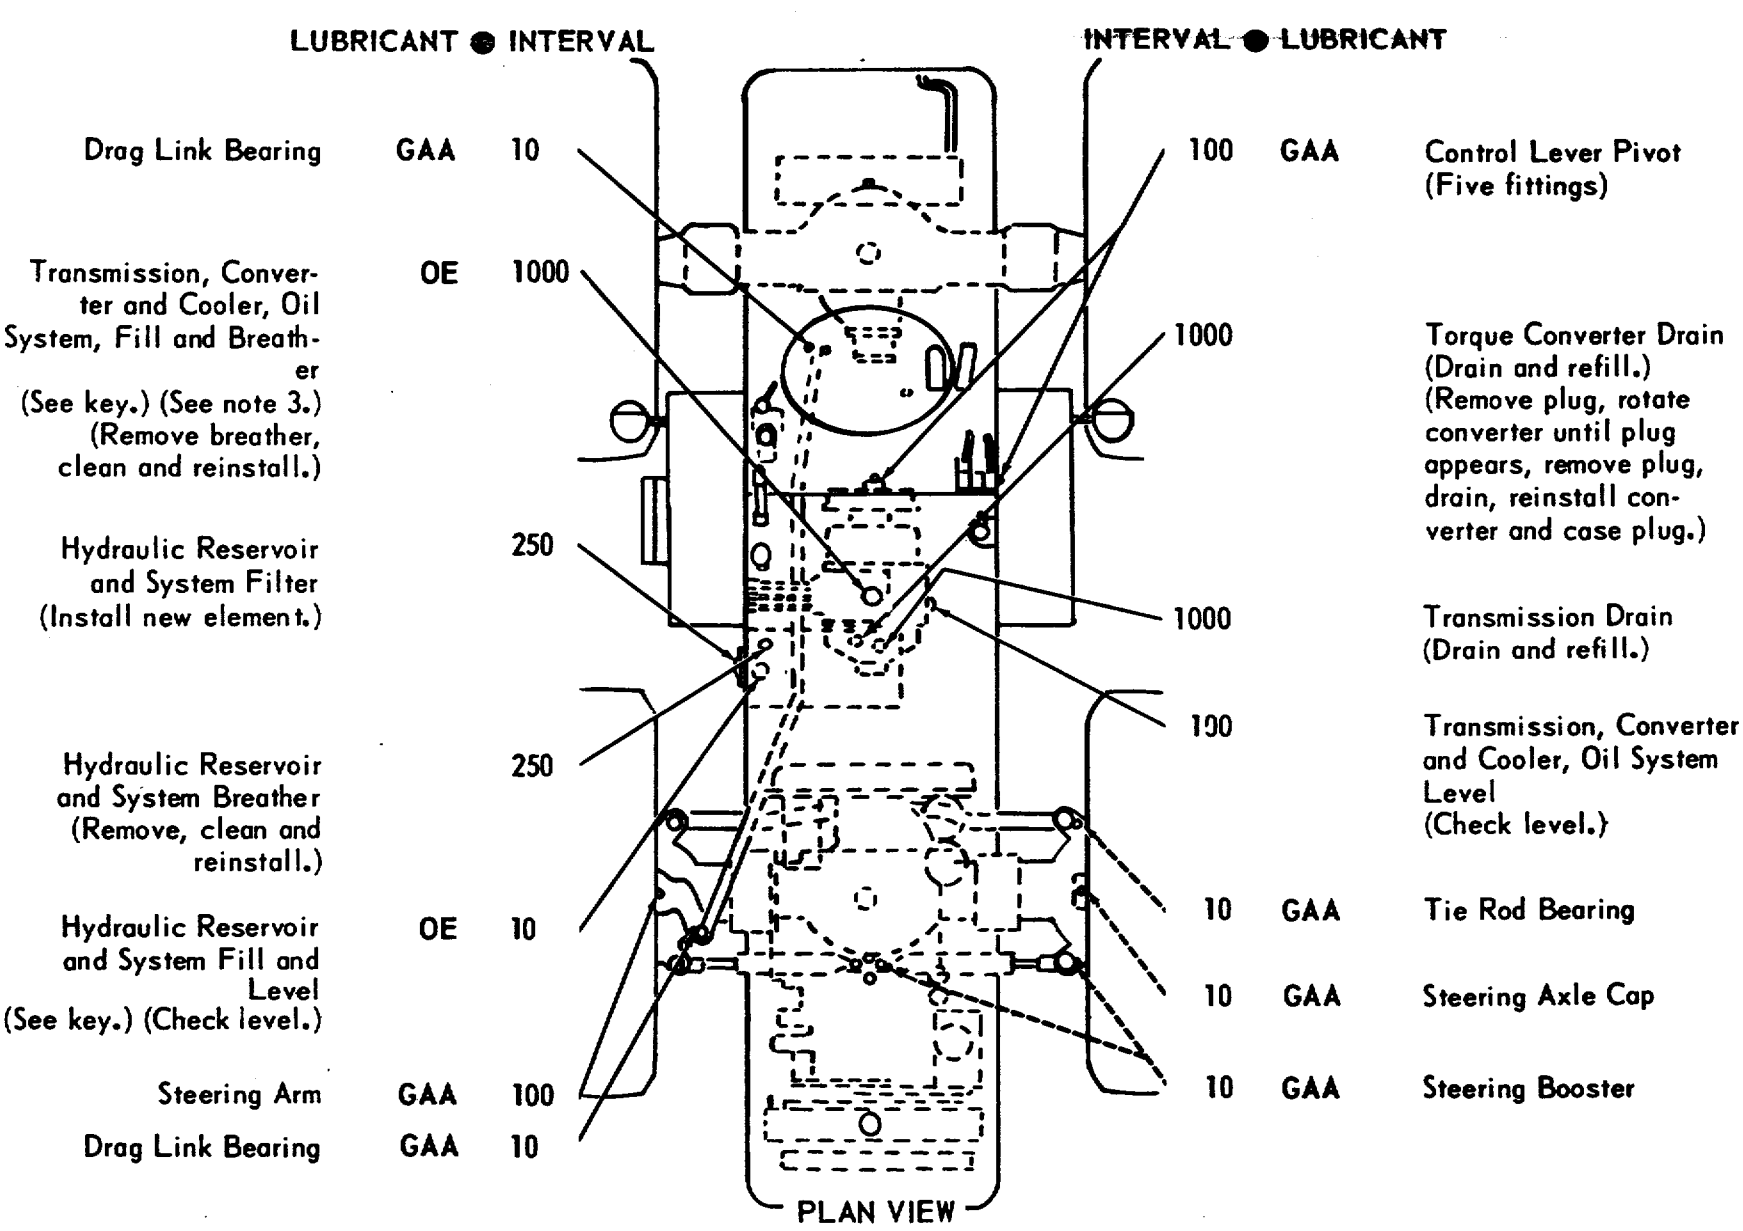
FOLD FOLD