TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

**TRUCK, DUMP: 20 TON, 6 X 4,
ON-OFF HIGHWAY, 71,000 GVW
(NSN 3805-00-192-7249)**

IHC MODEL F-5070 (CCE)

This manual supersedes TM 5-3805-254-34P, dated 30 December 1985.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

MARCH 1992

TECHNICAL MANUAL

*TM 5-3805-254-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 31 March 1992

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS TRUCK, DUMP: 20 TON, 6 X 4, ON-OFF HIGHWAY, 71,000 GVW (NSN 3805-00-192-7249)

IHC MODEL F-5070 (CCE)

Current as of 23 August 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

			Page	Illus Fig
SECTION I.	INTRODUCTION		1	
SECTION II.	REPAIR PARTS LIST		1-1	
GROUP 01	ENGINE			
	0100 -	ENGINE ASSEMBLY	1-1	
		ENGINE ASSEMBLY	1-1	1
		ENGINE MOUNTING BRACKETS	2-1	2
	0103 -	FLYWHEEL ASSEMBLY	3-1	
		FLYWHEEL	3-1	3
	0106 -	ENGINE LUBRICATION SYSTEM	4-1	
		OIL FILTER AND MOUNTING BRACKET	4-1	4
		OIL FILTER EXPLODED VIEW	5-1	5
		OIL FILTER LINES	6-1	6
	0112 -	ENGINE BRAKE	7-1	
		JACOBS EXHAUST BRAKE CONTROLS	7-1	7
GROUP 03	FUEL SYSTEM			
	0304 -	AIR CLEANER	8-1	
		AIR CLEANER	8-1	8
		AIR CLEANER MOUNTING PARTS	9-1	9

* This manual supersedes TM 5-3805-254-34P, dated 30 December 1985.

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0306 - TANKS, LINES, FITTINGS..... HEADERS	10-1	
	FRONT FUEL TANK AND MOUNTING.....	10-1	10
	REAR FUEL TANK AND MOUNTING	11-1	11
	FUEL LINES.....	12-1	12
	0309 - FUEL FILTERS	13-1	
	FUEL FILTER AND MOUNTING PARTS	13-1	13
	0312 - ACCELERATOR, THROTTLE, OR CHOKE CONTROLS.....	14-1	
	ACCELERATOR AND THROTTLE CONTROL	14-1	14
GROUP 04	EXHAUST SYSTEM		
	0401 - MUFFLER AND PIPES	15-1	
	VERTICAL MUFFLER AND RAIN CAP	15-1	15
	EXHAUST DIVERTER	16-1	16
	EXHAUST PIPE MOUNTING, FRONT.....	17-1	17
GROUP 05	COOLING SYSTEM		
	0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	18-1	
	RADIATOR	18-1	18
	RADIATOR MOUNTING PARTS.....	19-1	19
	RADIATOR SHELL	20-1	20
	SHUTTER CONTROL (FIRST AND SECOND YEAR INCREMENT VEHICLES)	21-1	21
	RADIATOR GRILLE.....	22-1	22
	SHUTTER CONTROL (THIRD AND FOURTH YEAR INCREMENT VEHICLES)	23-1	23
	SHUTTERSTAT.....	24-1	24
	RADIATOR SUPPORT AND FRAME REINFORCEMENT ...	25-1	25
	RADIATOR SHUTTER.....	26-1	26
	RADIATOR SHUTTER (FOR VEHICLES BUILT PRIOR TO 1-4-73)	27-1	27
	0502 - COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, ETC.	28-1	
	RADIATOR SHROUD	28-1	28
	0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET	29-1	
	RADIATOR LINES AND FITTINGS.....	29-1	29
	0505 - FAN ASSEMBLY.....	29-1	
	FAN.....	30-1	30
	0508 - WATER FILTER.....	31-1	
	WATER FILTER.....	31-1	31
GROUP 06	ELECTRICAL SYSTEM		
	0601 - GENERATOR, ALTERNATOR.....	32-1	
	GENERATOR	32-1	32
	GENERATOR MOUNTING PARTS.....	33-1	33
	0603 - STARTING MOTOR.....	34-1	
	STARTING MOTOR ASSEMBLY	34-1	34
	STARTING MOTOR ARMATURE.....	35-1	35
	STARTING MOTOR COMMUTATOR END	36-1	36
	0607 - INSTRUMENT OR ENGINE CONTROL PANEL	37-1	
	GAGES AND PANEL LIGHTS.....	37-1	37
	CIRCUIT BREAKERS.....	38-1	38
	INSTRUMENT PANEL SWITCHES.....	39-1	39
	OPTICAL RIBBON.....	40-1	40

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
	0608 -	MISCELLANEOUS ITEMS	41-1	
		FUSE BLOCK	41-1	41
		SWITCHES	42-1	42
		HARNESS JUNCTION BOX	43-1	43
	0609 -	LIGHTS	44-1	
		DOMELIGHT	44-1	44
		STOP, TAIL, AND BACKUP LIGHTS	45-1	45
		MARKER LIGHT	46-1	46
		HEADLIGHT	47-1	47
		BODY CLUSTER LIGHTS AND REFLECTORS	48-1	48
		FRONT TURN SIGNAL	49-1	49
	0610 -	SENDING UNITS AND WARNING SWITCHES	50-1	
		MISCELLANEOUS SWITCHES	50-1	50
		WARNING LIGHT AND BUZZER	51-1	51
		WARNING SWITCHES AND SENDING UNITS	52-1	52
	0611 -	HORN, SIREN	53-1	
		HORN, RELAY AND MOUNTING	53-1	53
		HORN BUTTON	54-1	54
		BUZZERS AND BELLS	55-1	55
	0612 -	BATTERIES, STORAGE	56-1	
		BATTERY AND CABLE	56-1	56
		BATTERY BOX	57-1	57
	0613 -	HULL OR CHASSIS WIRING HARNESS	58-1	
		WIRING HARNESSES	58-1	58
		REVERSE POLARITY PROTECTION	59-1	59
		AUTOMATIC TRANSMISSION WIRING	60-1	60
GROUP 07	TRANSMISSION			
	0700 -	TRANSMISSION ASSEMBLY	61-1	
		AUXILIARY TRANSMISSION MOUNTING	61-1	61
		AUXILIARY TRANSMISSION ASSEMBLY	62-1	62
		0701 - TRANSMISSION SHAFTS	63-1	
		AUXILIARY TRANSMISSION GEARS AND SHAFTS	63-1	63
		0704 - TRANSMISSION TOP COVER ASSEMBLY	64-1	
		AUXILIARY TRANSMISSION SHIFT FORKS AND BARS	64-1	64
		AUXILIARY TRANSMISSION CONTROL	65-1	65
	0705 -	TRANSMISSION SHIFTING COMPONENTS	66-1	
		TRANSMISSION SHIFT CONTROL	66-1	66
	0708 -	TORQUE CONVERTER OR FLUID COUPLING	67-1	
		TORQUE CONVERTER	67-1	67
		CONVERTER HOUSING ASSEMBLY	68-1	68
	0710 -	TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	69-1	
		TRANSMISSION AND MOUNTING	69-1	69
		INPUTSHAFT	70-1	70
		MAIN SHAFT AND GEAR UNIT	71-1	71
		TRANSMISSION OUTPUT SHAFT AND REAR COVER ASSEMBLY	72-1	72
		TRANSMISSION HOUSING AND PAN	73-1	73
		TRANSMISSION HOUSING MOUNTING	74-1	74
	0713 -	INTERMEDIATE CLUTCH	76-1	
		TRANSMISSION FIRST AND REVERSE CLUTCH	75-1	75
		TRANSMISSION THIRD CLUTCH, CENTER SUPPORT AND SECOND CLUTCH	76-1	76
		TRANSMISSION FOURTH CLUTCH	77-1	77
		FORWARD CLUTCH	78-1	78
		TRANSMISSION LOW AND REVERSE CLUTCH	79-1	79
		TRANSMISSION LOCKUP CLUTCH	80-1	80

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
0714 -	SERVO UNIT	81-1	
	TRANSMISSION CONTROL VALVE	81-1	81
	TRANSMISSION CONTROL VALVE TRIMMER VALVES	82-1	82
	TRANSMISSION CONTROL VALVE SHIFT VALVES	83-1	83
	TRANSMISSION MODULATOR VALVE AND MOUNTINGS	84-1	84
0721 -	COOLERS, PUMPS, MOTORS	85-1	
	TRANSMISSION OIL FILTER AND MOUNTING	85-1	85
	TRANSMISSION OIL COOLER LINES AND FITTINGS	86-1	86
	TRANSMISSION OIL PUMP AND MAIN REGULATOR VALVE	87-1	87
	TRANSMISSION LOW SHIFT AND LOW TRIMMER VALVE	88-1	88
	TORQUE CONVERTER COOLER	89-1	89
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTSCOUPLER AND CLAMP ASSEMBLY		
0900 -	PROPELLER SHAFTS	90-1	
	UNIVERSAL JOINT	90-1	90
	UNIVERSAL JOINT KIT	91-1	91
	SLIP YOKES, FLANGES AND SLINGERS	92-1	92
	PROPELLER SHAFTS	93-1	93
GROUP 10	FRONT AXLE		
1000 -	FRONT AXLE ASSEMBLY	94-1	
	FRONT AXLE	94-1	94
1004 -	STEERING AND LEANING WHEEL MECHANISM	95-1	
	FRONT KNUCKLE	95-1	95
GROUP 11	REAR AXLE		
1100 -	REAR AXLE ASSEMBLY	96-1	
	REAR AXLE SKID PLATE	96-1	96
	FORWARD REAR AXLE HOUSING	97-1	97
	REAR REAR AXLE HOUSING	98-1	98
1102 -	DIFFERENTIAL	99-1	
	REAR AXLE POWER DIFFERENTIAL LOCK	99-1	99
	POWER DIVIDER CONTROL HOUSING	100-1	100
	POWER DIVIDER DIFFERENTIAL LOCK AIR SHIFT CHAMBER	101-1	101
	INTERAXLE DIFFERENTIAL	102-1	102
	INTERAXLE DIFFERENTIAL CASE	103-1	103
	DIFFERENTIAL CARRIER	104-1	104
	NO-SPIN DIFFERENTIAL	105-1	105
	REAR REAR AXLE DIFFERENTIAL	106-1	106
	REAR REAR AXLE DIFFERENTIAL BEARINGS	107-1	107
	REAR REAR AXLE DIFFERENTIAL NO-SPIN	108-1	108
1108 -	WALKING BEAMS, STUB AXLES AND PARTS	109-1	
	EQUALIZER BEAM	109-1	109
GROUP12	BRAKES		
1201 -	HANDBRAKES	110-1	
	PARKING BRAKE HOSING	110-1	110

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
1202 -	SERVICE BRAKES	111-1	
	FRONT WHEEL BRAKE	111-1	111
	REAR WHEEL BRAKE	112-1	112
1206 -	MECHANICAL BRAKE SYSTEM	113-1	
	BRAKE PEDAL	113-1	113
1208 -	AIRBRAKE SYSTEM	114-1	
	AUTOMATIC DRAIN VALVE, SAFETY VALVE AND CONTROL VALVE	114-1	114
	QUICK-RELEASE VALVE	115-1	115
	FRONTAIRBRAKE CHAMBER	116-1	116
	RELAYVALVE	117-1	117
	DOUBLE CHECK VALVE	118-1	118
	RELEASE VALVE	119-1	119
	AIRBRAKE CYLINDER CONTROL VALVE	120-1	120
	FRONT BRAKE HOSING	121-1	121
	REAR REAR AXLE BRAKE HOSING	122-1	122
	FRONTWHEELHOSING	123-1	123
	BRAKE CHAMBER (REAR AXLE)	124-1	124
	FRONT CHASSIS HOSING	125-1	125
	CENTER CHASSIS HOSING	126-1	126
	ALCOHOL EVAPORATION	127-1	127
	FORWARD REAR AXLE BRAKE HOSING	128-1	128
	AIR DRYER AND MOUNTING	129-1	129
	TREADLE BRAKE VALVE	130-1	130
	AIR RESERVOIR	131-1	131
	AIR RESERVOIR MOUNTING	132-1	132
	REAR CHASSIS HOSING	133-1	133
	REAR BRAKE HOSING	134-1	134
	FRONT WHEEL LIMITING VALVE HOSING	135-1	135
	CAB HOSING	136-1	136
	CAB HOSING MANIFOLDS	137-1	137
	AIR COMPRESSOR GOVERNOR	138-1	138
	AIR COMPRESSOR	139-1	139
1209 -	AIR COMPRESSOR ASSEMBLY	140-1	
	CYLINDER BLOCK AND HEAD	140-1	140
	CRANKSHAFT	141-1	141
	PISTON AND CONNECTING ROD	142-1	142
	VALVES AND SEATS	143-1	143
	COMPRESSOR DRIVE	144-1	144
	AIR INTAKE	145-1	145
	UNLOADERSYSTEM	146-1	146
	COOLING SYSTEM	147-1	147
	AIR DISCHARGE	148-1	148
GROUP 13	WHEELS AND TRACKS		
1311 -	WHEEL ASSEMBLY	149-1	
	FRONT WHEEL HUB AND BRAKEDRUM	149-1	149
	REAR WHEEL HUB AND BRAKEDRUM	150-1	150
	DISC WHEELS AND SIDE RINGS	151-1	151
1313 -	TIRES, TUBES, TIRE CHAINS	152-1	
	TIRES	152-1	152

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 14	STEERING		
1401 -	MECHANICAL STEERING GEAR ASSEMBLY	153-1	-.
	DRAG LINK	153-1	153
	FRONT AXLE TIE-ROD	154-1	154
	LOWER STEERING COLUMN AND PITMAN ARM	155-1	155
	STEERING COLUMN	156-1	156
1407 -	POWER STEERING GEAR ASSEMBLY	157-1	
	RIGHT STEERING GEAR	157-1	157
	LEFT STEERING GEAR	158-1	158
1410 -	HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	158-1	
	STEERING PUMP AND MOUNTING	159-1	159
1411 -	HOSES, LINES, FITTINGS	160-1	
	POWER STEERING HOSING	160-1	160
	POWER STEERING LINES AND FITTINGS	161-1	161
1413 -	TANKS, RESERVOIRS	162-1	
	POWER STEERING RESERVOIR AND MOUNTING	162-1	162
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 -	FRAME ASSEMBLY	163-1	
	FRAME TIE TUBE	163-1	163
	FRAME	164-1	164
	FRONT BUMPER, GRILLE GUARD AND MOUNTING	165-1	165
1503 -	PINTLES AND TOWING ATTACHMENTS	166-1	
	REAR PINTLE HOOK	166-1	166
GROUP 16	SPRINGS AND SHOCK ABSORBERS		
1601 -	SPRINGS	167-1	
	FRONT SPRINGS	167-1	167
	FRONT SPRING PINS AND SHACKLES	168-1	168
	REAR SPRINGS	169-1	169
	REAR SPRING BRACKETS AND AXLE STOPS	170-1	170
1605 -	TORQUE, RADIUS, AND STABILIZER RODS	171-1	
	TORQUE RODS	171-1	171
GROUP 18	BODY, CAB, HOOD, AND HULL		
1801 -	BODY, CAB, HOOD, AND HULL ASSEMBLIES	172-1	
	ENGINE AND TRANSMISSION COVERS AND FLOOR HATS	172-1	172
	CAB MOUNTING	173-1	173
	HOOD	174-1	174
	RIM WRENCH CAB MOUNTING	175-1	175
	INSIDE REAR CAB TRIM	176-1	176
	CAB ASSEMBLY	177-1	177
	DOOR PANELS	178-1	178
	DOOR PANEL AND RELATED PARTS	179-1	179
	DOOR, WINDOW AND VENT	180-1	180
	CAB INTERIOR	181-1	181
	DASH PANELS	182-1	182
	CAB CEILING	183-1	183
	SPLASHGUARDS	184-1	184

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
1802 -	FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC	185-1	
	FENDERS	185-1	185
	CAB GLASS	186-1	186
1806 -	UPHOLSTERY, SEATS, AND CARPETS	187-1	
	PASSENGER'S SEAT	187-1	187
	SEATBELTS	188-1	188
	DRIVER'S SEAT	189-1	189
1810 -	CARGO BODY	190-1	
	BODY SUBFRAME	190-1	190
	DUMP BODY HARDWARE	191-1	191
	DUMP BODY LINKAGE	192-1	192
GROUP 20	HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT, AND POWER TAKE-OFF		
2004 -	POWER TAKE-OFF ASSEMBLY	193-1	
	POWER TAKE-OFF ASSEMBLY	193-1	193
	AIR AND VACUUM SHIFT	194-1	194
	GOVERNOR DRIVE AND PUMP FLANGE	195-1	195
	POWER TAKE-OFF SHAFT AND JOINTS	196-1	196
GROUP 22	BODY CHASSIS, AND HULL ACCESSORY ITEMS		
2202 -	ACCESSORY ITEMS	197-1	
	HEATER DRAIN VALVE	197-1	197
	WINDSHIELD WASHER/AIR (FOR BELOW CHASSIS NUMBERS DBG-XXX)	198-1	198
	REARVIEW MIRROR	199-1	199
	HEATING DUCTS	200-1	200
	HEATER HOSING	201-1	201
	WINDSHIELD WIPER	202-1	202
	WINDSHIELD WIPER VALVE AND PISTON	203-1	203
	WINDSHIELD WIPER HOSING	204-1	204
	WINDSHIELD WASHER (FOR CHASSIS NUMBERS DGB-XXX AND UP)	205-1	205
	HEATER BOX	206-1	206
	HEATER BOX, EXPLODED VIEW	207-1	207
	AIR HORN AND VALVE	208-1	208
2210 -	DATA PLATES AND INSTRUCTION HOLDERS	209-1	
	DATA PLATES	209-1	209
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
2401 -	PUMP AND MOTOR	210-1	
	HYDRAULIC ROTARY PUMP	210-1	210
2402 -	MANIFOLD AND/OR CONTROL VALVES	211-1	
	HYDRAULIC VALVES	211-1	211
2406 -	STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	212-1	
	HYDRAULIC LINES AND FITTINGS	212-1	212
	DUMP BODY HYDRAULIC CYLINDER	213-1	213
2408 -	LIQUID TANKS OR RESERVOIRS	214-1	
	HYDRAULIC OIL RESERVOIR	214-1	214

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
GROUP 47	GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES			
	4701 -	INSTRUMENTS	215-1	
		TACHOMETER DRIVE	215-1	215
		TACHOMETER ASSEMBLY	216-1	216
		SPEEDOMETER AND DRIVE CABLE	217-1	217
	4702 -	GAGES, MOUNTINGS, LINES, AND FITTINGS	207-1	
		GAGES, NONELELECTRICAL	218-1	218
		TRANSMISSION OIL LEVEL GAGE AND FILLER PIPE	219-1	219
		TRANSMISSION OIL GAGE LINES AND FITTINGS	220-1	220
	4705 -	FLOW METERS AND REGULATORS	210-1	
		AIR RESTRICTION GAGE	221-1	221
GROUP 94	REPAIR KITS			
	9401 -	REPAIR KITS	KIT-1	
		REPAIR KITS	KIT-1	KITS
GROUP 95	GENERAL USE STANDARDIZED PARTS			
	9501 -	BULK MATERIEL	BULK-1	
		BULK MATERIEL	BULK-1	BULK
SECTION III	SPECIAL TOOLS LIST (NOT APPLICABLE)			
SECTION IV	CROSS-REFERENCE INDEXES			
	NATIONAL STOCK NUMBER INDEX		I-1	
	PART NUMBER INDEX		1-20	
	FIGURE AND ITEM NUMBER INDEX		1-92	

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Direct Support and General Support Maintenance of the Dump Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The

figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

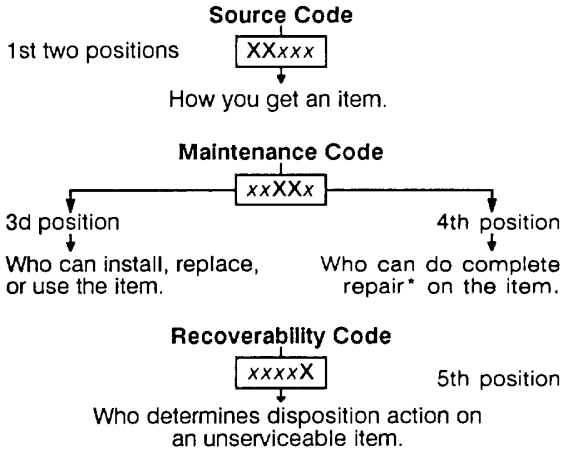

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: