TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

DISTRIBUTOR, WATER, TANK TYPE: TRUCK MOUNTED, GASOLINE DRIVEN (NSN 3825-00-954-9033)

McLEOD MODEL W15A NON-WINTERIZED

MULTIFUEL DRIVEN (NSN 3825-00-744-9090)

MCLEOD MODEL W15A WINTERIZED

MULTIFUEL DRIVEN (NSN 3825-00-077-0550)

MCLEOD MODEL W15A4112

DIESEL DRIVEN (NSN 3825-00-474-3742)

McLEOD MODEL W15B9019

This manual supersedes TM 5-3835-221-20P, dated 24 August 1984, and TM 5-3895-221-34P, dated 28 August 1984 and all changes.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
11 MARCH 1992

TECHNICAL MANUAL

*TM 5-3825-221-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., *11 March 1992*

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

DISTRIBUTOR, WATER, TANK TYPE: TRUCK MOUNTED, GASOLINE DRIVEN (NSN 3825-00-954-9033)

MCLEOD MODEL W15A NON-WINTERIZED

MULTIFUEL DRIVEN (NSN 3825-00-744-9090)

MCLEOD MODEL W15A WINTERIZED

MULTIFUEL DRIVEN (NSN 3825-00-077-0550)

MCLEOD MODEL W1 5A4112

DIESEL DRIVEN (NSN 3825-00-474-3742)

MCLEOD MODEL W15B9019

Current as of 31 July 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 *(Recommended Changes to Publications and Blank Forms),* or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE ASSEMBLY	1-1	1
	ENGINE MOUNTING BRACKETS	2-1	2
	0101 - CRANKCASE, BLOCK, CYLINDER HEAD	3-1	
	CYLINDER ASSEMBLY	3-1	3
	CYLINDER HEAD AND CRANKCASE ASSEMBLY	4-1	4
	CRANKCASE PLATES AND GASKETS	5-1	5

*** This manual supersedes TM 5-3825-221-20P, dated 24 August 1984 and TM 5-3825-221-34P, dated 28 August 1984 and all changes**

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0102 - CRANKSHAFT	6-1	
	CRANKSHAFT	6-1	6
	0103 - FLYWHEEL ASSEMBLY	7-1	
	FLYWHEEL ASSEMBLY	7-1	7
	0104 - PISTONS, CONNECTING RODS	8-1	
	PISTONS AND CONNECTING RODS	8-1	8
	0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM	9-1	
	VALVES AND LIFTERS	9-1	9
	CAMSHAFT AND TIMING GEARS	10-1	10
	TIMING GEAR COVER	11-1	11
	0106 - ENGINE LUBRICATION SYSTEM	12-1	
	GOVERNOR OIL LINE AND FITTINGS	12-1	12
	OIL PUMP	13-1	13
	CRANKCASE DRAIN, VENTILATION AND LEVEL GAGE	14-1	14
	OIL FILTER	15-1	15
	OIL LINES AND FITTINGS	16-1	16
	OIL PAN	17-1	17
	0107 - ENGINE STARTING SYSTEM	18-1	
	HANDCRANK AND MOUNTING HARDWARE	18-1	18
	0108 - MANIFOLDS	19-1	
	MANIFOLDS	19-1	19
GROUP 03	FUEL SYSTEM		
	0301 - CARBURETOR, FUEL INJECTOR	20-1	
	CARBURETOR	20-1	20
	0302 - FUEL PUMPS	21-1	
	FUEL PUMP	21-1	21
	0304 - AIR CLEANER	22-1	
	AIR CLEANER	22-1	22
	0306 - TANKS, LINES, FITTINGS, HEADERS	23-1	
	CARBURETOR FUEL LINE	23-1	23
	FUEL TANK AND LINES	24-1	24
	FUEL TANK AND GAGE	25-1	25
	0308 - ENGINE SPEED GOVERNOR AND CONTROLS	26-1	
	GOVERNOR AND CONTROLS	26-1	26
	GOVERNOR	27-1	27
	0311 - ENGINE STARTING AIDS	28-1	
	PRIMER	28-1	28
	0312 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS	29-1	
	CHOKE CONTROL	29-1	29
GROUP 04	EXHAUST SYSTEM		
	0401 - MUFFLER AND PIPES	30-1	
	EXHAUST PIPES	30-1	30
GROUP 05	COOLING SYSTEM		
	0502 - COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, ETC	31-1	
	AIR SHROUDS	31-1	31
GROUP 06	ELECTRICAL SYSTEM		
	0603 - STARTING MOTOR	32-1	
	STARTER	32-1	32
	STARTER	33-1	33

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0605 - IGNITION COMPONENTS	34-1	
	MAGNETO	34-1	34
	MAGNETO COMPONENTS	35-1	35
	0606 - ENGINE SAFETY CONTROLS	36-1	
	PRIMARY GROUND SWITCH	36-1	36
	OIL PRESSURE SWITCH	37-1	37
	THERMOSTATIC SWITCH	38-1	38
	0607 - INSTRUMENT OR ENGINE CONTROL PANEL	39-1	
	INSTRUMENT PANEL AND SWITCHES	39-1	39
	FUEL GAGE	40-1	40
	0608 - MISCELLANEOUS ITEMS	41-1	
	TURN SIGNAL SWITCH AND FLASHER	41-1	41
	0609 - LIGHTS	42-1	
	CLEARANCE LIGHTS	42-1	42
	IDENTIFICATION LIGHTS AND REAR TURN SIGNAL	43-1	43
	LIGHT BRACKETS AND COVERS	44-1	44
	BLACKOUT CLEARANCE LIGHT	45-1	45
	FRONT TURN SIGNAL AND BRACKET	46-1	46
	0610 - SENDING UNITS AND WARNING SWITCHES	47-1	
	FUEL LEVEL SENDING UNIT	47-1	47
	0615 - RADIO INTERFERENCE SUPPRESSION	48-1	
	GROUND STRAPS, MAGNETO AND STARTER	48-1	48
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	49-1	
	TACHOMETER DRIVE WHEEL	49-1	49
	1313 - TIRES, TUBES, TIRE CHAINS	50-1	
	TIRE AND TUBE	50-1	50
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1501 - FRAME ASSEMBLY	51-1	
	CHASSIS AND CATWALKS	51-1	51
	LADDER AND FRAME	52-1	52
	1504 - SPARE WHEEL CARRIER AND TIRE LOCK	53-1	
	SPARE WHEEL MOUNTING LOCK	53-1	53
GROUP 18	BODY, CAB, HOOD, AND HULL		
	1801 - BODY CAB, HOOD, AND HULL ASSEMBLIES	54-1	
	ENGINE HOUSING	54-1	54
	1808 - STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.	55-1	
	TOOLBOX	55-1	55
	1811 - TANK BODIES	56-1	
	WATER TANK	56-1	56
	MANHOLE COVER	57-1	57
GROUP 22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
	2202 - ACCESSORY ITEMS	58-1	
	GONG BELL	58-1	58

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	2210 - DATA PLATES AND INSTRUCTION HOLDERS	59-1	
	DATA PLATES	59-1	59
GROUP 47	GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES		
	4701 - INSTRUMENTS	60-1	
	TACHOMETER DRIVE	60-1	60
	TACHOMETER	61-1	61
	4702 - GAGES, MOUNTINGS, LINES, AND FITTINGS	62-1	
	OIL AND WATER PRESSURE GAGES	62-1	62
	WATER LEVEL GAGE	63-1	63
	WATER LEVEL INDICATOR ASSEMBLY	64-1	64
GROUP 55	PUMPS		
	5500 - PUMP ASSEMBLY	65-1	
	WATER PUMP	65-1	65
	5501 - SHAFTS, ROTORS, IMPELLERS	66-1	
	IMPELLER, WATER PUMP	66-1	66
	5510 - INLET AND OUTLET COMPONENTS	67-1	
	INLET AND OUTLET PIPES, HOSES AND VALVES	67-1	67
	CHECK VALVE ASSEMBLY	68-1	68
	SUCTION HOSE	69-1	69
	SUCTION AND DISCHARGE HOSES	70-1	70
	SPRAY CONTROL VALVES AND LEVERS	71-1	71
	SPRAY CONTROL VALVES AND LEVERS (MODEL W15B9019)	72-1	72
	5513 - FLUID LINES	73-1	
	SPRAY BARS AND CONTROLS	73-1	73
	SPRAY BAR AND CONTROLS (MODEL W15B9019)	74-1	74
	SPRAY BAR	75-1	75
GROUP 91	CHEMICAL, BIOLOGICAL, AND RADIOLOGICAL (CBR) EQUIPMENT		
	9120 - DECONTAMINATION EQUIPMENT	76-1	
	DECONTAMINATION BRACKET ASSEMBLY (MODEL W15B9019)	76-1	76
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS	KITS-1	
	REPAIR KITS	KITS-1	
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	
SECTION III.	SPECIAL TOOLS (NOT APPLICABLE)		
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-8	
	FIGURE AND ITEM NUMBER INDEX	I-29	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Water Distributor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts In each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number-(NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance.

The figure and item number-index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code Is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

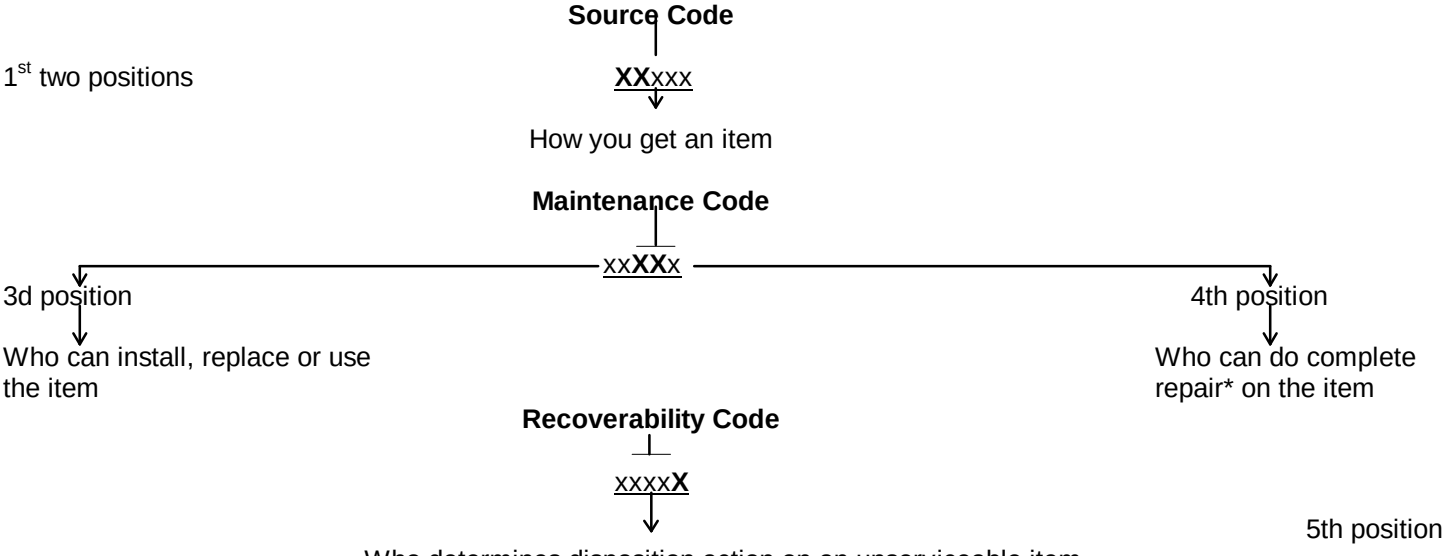

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: