TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

**DISTRIBUTOR, WATER, SELF-PROPELLED,
2500 GALLON CAPACITY, SECTIONALIZED
AND NON-SECTIONALIZED MODELS
613BWDS AND 613BWDNS
NSN 3825-01-143-1213
NSN 3825-01-143-1212**

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

27 MARCH 1992

TECHNICAL MANUAL

TM 5-3825-226-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., *27 March 1992*

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

DISTRIBUTOR, WATER, SELF-PROPELLED, 2500 GALLON CAPACITY, SECTIONALIZED AND NON-SECTIONALIZED MODELS 613 BWDS AND 613 BWDNS NSN 3825-01-143-1213 NSN 3825-01-143-1212

Current as of 25 October 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 *(Recommended Changes* to *Publications and Blank Forms),* or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, Ml 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE LIFTING EYES AND MOUNTING HARDWARE	1-1	1
	0101 - CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
	CYLINDER HEAD AND MOUNTING HARDWARE	2-1	2
	CYLINDER BLOCK ASSEMBLY	3-1	3
	FRONT HOUSING, COVER, AND FASTENER	4-1	4
	0102 - CRANKSHAFT	5-1	
	CRANKSHAFT AND SEALS	5-1	5
	AUXILIARY DRIVE PULLEY	6-1	6
	0103 - FLYWHEEL ASSEMBLY	7-1	
	FLYWHEEL HOUSING AND COVER	7-1	7
	0104 - PISTONS, CONNECTING RODS	8-1	
	CONNECTING ROD AND PISTON	8-1	8

TABLE OF CONTENTS - Continued

		Page	Illus Fig
	0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM..	9-1	
	CAMSHAFT ASSEMBLY	9-1	9
	VALVE MECHANISM AND COVER	10-1	10
	0106 - ENGINE LUBRICATION SYSTEM	11-1	
	OIL LEVEL GAGE	11-1	11
	OIL PUMP AND LINES	12-1	12
	OIL PAN	13-1	13
	OIL COOLER AND FILTER	14-1	14
	CRANKCASE VENTILATION AND VALVE ASSEMBLY	15-1	15
	OIL SAMPLING VALVES ..	16-1	16
	0108 - MANIFOLDS	17-1	
	EXHAUST AND INLET MANIFOLDS	17-1	17
GROUP 03	FUEL SYSTEM		
	0302 - FUEL PUMPS	18-1	
	FUEL INJECTION LINES	18-1	18
	GOVERNOR AND FUEL INJECTION PUMP	19-1	19
	GOVERNOR AND FUEL INJECTION PUMP ASSEMBLY	20-1	20
	GOVERNOR AND FUEL INJECTION PUMP ASSEMBLY	21-1	21
	FUEL INJECTION LINES AND FITTINGS	,22-1	22
	0304 - AIR CLEANER	23-1	
	AIR CLEANER AND ADAPTER	23-1	23
	AIR CLEANER DISMOUNT	24-1	24
	0306 - TANKS, LINES, FITTINGS, HEADERS	25-1	
	FUEL FILTER LINES	25-1	25
	FUEL LINES	26-1	26
	AUXILIARY FUEL TANK LINES	27-1	27
	AUXILIARY FUEL TANK STORAGE	28-1	28
	FUEL DISCONNECT LINES	29-1	29
	FUEL DISCONNECT	30-1	30
	AUXILIARY FUEL TANK	31-1	31
	FUEL TANK ASSEMBLY AND RELATED PARTS	32-1	32
	0308 - ENGINE SPEED GOVERNOR AND CONTROLS	33-1	
	GOVERNOR AND FUEL PUMP DRIVE	33-1	33
	GOVERNOR CONTROL PEDAL	34-1	34
	GOVERNOR CONTROL LEVER	35-1	35
	0309 - FUEL FILTERS	36-1	
	FUEL FILTERS AND BASE COVER	36-1	36
	FUEL FILTER	37-1	37
	WATER SEPARATOR	38-1	38
	0311 - ENGINE STARTING AIDS	39-1	
	ETHER STARTING AID	39-1	39
GROUP 04	EXHAUST SYSTEM		
	0401 - MUFFLER AND PIPES	40-1	
	MUFFLER AND MOUNTING HARDWARE	40-1	40
GROUP 05	COOLING SYSTEM		
	0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	41-1	
	RADIATOR .	41-1	41

TABLE OF CONTENTS - Continued

		Page	Illus Fig
	0503 - WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET	42-1	
	WATER LINES	42-1	42
	0504 - WATER PUMP	43-1	
	WATER PUMP	43-1	43
	0505 - FAN ASSEMBLY	44-1	
	IDLER PULLEY	44-1	44
	FAN AND DRIVE	45-1	45
GROUP 06	ELECTRICAL SYSTEM		
	0601 - GENERATOR, ALTERNATOR	46-1	
	ALTERNATOR AND MOUNTING HARDWARE	46-1	46
	ALTERNATOR ASSEMBLY	47-1	47
	0603 - STARTING MOTOR	48-1	
	STARTER MOTOR	48-1	48
	ELECTRIC STARTING MOTOR ASSEMBLY(FRONT)	49-1	49
	ELECTRIC STARTING MOTOR ASSEMBLY(BACK)	50-1	50
	STARTER SOLENOID ASSEMBLY	51-1	51
	0606 - ENGINE SAFETY CONTROLS	52-1	
	ELECTRICAL SHUT-OFF	52-1	52
	0607 - INSTRUMENT OR ENGINE CONTROL PANEL	53-1	
	GAGE WIRING	53-1	53
	LOW WATER LEVEL SENDER	54-1	54
	LOW WATER LEVEL ASSEMBLY	55-1	55
	LOW WATER LIGHT	56-1	56
	0609 - LIGHTS	57-1	
	DASH LAMP	57-1	57
	LIGHT WIRING	58-1	58
	TURN SIGNAL LIGHTS AND WIRING	59-1	59
	REAR FLOOD LIGHTS	60-1	60
	STOP AND TAIL LAMP	61-1	61
	LIGHTING DISCONNECT WIRES	62-1	62
	LIGHTING DISCONNECT HARNESS	63-1	63
	LIGHTING DISCONNECT WIRE HARNESS ASSEMBLY (SEE FIG. 62 FOR TOP ASSEMBLY)	64-1	64
	LAMP ASSEMBLY	65-1	65
	0611 - HORN, SIREN	66-1	
	BACK-UP WARNING ALARM AND SWITCH	66-1	66
	0612 - BATTERIES, STORAGE	67-1	
	BATTERIES AND WIRING	67-1	67
	BATTERY BOX	68-1	68
	BATTERY STORAGE	69-1	69
	BATTERY DISMOUNT	70-1	70
	0613 - HULL OR CHASSIS WIRING HARNESS	71-1	
	CONTROL DEVICES AND WIRING HARNESS ASSEMBLIES	71-1	71
	WIRING HARNESS	72-1	72
	0615 - RADIO INTERFERENCE SUPPRESSION	73-1	
	RADIO INTERFERENCE SUPPRESSION	73-1	73

TABLE OF CONTENTS - Continued

		Page	Illus Fig
GROUP 07	TRANSMISSION		
	0705 - TRANSMISSION SHIFTING COMPONENTS	74-1	
	TRANSMISSION CONTROL LINKAGE	74-1	74
	TRANSMISSION CONTROL CABLES	75-1	75
	0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	76-1	
	TRANSMISSION ARRANGEMENT	76-1	76
	TRANSMISSION HYDRAULIC CONTROL VALVE	77-1	77
	TRANSMISSION SELECTOR VALVE	78-1	78
	TORQUE CONVERTER	79-1	79
	TORQUE CONVERTER AND TRANSMISSION/SCAVAGE PUMP	80-1	80
	PLANETARY TRANSMISSION	81-1	81
	PLANETARY TRANSMISSION	82-1	82
	PLANETARY TRANSMISSION	83-1	83
	0719 - REDUCTION OR TRANSFER GEARS, SHAFTS, AND BEARINGS	84-1	
	TRANSFER GEAR - OUTPUT	84-1	84
	TRANSFER GEAR - INPUT	85-1	85
	0721 - COOLERS, PUMPS, MOTORS	86-1	
	TRANSMISSION FILTER	86-1	86
	TRANSMISSION OIL AND COOLER TORQUE CONVECTOR LINES	87-1	87
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
	0900 - PROPELLER SHAFTS	88-1	
	DRIVE SHAFT	88-1	88
GROUP 10	FRONT AXLE		
	1000 - FRONT AXLE ASSEMBLY	.89-1	
	BRAKE AND AXLE	89-1	89
	STEERING AXLE AND LINKAGE	90-1	90
	STEERING AXLE AND CYLINDER	91-1	91
	AXLE MOUNTS	92-1	92
	1002 - DIFFERENTIAL	93-1	
	DIFFERENTIAL AND BEVEL GEAR	93-1	93
	LOCK-TYPE DIFFERENTIAL AXLE, LINES AND VALVE	94-1	94
	1003 - PLANETARY OR FINAL DRIVE	95-1	
	LOCK-TYPE DIFFERENTIAL	95-1	95
	FINAL DRIVE AND WHEEL	96-1	96
GROUP 11	REAR AXLE		
	1108 - WALKING BEAMS, STUD AXLES AND PARTS	97-1	
	REAR END ASSEMBLY	97-1	97
GROUP 12	BRAKES		
	1202 - SERVICE BRAKES	98-1	
	HYDRAULIC CALIPER SERVICE BRAKE	98-1	98
	1208 - AIR BRAKE SYSTEM	99-1	
	BRAKE CONTROL	99-1	99

TABLE OF CONTENTS - Continued

		Page	Illus Fig
	1208 - AIR BRAKE SYSTEM (CON'T)		
	AIR BRAKE CONTROL VALVE AND MOUNTING HARDWARE	100-1	100
	AIR BRAKE CONTROL VALVE ASSEMBLY	101-1	101
	HANDBRAKE CONTROL VALVE	102-1	102
	BRAKE DOUBLE CHECK VALVE	103-1	103
	BRAKE VALVE	104-1	104
	AIR BRAKE RESERVOIR AND LINES.....	105-1	105
	BRAKE CYLINDER AND LINES	106-1	106
	PARKING BRAKE LINES	107-1	107
	PARKING BRAKE	108-1	108
	AIR LINES	109-1	109
	BRAKE SYSTEM	110-1	110
	1209 - AIR COMPRESSOR ASSEMBLY	.111-1	
	AIR COMPRESSOR, DRIVE AND MOUNTING HARDWARE.....	111-1	111
	AIR COMPRESSOR ASSEMBLY	112-1	112
GROUP 13	WHEELS AND TRACKS		
	1311 - WHEEL ASSEMBLY	113-1	
	WHEEL ASSEMBLY	113-1	113
	LOAD TRANSFER ASSEMBLY	114-1	114
	LOAD TRANSFER ASSEMBLY	115-1	115
	STEERING TIRE AND RIM	116-1	116
GROUP 14	STEERING		
	1401 - MECHANICAL STEERING GEAR ASSEMBLY	117-1	
	STEERING COLUMN	117-1	117
	COVER...	118-1	118
	CAP	119-1	119
	STEERING AXLE LEVER ASSEMBLY	120-1	120
	1402 - TRACTOR HITCH STEERING	121-1	
	HITCH	121-1	121
	HITCH SECTIONALIZATION COMPONENTS	122-1	122
	ARTICULATED CYLINDER SAFETY BAR	123-1	123
	1411 - HOSES, LINES, FITTINGS	124-1	
	STEERING AXLE HYDRAULIC LINES	124-1	124
	STEERING CYLINDER LINES	125-1	125
	STEERING VALVE AND LINES	126-1	126
	1412 - HYDRAULIC OR AIR CYLINDERS	127-1	
	STEERING CYLINDER	127-1	127
	1414 - STEERING SYSTEM VALVES	128-1	
	STEERING VALVES	128-1	128
	STEERING VALVE SUBASSEMBLY	129-1	129
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
	1501 - FRAME ASSEMBLY	130-1	
	MAIN FRAME	.130-1	130
	PARACHUTE EXTRACTION EYE AND TIE-DOWN EYE	131-1	131
	TRACTOR SLING EYES	132-1	132
	DRAFT FRAME	133-1	133
	TIE DOWN BRACKET AND PARACHUTE SUSPENSION EYE	134-1	134

TABLE OF CONTENTS - Continued

		Page	Illus Fig
	1501 - FRAME ASSEMBLY (CON'T)	130-1	
	STABILITY ASSEMBLY	135-1	135
	LADDER ASSEMBLY	136-1	136
GROUP 18	BODY, CAB, HOOD AND HULL		
	1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	137-1	
	ROLL OVER PROTECTIVE STRUCTURE FRAME	137-1	137
	1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES (CON'T)		
	ENGINE HOOD 138-1	138-1	
	TRIM AND COVERS	139-1	139
	COVERS, COVER PLATES, AND REAR END STORAGE	140-1	140
	1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING		
	PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC	141-1	
	FENDERS	141-1	141
	FENDER DISMOUNT	142-1	142
	1805 - FLOORS, SUBFLOORS, AND RELATED COMPONENTS	143-1	
	SAFETY TREADS	143-1	143
	1806 - UPHOLSTERY, SEATS, AND CARPETS	144-1	
	SEAT ASSEMBLY	144-1	144
	SEAT STORAGE	145-1	145
	1808 - STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES,		
	CABLE REELS, HOSE REELS, ETC	146-1	
	HOSE REEL ASSEMBLY	146-1	146
	STORAGE STEERING AXLE	147-1	147
	BRACKET BELLY PAN STORAGE	148-1	148
	HYDRAULIC LIFT CYLINDER STORAGE	149-1	149
	STORAGE BRACKET AND STABILITY PAD	150-1	150
	STORAGE HOOD	151-1	151
	STORAGE FENDERS	152-1	152
	1812 - SPECIAL PURPOSE BODIES	153-1	
	TANK ASSEMBLY	153-1	153
	MANHOLE - 30" NONVENTED	154-1	154
	CLEVIS ASSEMBLY AND DRAFT ARM PIVOT	155-1	155
GROUP 22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
	2202 - ACCESSORY ITEMS	156-1	
	WINDSHIELD WIPER	156-1	156
	WINDSHIELD WASHER RESERVOIR AND TUBING	157-1	157
	WINDSHIELD WIPER MOTOR AND ARM PIVOT	158-1	158
	MIRRORS	159-1	159
	AIR HORN	160-1	160
	TIRE INFLATION	161-1	161
	HOSE REEL ASSEMBLY	162-1	162
	2210 - DATA PLATES AND INSTRUCTION HOLDERS	163-1	
	SCALD HAZARD WARNING	163-1	163
	DECAL MARKING (TRACTOR)	164-1	164
	LABEL LOCATION	165-1	165
	DECAL	166-1	166
	DATA PLATES	167-1	167
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2401 - PUMP AND MOTOR	168-1	
	HYDRAULIC TANK AND DUMP/LIFT VANE-PUMP	168-1	168

TABLE OF CONTENTS - Continued

		Page	Illus Fig
	2401 - PUMP AND MOTOR (CON'T)	168-1	
	CARTRIDGE ASSEMBLY (REAR)	169-1	169
	CARTRIDGE ASSEMBLY (FRONT)	170-1	170
	2402 - MANIFOLD AND/OR CONTROL VALVES	171-1	
	DUMP AND LIFT CONTROL VALVE	171-1	171
	HYDRAULIC TANK EXTERNAL VALVE ASSEMBLY	172-1	172
	HYDRAULIC LINES RELIEF VALVE AND SELECTOR VALVE	173-1	173
	HYDRAULIC VALVE CONTROL	174-1	174
	2406 - STRAINERS, FILTERS, LINES AND FITTINGS, E T C	175-1	
	HYDRAULIC LINES	175-1	175
	HYDRAULIC PUMP AND LINES	176-1	176
	HYDRAULIC RESERVOIR AND LINES	177-1	177
	HYDRAULIC TANK FILTER	178-1	178
	DUMP AND LIFT VALVE LINES	179-1	179
	DUMP/LIFT PUMP AND LINES	180-1	180
	LIFT DISCONNECT LINES	181-1	181
	LIFT DISCONNECT LINES	182-1	182
	ELEVATOR FRAME DISCONNECT LINES	183-1	183
	ELEVATOR DISCONNECT LINES	184-1	184
	DUMP QUICK DISCONNECTS	185-1	185
	DUMP DISCONNECT LINES	186-1	186
	BRAKE QUICK DISCONNECT	187-1	187
	BRAKE DISCONNECT LINES	188-1	188
	HYDRAULIC SYSTEM	89-1	189
	2407 - HYDRAULIC CYLINDERS	190-1	
	LOAD TRANSFER CYLINDER	190-1	190
GROUP 43	GAS, AIR, AND VACUUM SYSTEMS		
	4316 - ASSEMBLED HOSE, FITTING, LINES, BREATHERS, FILTERS AND TRAPS	191-1	
	AIR PIPING ASSEMBLY	191-1	191
	CONTROL PANEL ASSEMBLY	192-1	192
	CONTROL PANEL LABELS	193-1	193
	4320 - MANUAL CONTROLS	194-1	
	CONTROL PANEL VALVE LEVER	194-1	194
GROUP 47	GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES		
	4702 - GAGES, MOUNTINGS, LINES, AND FITTINGS	195-1	
	NONELECTRICAL GAGES AND TUBING	195-1	195
	SIGHT GAGE ASSEMBLY	196-1	196
GROUP 55	PUMPS		
	5500 - PUMP ASSEMBLY	197-1	
	WATER END PUMP ASSEMBLY	197-1	197
	WATER END PUMP RELATED PARTS	198-1	198
	REAR END PIPING	199-1	199
	5501 - SHAFTS, ROLLERS, IMPELLERS	200-1	
	BRACKET BEARING AND SHAFT ASSEMBLY	200-1	200
	5505 - SUCTION AND/OR DISCHARGE ASSEMBLY	201-1	
	AIR ACTUATOR ASSEMBLY	201-1	201

TABLE OF CONTENTS - Continued

		Page	Illus Fig
	5505 - SUCTION AND/OR DISCHARGE ASSEMBLY (CON'T)	201-1	
	BUTTERFLY VALVE (3")	202-1	202
	BUTTERFLY VALVE (4")	203-1	203
	SPRAY HEAD ASSEMBLY (4")	204-1	204
	PRIME TANK PIPING	205-1	205
	5507 - PUMP DRIVE	206-1	
	HYDRAULIC MOTOR ASSEMBLY	206-1	206
	5510 - INLET AND OUTLET COMPONENTS	207-1	
	4" SUCTION HOSE ASSEMBLY	207-1	207
GROUP 74	CRANES, SHOVELS, AND EARTH MOVING EQUIPMENT COMPONENTS		
	7471 - SPRINKLER SYSTEM	208-1	
	SPRAY BAR ASSEMBLY	208-1	208
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS	KIT-1	
	REPAIR KITS	KIT-1	
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	
SECTION III.	SPECIAL TOOLS LIST		
GROUP 26	TOOLS AND TEST EQUIPMENT		
	2604 - SPECIAL TOOLS	209-1	
	TOOL GROUP	209-1	209
SECTION IV.	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-39	
	FIGURE AND ITEM NUMBER INDEX	I-123	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Sectionalized and Non-Sectionalized Tractor-Water Distributor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section 11. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration (s) /figure (s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BO1) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column* (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

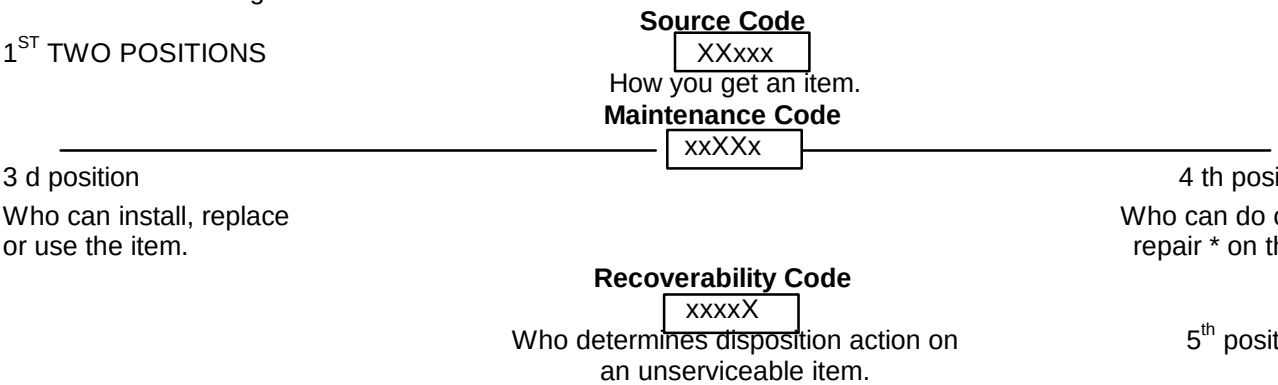

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "'Repair" function in a use/user environment in order to restore serviceability to a failed item.

(*1) Source* Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: