LUBRICATION

ORDER

LO 5-4210-213-12

20 APRIL 1971 (Supersedes LO 5-4210-213-12, Dated 28 JUNE 1968)

TRUCK, FIRE FIGHTING: POWER PUMPER; FOAM AND WATER 500 G.P.M, CENTRIFUGAL PUMP, POWER TAKE-OFF DRIVEN; 400 GAL WATER TANK, 40 GAL FOAM CHEMICAL TANK (WARD LAFRANCE TRUCK CORP MODEL M45A2WLF) AND (AMERICAN AIR FILTER MODEL FT 500)

Reference: LO 9-2320-209-12 and C9100-I L

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions. During inactive periods sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing.

A dotted circle indicates a drain below.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment

Drain transmission when hot. Fill and check level.

FOLD FOLD

LUBRICANT ● INTERVAL

Transfer Drive Universal Joint

Pinion Shaft Bearing

Hose Reel Shaft Bearing

Priming Pump Electric Motor (Sealed bearing, no lubrication required.)

Water Pump Transmission Breather (Clean and Re-oil)

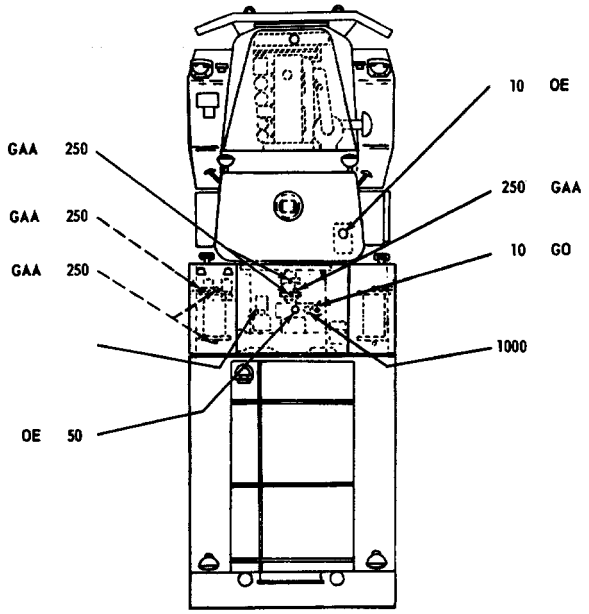

LUBRICANT ● INTERVAL

Primer Pump Reservoir Fill and Level (Fill to 1/2 inch from top of tank) (Check level) (See key.)

Transfer Drive Shaft Spline

Water Pump Transmission Fill and Level Gage (Fill to level) (See key) (Check level)

Water Pump Transmission Drain (Drain and refill)