LUBRICATION ORDER

LO 10-3510-208-12

7 FEBRUARY 1991

Supersedes LO 5–3510–208–12, 11 August 1988

LAUNDRY UNIT, SINGLE TRAILER MOUNTED W/CANVAS COVER; ARMY TYPE M532 (EIDAL MDL ELT9T & EDRO MDL EP120LTU)

REFERENCE C9100-IL

Approved for public release; distribution is unlimited

LUBRICANT ● INTERVAL | **INTERVAL ● LUBRICANT**

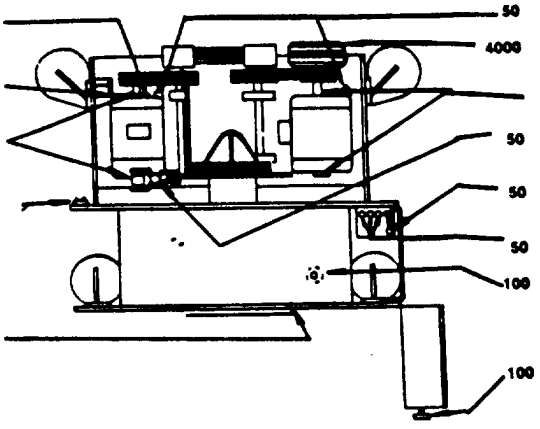

Washer Motor Slide Piston (See note 3) **OE** 100

Washer Motor Slide (See note 1.) **GAA** 50

Washer Motor Bearings (See note 2.) **GAA**

Trunnion Beering fitting **GAA** 500

PinDoor Hinge Pin (See note 3.) **OE** 50

50 **GAA** Main Drive Pillow Blocks

4000 **OE** Hydro-Sheave Drive (See note 7.)

Extractor Motor Bearings **GAA** (See note 2.)

50 **OE** Brake Hinge Pin (See note 3.)

50 **OE** Dump Valve Lever (Sea note 3.)

50 **GAA** Dump Valve

100 **OE** Dump Valve Air Piston

100 **OE** Control Drum Bearings (See note 3.)

- WASHER EXTRACTOR -

Tumbler Motor Bearings (No lubrication required)

Exhaust Fan Motor Bearings (No lubrication required)

Pillow Block Bearings **GAA** 50

Trunion Bearings (See note 4.) **GAA** 50

Door Hinge (Sea note 3.) **OE** 50

Door Latch (See note 3.) **OE** 50

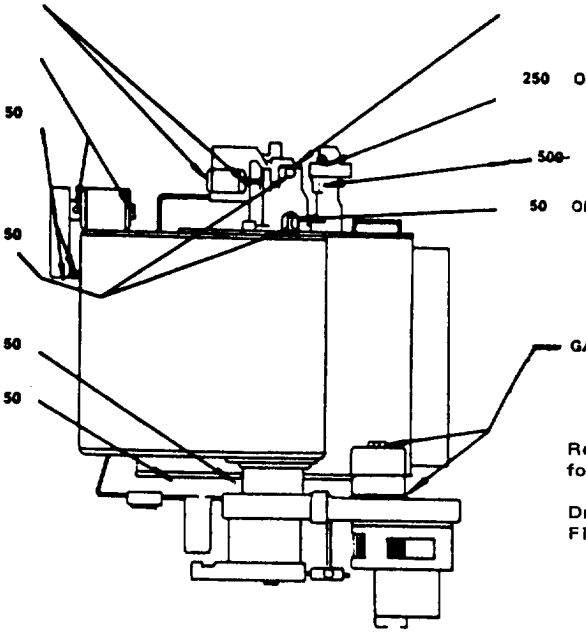

50 **GO** Gear Reducer, Fill and Level (Check level) (See Key)

250 **OE** Chain Tension Adjustme Screw (See note 3.)

500 Gear Reducer Drain (Drain and Refill)

50 **OE** Drive Chair (See note 6)

Burner Blower Motor Bearings (See note 2.) **GAA**

Relubricate after washing or fording.

Drain gear reducer when hot. Fill and check level.

Intervals are based on normal hours of operation. Reduce to compensate for abnormal operation and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

-DRYING TUMBLER-