TM 5-2350-262-20-2*

TECHNICAL MANUAL

UNIT MAINTENANCE MANUAL

VOLUME 2 OF 3

TABLE OF CONTENTS	i
VEHICLE MAINTENANCE INSTRUCTIONS	4-397
REFERENCES	A-1
MAINTENANCE ALLOCATION CHART	B-1
INDEX	INDEX 1

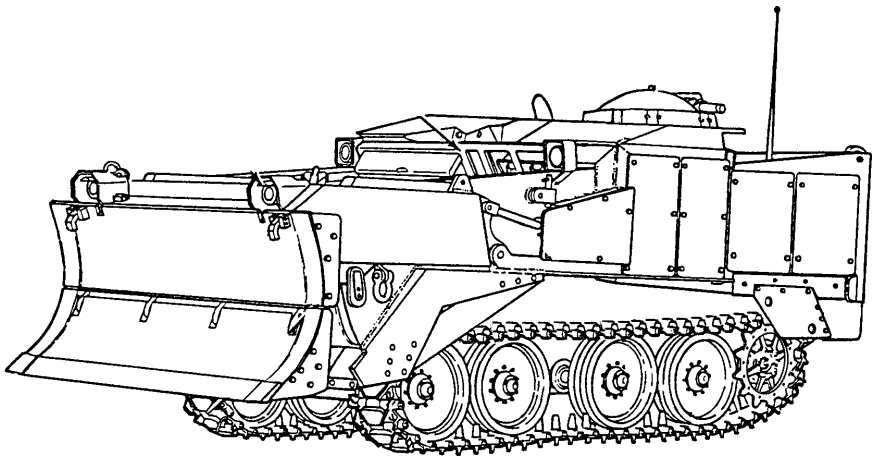

ARMORED COMBAT EARTHMOVER (ACE), M9 (NSN 2350-00-808-7100)

* This manual supersedes TM 5-2350-262-20-2, dated 1 November 1990, and all related changes.

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JANUARY 1997

Change 3

TECHNICAL MANUAL

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., *3 January 1997*

UNIT MAINTENANCE MANUAL

ARMORED COMBAT EARTHMOVER (ACE), M9
(NSN 2350-00-808-7100)

VOLUME 2 OF 3

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can improve this manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028-2 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is http://aeps.ria.army.mil. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the ADPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax, or email your letter, DA Form 2028, or DA Form 2028-2 direct to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-AC-NML, Rock Island, IL 61299-7630. The email address is amsta-ac-nml@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRUBTION STATEMENT A. Approved for public release; distribution is unlimited.

This manual is published in three volumes. TM 5-2350-262-20-1 contains Chapter 1 through Chapter 4, Section X. TM 5-2350-262-20-2 contains Chapter 4, Section XI through XXII and Appendixes A through H. TM 5-2350-262-20-3 contains hydraulic system principles operation and hydraulic system troubleshooting. This manual contains a table of contents, a group index, list of tasks, appendixes, and an alphabetical index covering three volumes.

TABLE OF CONTENTS

VOLUME 1

CHAPTER 1 INTRODUCTION
Section I. General Information 1-1
Section II. Equipment Description and Data 1-2
Section III. Principles of Operation 1-11

CHAPTER 2 SERVICES AND SCHEDULED MAINTENANCE
Section I. Repair Parts, Special Tools, TMDE, and Support Equipment 2-1
Section II. Service Upon Receipt 2-2
Section III. Preventive Maintenance Checks and Services 2-3
Section IV. Painting and Restencilling Markings 2-22
Section V. General Repair and Cleaning Methods 2-25
Section VI. General Hydraulic System Repair Methods 2-29
Section VII. General Quick-Disconnect Repair Methods 2-34
Section VIII. General Hull Repair Procedures 2-36
Section IX. Battery Box Insulation Replacement and Battery Service 2-48

* This manual supersedes TM 5-2350-262-20-2 dated November 1990 and all related changes.

TABLE OF CONTENTS (CONTINUED)

		Page
CHAPTER 3	TROUBLESHOOTING	
Section I.	Wiring Harness and Cable Repair	3-1
Section II.	Using STE/ICE with the M9	3-6
Section III.	General Hydraulic System Troubleshooting Procedures	3-77
Section IV.	Troubleshooting Charts	3-123
CHAPTER 4	VEHICLE MAINTENANCE INSTRUCTIONS	
Section I.	Group AA, Accelerator Installation	4-2
Section II.	Group AB, Air System Installation	4-13
Section III.	Group AD, Armor Installation	4-39
Section IV.	Group AF, Brake Control Installation	4-45
Section V.	Group AG, Deleted	
Section VI.	Group AJ, Electrical Installation	4-65
Section VII.	Group AL, Fire Extinguisher Installation	4-200
Section VIII.	Group AM, Fuel System Installation	4-215
Section IX.	Group AN, Heater and Ventilation Installation	4-240
Section X.	Group AP, Bolted Hull Assembly Installation	4-248
VOLUME 2		
Section XI.	Group AQ, Hydraulic Control Installation	4-397
Section XII.	Group AR, Hydraulic Installation	4-412
Section XIII.	Group AU, Powertrain Installation	4-533
Section XIV.	Group AV, Air Purifier Installation	4-797
Section XV.	Group AW, Radio Equipment Installation	4-811
Section XVI.	Group AX, Seat Installation	4-819
Section XVII.	Deleted	
Section XVIII.	Group A2, Stowage Installation	4-839
Section XIX.	Group A3, Suspension Installation	4-845
Section XX.	Group A5, Winch Installation	4-877
Section XXI.	Group A6, Special Purpose Kits Installation	4-896
Section XXII.	Preparation for Transport	4-945
APPENDIX A	REFERENCES	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-1
APPENDIX C	SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT	C-1
APPENDIX D	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST	D-1
APPENDIX E	ILLUSTRATED LIST OF MANUFACTURED ITEMS	E-1
APPENDIX F	TORQUE LIMITS	F-1
APPENDIX G	SCHEMATIC DIAGRAMS	G-1
APPENDIX H	CHARGING LIMITS	H-1

TABLE OF CONTENTS (CONTINUED)

Page

VOLUME 3

CHAPTER 1 INTRODUCTION
Section I. General Information 1-1
Section II. Equipment Description 1-2

CHAPTER 2 HYDRAULIC SYSTEM
Section I. Principles of Operation 2-1
Section II. General Hydraulic System Repair Methods 2-6

CHAPTER 3 TROUBLESHOOTING
Section I. General Hydraulic System Troubleshooting Procedures 3-1
Section II. Troubleshooting Procedures 3-14

APPENDIX A REFERENCES A-1
APPENDIX B SPECIAL TOOLS, TMDE, AND SUPPORT EQUIPMENT B-1
APPENDIX C SPECIAL TOOLS, HYDRAULIC TROUBLESHOOTING PARTS KIT, 5705562 ..... C-1
APPENDIX D TORQUE VALUE GUIDE FOR HYDRAULIC FITTINGS D-1
APPENDIX E SCHEMATIC DIAGRAM E-1

INDEX ..... INDEX 1

LIST OF TASKS

Maintenance tasks included in this manual are listed below and on the following pages. Use the table of contents for page reference by chapter and section, and use the alphabetical index for page cross reference to tasks by component/part name.

VOLUME 1

Page

GROUP AA, ACCELERATOR INSTALLATION (Section I)

Accelerator and Throttle Linkage Adjustment 4-3
Accelerator and Throttle Linkage Replacement and Repair 4-6

GROUP AB, AIR SYSTEM (Section II)

Air Lines and Fittings Replacement 4-14
Deleted
Brake Chamber Replacement and Adjustment 4-21
Air Reservoir Replacement 4-24
Air Compressor Governor Adjustment 4-27
Air Compressor Governor Replacement 4-30
Trailer Brake Coupling and Valve Replacement 4-32
Service Brake Valve Replacement 4-34
Trailer Brake Valve Replacement 4-37

GROUP AD, ARMOR INSTALLATION (Section III)

Exterior Armor Plates Replacement 4-40
Liquid Container Brackets Replacement and Repair 4-43

GROUP AF, BRAKE CONTROL INSTALLATION (Section IV)

Parking Brake Lever and Cable Adjustment 4-46
Parking Brake Lever and Cable Replacement 4-49
Brake Linkage and Bracket Replacment and Repair 4-54

GROUP AG, DRIVER'S CANOPY AND WINDSHIELD INSTALLATION (Section V)

Deleted

GROUP AJ, ELECTRICAL INSTALLATION (Section VI)

Starter Cable Replacement 4-67
STE/ICE-R Interface Resistor Box Replacement 4-69
STE/ICE-R Shunt Replacement 4-71
Master Relay Replacement 4-73
Slave Receptacle Replacement 4-75
Battery Replacement and Service 4-77
Battery Box Replacement 4-80
Battery Cables Replacement 4-83
Headlight Beam Selecting Switch Replacement 4-88
Domelight Dimmer Control Switch Replacement 4-90
Trailer Receptacle Replacement 4-92
Tachometer Sender and Adapter Replacement 4-95
Fuel Level Transmitter Replacement and Repair 4-97
Stoplight Switch Replacement 4-99
Ventilation Fan Wiring Harness Replacement and Repair 4-101
Deleted 4-103

LIST OF TASKS - CONTINUED

GROUP AJ, ELECTRICAL INSTALLATION (Section VI - CONTINUED) **Page**

Driver's Instrument Panel Assembly Replacement and Repair 4-105
Gauge and Panel Assembly Replacement and Repair 4-114
Start-Aid Control Switch Replacement 4-120
Circuit Breakers Replacement 4-122
Bilge Pump "On" Lamp Receptacle Replacement 4-124
Bilge Pump "On" Switch Replacement 4-126
Unsprung/Reverse Warning Light Flasher Replacement 4-129
Parking Brake Relay Replacement 4-131
Parking Brake Warning Switch Replacement 4-133
Warning Buzzer Replacement 4-136
Unsprung Pressure Switch Replacement (OLD PRODUCTION) 4-138
Unsprung Pressure Switch Replacement (NEW PRODUCTION) 4-139.1
Reverse Alarm Pressure Switch Replacement 4-140
Hydraulic Oil Temperature Transmitter Replacement 4-142
Low Air Pressure Warning Switch Replacement 4-144
Transmission Oil Temperature Transmitter Replacement 4-146
Low Transmission Oil Pressure Warning Transmitter Replacement 4-148
Engine Oil Pressure Switch and Transmitter Replacement 4-150
Engine Water Temperature Transmitter Replacement 4-152
Speedometer Sender and Adapter Replacement 4-154
Fuel Pressure Transducer Replacement 4-156
Starter Relay Replacement 4-158
Smoke Grenade Dischargers Replacement 4-160
Smoke Grenade Arming-Firing Unit Replacement 4-162
Discharger Wiring Harness Replacement and Repair 4-164
Arming-Firing Unit Wiring Harness Replacement and Repair 4-166
Headlight Sealed Beam and Incandescent Lamp Replacement 4-168
Stoplight/Taillight Lamp Replacement 4-171
Floodlight Replacement and Repair 4-173
Headlight Assembly Replacement and Repair 4-175
Stoplight/Taillight Replacement 4-188
Domelight Replacement and Repair 4-190
Semi-Automatic Track Adjuster Suspension Control Electrical Box Replacement (NEW PRODUCTION) .. 4-199.1
Semi-Automatic Track Adjuster Main Wiring Harness Replacement (NEW PRODUCTION) 4-199.3
Semi-Automatic Track Adjuster Control Wiring Harness Replacement (NEW PRODUCTION) 4-199.6
Semi-Automatic Track Adjuster SPRUNG/UNSPRUNG Tap Wiring Harness Replacement (NEW PRODUCTION) 4-199.9

GROUP AL, FIRE EXTINGUISHER INSTALLATION (Section VII)

Fixed Halon Fire Extinguisher Tubes, Hose, and Fittings Replacement (OLD PRODUCTION) 4-201
Fixed Dry Powder Fire Extinguisher Tubes, Hoses, and Fittings Replacement (NEW PRODUCTION). 4-205.1
Fixed Halon Fire Extinguisher Control Valve and Cable Replacement (OLD PRODUCTION) 4-206
Fixed Dry Powder Fire Extinguisher Control Valve and Cable Replacement (NEW PRODUCTION) 4-210.1
Fixed Halon Fire Extinguisher Canister and Clamps Replacement (OLD PRODUCTION) 4-211
Fixed Dry Powder Fire Extinguisher Canister and Clamps Replacement (NEW PRODUCTION 4-212.1
Portable Dry Powder Fire Extinguisher Bracket Replacement 4-213

GROUP AM, FUEL SYSTEM INSTALLATION (Section VIII)

Fuel Tank Draining 4-216
Fuel Return Hose Replacement 4-218

LIST OF TASKS - CONTINUED

Page

Fuel Inlet Hose Replacement 4-221
Fuel Tank-to-Filter and Drain Hoses Replacement 4-225
Fuel/Water Separator Assembly and Element Replacement and Service 4-228
Fuel Filler Neck and Strainer Replacement 4-232
Fuel Tank Replacement 4-234

GROUP AN, HEATER AND VENTILATION INSTALLATION (Section IX)

Deleted
Heater Assembly, Hoses, and Fittings Replacement 4-242.2
Heater Motor Blower Assembly Replacement 4-242.4
Heater Motor Housing Resistor, and Fittings Replacement 4-244
Driver's Ventilation Fan Replacement 4-244.2
Driver's Ventilation Fan Motor Blower Assembly Replacement 4-244.4
Driver's Ventilation Fan Filter and Lower Duct Replacement 4-246

GROUP AP, BOLTED HULL ASSEMBLY (Section X)

Apron and Dozer Assembly Replacement and Repair 4-249
Dozer Blade Cutting Edge and Dozer Extension End Bits Reversal and Replacement 4-257
Apron and Dozer Extensions Replacement 4-260
Apron Wear Plates Replacement 4-262
Apron Strip Replacement 4-264
Dozer Blade Replacement and Repair 4-266
Ejector Replacement 4-271
Ejector Stowage Box Repair 4-275
Ejector Rollers Replacement and Adjustment 4-277
Ejector Wear Plates Replacement and Adjustment 4-280
Scraper Cutting Edges Replacement 4-283
Apron Hydraulic Cylinder Replacement 4-286
Ejector Hydraulic Cylinder Replacement 4-290
Ejector Cylinder Bracket Replacement 4-296
Debris Shield Replacement 4-298
Driver's Hatch Assembly Replacement and Repair 4-300
Inclinometer Replacement 4-313
Interior Driver's Hatch Release Adjustment 4-315
Hatch Cover Holddown Latch Repair 4-317
Deleted
Deleted
Fuel Tank Armor Replacement 4-323
Radiator and Engine Compartment Armor Shroud Replacement 4-326
Cowling Replacement 4-334
Engine Intake and Exhaust Grilles and Access Covers Replacement 4-339
Latch Adjustment 4-345
Rear Grab Rails Replacement and Repair 4-347
Rear Step Replacement and Disassembly 4-349
Tiedown Brackets Replacement and Repair 4-351
Driver's Compartment Step Replacement 4-353
Rear Floor Plates Supports Replacement 4-355
Driver's Compartment Floor Plate Replacement and Repair 4-358
Rear Floor Plates Replacement 4-360
Track Retainer Replacement 4-362
Track Wear Shields and Wear Plates Replacement 4-364
Rear Lift Eye Shackle Replacement 4-367

LIST OF TASKS - CONTINUED

Page

Shackles and Brackets Replacement 4-369
Pintle Hook Replacement and Repair 4-371
Hull Access Covers and Plug Replacement and Repair 4-375
Protective Plates Replacement 4-379
Hull Access Cover Seal Replacement (OLD PRODUCTION) 4-382
Actuator Access Plates Replacement 4-383.2
Rear Bump Stop Replacement 4-384
Hull Drain Valve Replacement 4-388
Bilge Pump Assembly Replacement 4-390
Data Plates Replacement 4-393

END OF VOLUME 1

VOLUME 2

GROUP AQ, HYDRAULIC CONTROL INSTALLATION (Section XI)

Hydraulic Control Levers and Linkage Adjustment 4-398
Semi-Automatic Track Adjuster Hydraulic Control Levers, Linkage, and Switches Adjustment (NEW PRODUCTION) 4-399.1
Hydraulic Control Levers, Bellcranks, and Linkage Replacement and Repair (OLD PRODUCTION) 4-400
Hydraulic Control Levers, Bellcranks, and Linkage Replacement and Repair (NEW PRODUCTION) 4-411.1

GROUP AR, HYDRAULIC INSTALLATION (Section XII)

Hydraulic Hose Assembly Replacement 4-413
Hydraulic Suspension Hose Assembly Replacement 4-416
Hydraulic Return Hoses Replacement 4-420
Hydraulic Tube Assembly Replacement 4-425
Apron Cylinder to Inner Bowl Hydraulic Tubes Replacement 4-428
Inner Bowl Apron Hydraulic Cylinder Tubes Replacement 4-432
Main Supply Hydraulic Tube Assembly Replacement 4-436
Hydraulic Suspension Tubes, Fittings, and Pressure Relief Valve Replacement 4-441
Suspension Relief Valve Adjustment 4-445
Suspension Relief Valve Replacement 4-449
Hydraulic Front Manifolds and Fittings Replacement 4-451
Hydraulic Intermediate Manifolds and Fittings Replacement 4-453
Manifold Drain Valves Replacement 4-461
Main Hydraulic Accumulator Charging 4-466
Main Hydraulic Accumulator Replacement 4-470
Main Hydraulic Accumulator Charge and Gauge Assembly Replacement and Repair 4-472
Hydraulic High-Pressure Filter and Element Replacement 4-475
Hydraulic Return Line Filter Element Replacement (OLD PRODUCTION) 4-478
Hydraulic Return Line Filter Element Replacement (NEW PRODUCTION) 4-480.1
Hydraulic Return Line Filter Replacement (OLD PRODUCTION) 4-481
Hydraulic Return Line Filter Replacement (NEW PRODUCTION) 4-483.1
Hydraulic Tank Dipstick and Strainer Filter Replacement 4-484
Compensating Hydraulic Pump Testing and Adjustment 4-486
Compensating Hydraulic Pump Replacement 4-490
Directional Control Valve Bank Replacement 4-497
Bilge Pump Relief Valve (24) Adjustment 4-502
Ejector Relief Valve (21) Adjustment 4-505
Winch Relief Valve (C2) Adjustment 4-508
Right Suspension Raise Relief Valve (3R) Adjustment 4-511
Left Suspension Raise Relief Valve (3L) Adjustment 4-514
Right Pump Line Relief Valve (13R) Adjustment 4-517
Left Pump Line Relief Valve (13L) Adjustment 4-520
Apron Raise Relief Valve (19) Adjustment 4-523
Apron Lower Relief Valve (20) Adjustment 4-526
SPRUNG/UNSPRUNG Valve Replacement 4-529

LIST OF TASKS - CONTINUED

Page

GROUP AU, POWERTRAIN INSTALLATION (Section XIII)

Alternator and Regulator Replacement 4-535
Deleted
Starter Motor Replacement 4-549
Support Rods Replacement 4-544
Fuel Shutdown Valve Replacement 4-558
Power Package External Oil Lines and Fittings Replacement 4-560
Transmission Oil Lines Replacement 4-565
Engine Oil Cooler Bypass Tube Replacement 4-571

GROUP AU, POWERTRAIN INSTALLATION (Section XIII - CONTINUED)

Oil Analysis Sampling Manifold Replacement 4-575
Transmission Drain Hose Replacement 4-577
Engine Oil Level Indicator and Tube Assembly Replacement 4-579
Cooling System Tubes, Hoses, Clamps, and Fittings Replacement 4-581
Transmission Oil Cooler Replacement and Repair 4-586
Water Pump/Alternator Belt and Tensioner Replacement 4-596
Water Pump Replacement 4-598
Rocker Arm Cover and Gasket Replacement 4-602
Air Cleaner Replacement and Repair 4-604
Muffler Shields Replacement 4-606
Muffler Replacement 4-608
Exhaust Pipes Replacement 4-611
Start-Aid Valve Replacement 4-616
Start-Aid Cartridge, Nozzle, and Atomizer Replacement 4-618
Start-Aid Tubes and Fittings Replacement 4-620
Start-Aid Thermostat Replacement 4-622
Engine Oil Filter Element Replacement 4-624
Engine Oil Filter Assembly Replacement and Repair 4-626
Fan Belt Tensioner Adjustment 4-630
Fan Belt Replacement 4-632
Cooling System Fan Assembly and Shroud Replacement 4-634
Fan Belt Adjusting Cable and Tensioner Replacement 4-638
Fan Belt Tensioner Pulley Assembly Replacement 4-640
Fan Belt Tensioner Assembly Repair 4-644
Cooling System Service 4-646
Radiator Replacement 4-649
Radiator Side Seals Replacement and Repair 4-654
Transfer Case Lines, Fittings, and Breather Replacement 4-656
Scavenger Pump Filter Element Replacement 4-659
Scavenger Pump Filter Assembly Replacement 4-661
Transfer Case Input Gear Replacement 4-664
Scavenger Pump Replacement 4-668
Transmission Shift Control Valve Hoses and Fittings Replacement 4-672
Transmission Shift Accumulator Charging 4-678
Transmission Shift Accumulator Replacement 4-683
Hydraulic Shift Control Valve Replacement 4-685

LIST OF TASKS - CONTINUED

Page

Transmission Shift Lever and Linkage Replacement and Repair 4-689
Neutral Start Switch Replacement 4-693
Transmission Oil Filter Element Replacement 4-695
Transmission Oil Filter Assembly Replacement and Repair 4-697
Transmission Output Shaft Flange Replacement 4-701
Steering Wheel and Linkage Adjustment 4-703
Steering Wheel and Linkage Replacement and Repair 4-706
CB/GS Steer Selector Lever and Linkage Replacement and Adjustment 4-716
Steer Unit and Winch Lines, Fittings, and Breathers Replacement 4-725
Steer Unit Torque Link Replacement and Repair 4-732

GROUP AU, POWERTRAIN INSTALLATION (Section XIII - CONTINUED)

Steer Unit Oil Level Gauge Rod and Oil Filter Neck Replacement 4-736
Steer Unit Brake Lever Adjustment 4-738
Steer Unit Brake Lever Boot Replacement 4-740
Driveshaft Replacement and Repair 4-742
Final Drive Lines, Fittings, and Breathers Replacement 4-746
Final Drives Disconnect and Connect 4-749
Drive Sprocket and Hub Replacement 4-758.1
No. 1 Roadwheel Replacement 4-759
No. 1 Outer Roadwheel Replacement 4-766
No. 2, 3, and 4 Roadwheels Replacement 4-770
Roadwheel Hub Replacement and Repair 4-773
Track Replacement 4-782
Track Shoe and Pad Replacement 4-788

GROUP AV, AIR PURIFIER INSTALLATION (Section XIV)

NBC Air Heater Replacement 4-798
NBC Frame Assembly Replacement 4-800
Air Purifier Service and Replacement 4-802
Air Purifier Hoses Replacement 4-804
Air Purifier Electrical Components Replacement 4-806
Driver's Compartment Mounting Bracket Replacement 4-809

GROUP AW, RADIO EQUIPMENT INSTALLATION (Section XV)

Radio Power Harness Replacement and Repair 4-812
Radio Equipment Box Replacement 4-815

GROUP AX, SEAT INSTALLATION (Section XVI)

Seatbelt Assembly Replacement 4-820
Seat Assembly Replacement and Repair 4-822

GROUP AZ, SPLASH SHIELD INSTALLATION (Section XVII)

Deleted

GROUP A2, STOWAGE INSTALLATION (Section XVIII)

Goggles Case Stowage Straps Replacement 4-840
Smoke Grenade Stowage Boxes Replacement 4-842

LIST OF TASKS - CONTINUED

Page

GROUP A3, SUSPENSION INSTALLATION (Section XIX)

Actuator Accumulator Charging, Testing, and Repair 4-846
Roadwheel Arm and Seal Replacement 4-853
Track Adjusting Cylinder Replacement (OLD PRODUCTION) 4-865
Track Adjusting Cylinder Replacement (NEW PRODUCTION) 4-869.1
Semi-Automatic Track Adjuster Assembly Replacement and Repair (NEW PRODUCTION) 4-869.6
Front Bump Stop Assembly and Cylinder Replacement 4-870

GROUP A5, WINCH INSTALLATION (Section XX)

Deleted

Winch Assembly Replacement 4-894.2
Winch Shift Control Lever Adjustment 4-894.8
Winch Shift Control Cable Replacement 4-894.10
Winch Shift Control Assembly Replacement and Repair 4-894.13
Winch Motor Replacement 4-894.15
Winch Wire Rope Assembly Replacement and Repair 4-894.17

GROUP A6, SPECIAL PURPOSE KITS INSTALLATION (Section XXI)

MCS NBC Filter Replacement 4-897
MCS NBC Filter Housing Replacement 4-899
MCS Refrigerant Line Shield Replacement 4-901
MCS Condenser Fan Replacement 4-903
MCS Gear Belt Replacement 4-905
MCS Intake Assembly Replacement 4-907
MCS Main Air Inlet Filter and Plenum Replacement 4-909
MCS Armor Enclosure and Harness Shield Replacement 4-912
MCS Unit Replacement 4-915
MCS Interface Plate Replacement 4-917
MCS Electrical Housing Replacement 4-919
MCS EMI Filter Box Replacement and Repair 4-922
MCS EMI Filter Box Wiring Harness and Circuit Breaker Replacement 4-926
MCS NBC Filter Switch Replacement 4-930
MCS Air Hoses Replacement 4-932
MCS Control Box Replacement and Repair 4-934
MCS Compressor Motor Replacement 4-939
MCS Main Wiring Harness Replacement 4-941
MCS Secondary Wiring Harness Replacement 4-946
MCS Delta Pressure Switch Replacement 4-948
MCS Heater Assembly Replacement 4-951
MCS Dump Valve Replacement 4-953
MCS Evaporator Fan Replacement 4-955
Ripper Blade Replacement 4-957
Convoy Warning Light Kit Replacement and Repair 4-961
Winch Cover Kit Replacement 4-962

PREPARATION FOR TRANSPORT (Section XXII)

Preparation for Transport 4-964

END OF VOLUME 2

Section XI. GROUP AQ, HYDRAULIC CONTROL INSTALLATION

TASK	PAGE
Hydraulic Control Levers and Linkage Adjustment	4-398
Semi-Automatic Track Adjuster Hydraulic Control Switches Adjustment (NEW PRODUCTION)	4-399.1
Hydraulic Control Levers and Linkage Replacement and Repair (OLD PRODUCTION)	4-400
Hydraulic Control Levers, Bellcrank, and Linkage Replacement and Repair (NEW PRODUCTION)	4-411.1