TM 9-1265-368-10-3
Supersedes copy dated 22 January 1982

OPERATOR'S MANUAL

MULTIPLE INTEGRATED LASER ENGAGEMENT SYSTEM (MILES)

SIMULATOR SYSTEM, FIRING LASER: M68 (NSN 1265-01-077-6079)

FOR

VIPER ROCKET

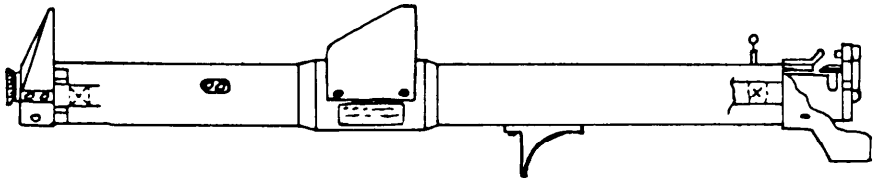

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JULY 1988

TM 9-1265-368-10-3*

TECHNICAL MANUAL

TM 9-1265-368-10-3

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 15 JULY 1988

OPERATOR'S MANUAL
FOR
MULTIPLE INTEGRATED LASER ENGAGEMENT SYSTEM (MILES)
SIMULATOR SYSTEM, FIRING, LASER, M68
(NSN 1265-01-077-6079)
FOR
VIPER ROCKET

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander US. Army Simulation, Training, and Instrumentation Command (STRICOM), ATTN: AMSTI-LSM, 12350 Research Parkway, Orlando, FL 32826-3276. A reply will be furnished to you.

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page
Storage Instructions	1
Skills Needed to Use this Manual	2
How to Use this Manual	3
General Information	4
Purpose of Equipment	4
Forms and Records	4
Equipment Description	6
Capabilities and Features	6
Battery Information	6
Location of Components	7
How it Works	8
How the VIPER/MILES is Used	8
Equipment Limitations	9
Tasks:	
1. Get This Equipment from Your NCOIC	10
2. Inspect and Clean VIPER/MILES and ATWESS	11
3. Inspect ATWESS Cartridges	13
4. Install Battery	14
5. Test VIPER/MILES	15
6. Set VIPER/MILES for ATWESS Fire	16

* Supercedes TM 9-1265-368-10-3 dated 22 January 1982, including all changes.

7. Load ATWESS 17
8. Fire VIPER/MILES 18
9. Observe Your Target 20
10. Reset VIPER/MILES 21
11. Inspect, Clean, and Return Equipment 22
Appendix A - References 24
Appendix B - Components of End Item and Basic Issue Items List 25
Appendix C - Additional Authorization List 26
Appendix D - Expendable Supplies and Materials List 27
Reference Information
Nomenclature Cross Reference List 28
List of Abbreviations 28
Glossary 28

Storage Instructions

Equipment Distribution:

The MILES equipment for the VIPER/MILES is shown in Task 1 of this Technical Manual (TM). Use the picture with Task 1 as a guide for equipment distribution: Be sure to issue a copy of this TM along with the MILES equipment.

Equipment Return and Storage:

CAUTION

MAKE CERTAIN THAT THE MWLD TORSO AND HELMET HARNESSES ARE COMPLETELY DRY BEFORE STORAGE IN TRANSIT CASE.

When receiving equipment for storage, always inspect the returned equipment using Task 11 in this TM for guidance.

Return all MILES equipment and the TMs to their transit cases.

Special Instructions for Infrequently Used Equipment:

If VIPER/MILES equipment is unused for 60 days, remove from transit case and perform Tasks 1, 2, and 11 in this TM.

Skills Needed To Use This Manual

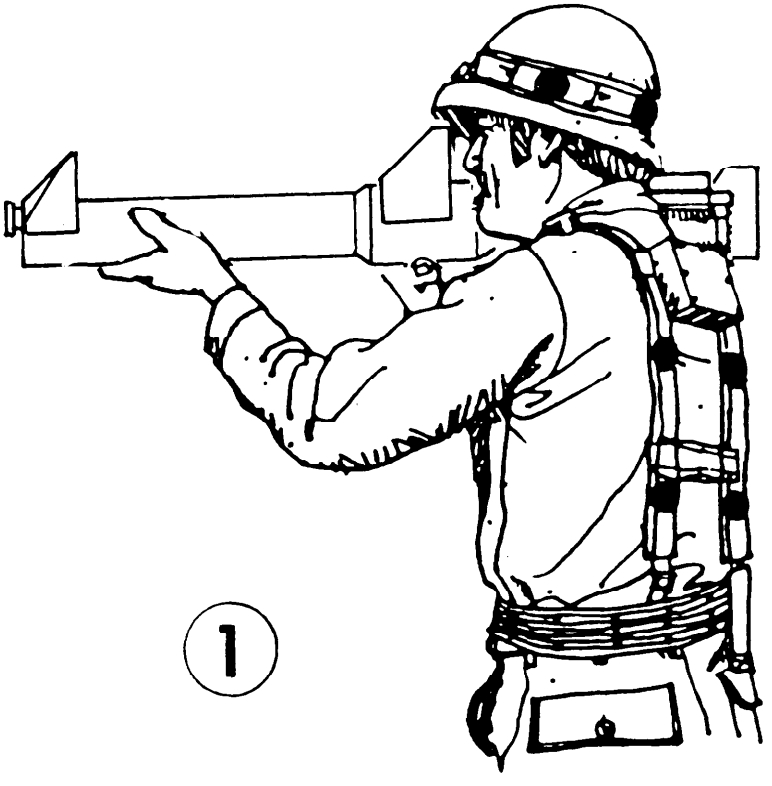

1

2

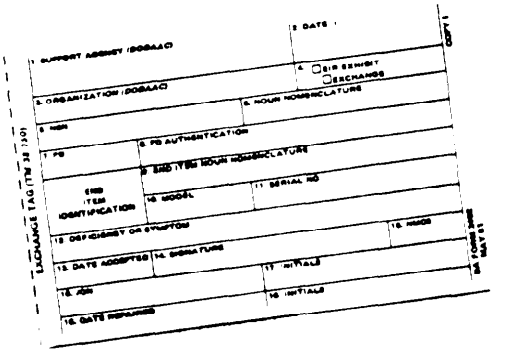

TO USE THIS MANUAL, YOU SHOULD BE ABLE TO:

1. Operate a VIPER.

2. Complete DA Form 2402.

If you can NOT do these tasks, ask your NC0 instructor to show you how. When you can do these tasks, go on to the next page.

VIPER operators also carry the M16A1 rifle and wear a Man-Worn Laser Detector assembly (MWLD). Instructions for using the M1GA1/MILES and the MWLD are found in TM 9-1265-370-10-1.