TM 55-1945-205-24-1-1

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL FOR

MODULAR CAUSEWAY SYSTEM (MCS)
CAUSEWAY FERRY (CF)
CF-1
NSN 1945-01-398-3856

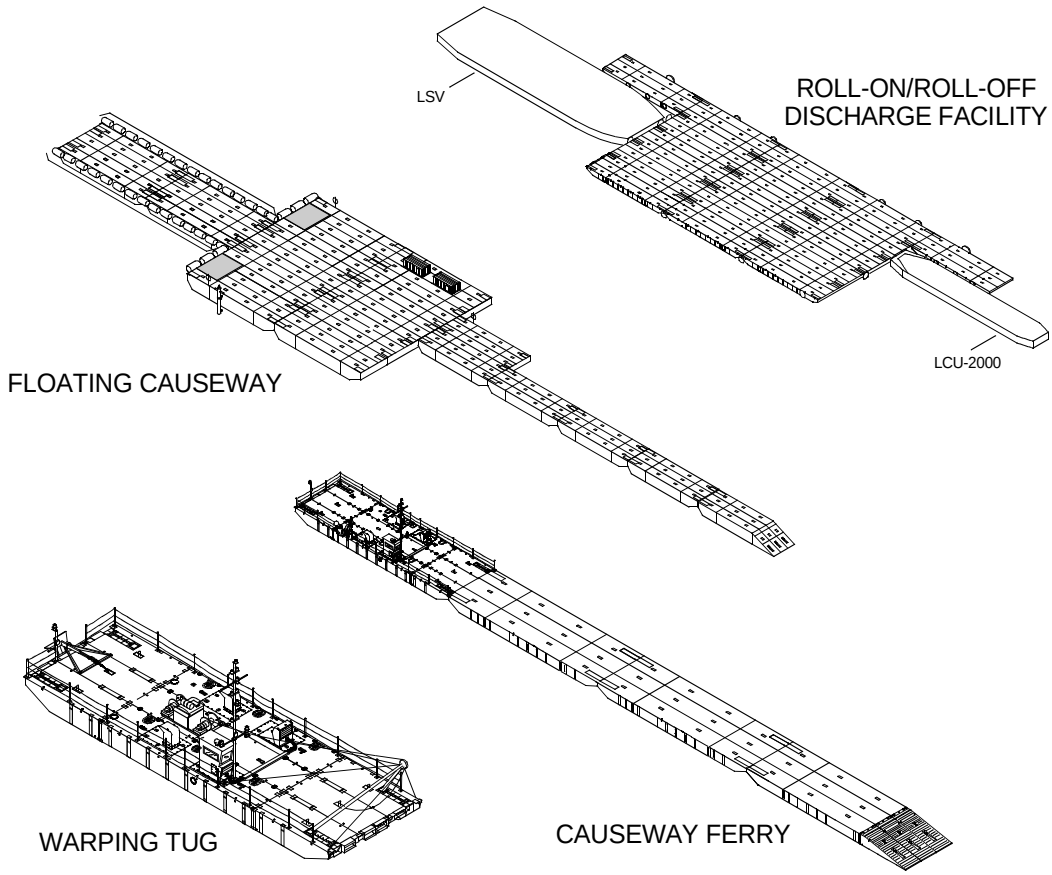

This manual supersedes TM 55-1945-205-24-1 dated 29 August 1997 including all changes.

DISTRIBUTION STATEMENT A - Approved for public release, distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
OCTOBER 2003

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 1 OCTOBER 2003

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL FOR

MODULAR CAUSEWAY SYSTEM (MCS)
CAUSEWAY FERRY (CF)
CF-1
NSN 1945-01-398-3856

This manual supersedes TM 55-1945-205-24-1 dated 29 August 1997 including all changes.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028-2 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is http://aeps.ria.army.mil. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS website. Fill out the form and click on "SUBMIT". Using this form on the AEPS website will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, E-mail or fax your letter, DA Form 2028, or DA Form 2028-2 directly to: Commander, U.S. Army Tank-Automotive and Armaments Command, ATTN: AMSTA-LC-CIP-WT, Rock Island, IL 61299-7630. The E-mail address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

WP Sequence No.

WARNING SUMMARY

HOW TO USE THIS MANUAL

CHAPTER 1 - DESCRIPTION AND THEORY OF OPERATION

General Information 0001 00
Description and Data, Equipment Characteristics, Capabilities and Features 0002 00
Description and Data, Location and Description of Major Components 0003 00
Description and Data, Equipment Data 0004 00
Theory of Operation 0005 00

CHAPTER 2 - TROUBLESHOOTING PROCEDURES

Troubleshooting Index 0006 00
Exhaust Plenum Ventilation Fan Will Not Operate 0007 00
Vent Fan Status Light Does Not Illuminate 0008 00
Flood Alarm Beeper Does Not Operate 0009 00
Flood Alarm Light 3A2DS2 Does Not Illuminate In Alarm Mode 0010 00
Exhaust Plenum Ventilation Fan Does Not Work 0011 00
Propulsion Module Becomes Hotter Than Normal Operating Temperature 0012 00
Drive Train Does Not Operate Freely and Smoothly, Excessive Vibration Is Experienced During Operation 0013 00
Diesel Engine Malfunctions 0014 00
Diesel Engine Smoke Is Consistently White In Nature 0015 00
Diesel Engine Has No Exhaust Smoke 0016 00
Diesel Engine Does Not Run Properly 0017 00
Diesel Engine Speed Control, Improper Speed Control From Operators Cab 0018 00
Diesel Engine Fuel System Is Not Receiving Fuel From Tank 0019 00
Diesel Engine Is Misfiring Caused By Clogged or Damaged Injectors 0020 00
Diesel Engine Governor, Electronic Governor Junction Box A4 Is Completely Dead, Actuator Lever Stays At Miminum Position When Power Is Applied To Governor 0021 00
Diesel Engine Governor Is Not Operating, Electronic Governor Actuator Goes To Full Stroke When DC Power Is Applied 0022 00
Diesel Engine Exhaust System Has Developed Water Leaks 0023 00
Transfer Case Cooling System, Water Is Not Expelling Out Of Exhaust Outlet Port and/or Transfer Case Cooling Port 0024 00
Diesel Engine Exhaust System Has Developed Exhaust Leaks 0025 00
Diesel Engine Starting System Does Not Start In Cold Temperatures 0026 00
Diesel Engine Lubrication System, Low Engine Oil Pressure (Audible Alarm and Warning Light On) (Normal Operation) 0027 00
Diesel Engine, Overheating (Audible Alarm and Warning Light On) 0028 00
Marine Gear Malfunctions 0029 00
Marine Gear Clutch Will Not Engage In Engage/Backflush Directions 0030 00
Transfer Case Malfunctions 0031 00
Hydraulic System Has High Pressure 0032 00
Hydraulic System Has No Pressure 0033 00
Pump-Jet Steering, No Steering From Operators Cab, Low Hydraulic System Pressure 0034 00
Pump-Jet, No Propulsion 0035 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 2 - TROUBLESHOOTING PROCEDURES (CONT'D)

Pump-Jet Develops Only A Small Amount of Thrust (Not Enough Water Is Being Delivered) 0036 00
Steering System, No Steering Control 0037 00
Pump-Jet Steering, No Steering Control Indication 0038 00
Pump-Jet Steering Reacts Sluggishly 0039 00
Steering System, No Steering From Operators Cab 0040 00
Diesel Engine Charging System, Alternator Is Not Charging Batteries 0041 00
Operators Cab, Ammeter Indicates Discharging of System 0042 00
Bilge Pump Does Not Function 0043 00
Bilge Pump Will Not Function In Test Mode (From Bilge Junction Boxes A5 and A7) 0044 00
Bilge Pump Will Not Function In Remote Mode From the Operators Cab 0045 00
Bilge Pump Output Has Reduced Flow 0046 00
Bilge Pump Will Not Shut Off 0047 00
Bilge Pump Status Lights Are Not Functional 0048 00
Bilge Pump, Water Entering Bilge From Pump Discharge Line When Pump Is Not Operating 0049 00
Fire Suppression System, Thermal Detector Does Not Trip Fire Alarm 0050 00
Fire Alarm Horn 3A4LS2 Does Not Operate 0051 00
Fire Alarm Light 3A2DS3 (Starboard) or 3A2DS1 (Port) Does Not Illuminate In Alarm Mode 0052 00
Interconnect Cable Not Working Between Modules 0053 00
Operators Cab Control Panels, No Power 0054 00
Marine Gear Clutch Status Light, Not Operational 0055 00
Operators Cab Gauge Lights Will Not Operate or Vary In Brightness 0056 00
Operators Cab Accessories Do Not Function 0057 00
Operators Cab Circuit Breaker Panel, All Circuits Controlled By 3A3CB1-3A3CB10 Are Not Functioning 0058 00
Operators Cab Circuit Breaker Panel, Circuit Controlled By 3A3CB1-3A3CB10 Is Not Functioning 0059 00
Operators Cab Circuit Breaker Panel, No Voltage At Test Jacks When Using Built In Test Switch 3A3S1 In Any Position 0060 00
Operators Cab Circuit Breaker Panel, No Voltage At Test Jacks When Using Built In Test Switch 3A3S1 ..... 0061 00
Spotlight Not Functioning 0062 00
Operators Cab Fan Control Does Not Work On Low 0063 00
Operators Cab Heater Fan, Only Fan B1B Operates With Heater Fan Control In High 0064 00
Operators Cab Heater Fan B1B Does Not Operate With Heater Fan Control In High 0065 00
Operators Cab Defroster Fan Does Not Operate 0066 00
Public Address Set (Loudhailer) Has No Power 0067 00
Public Address Set (Loudhailer) Will Not Transmit Voice To Hailer Horn (Loudhailer External Speaker) 0068 00
Public Address Set (Loudhailer) Will Not Transmit Fog Signal To Hailer Horn (Loudhailer External Speaker) 0069 00
Public Address Set (Loudhailer) VHF/FM DSC Transceiver Audio To Hailer Horn (Loudhaler External Speaker) 0070 00
VHF/FM DSC Transceiver Has No Power 0071 00
VHF/FM DSC Transceiver Will Not Receive 0072 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 2 - TROUBLESHOOTING PROCEDURES (CONT'D)

VHF/FM DSC Transceiver Will Not Transmit 0073 00
VHF/FM DSC Transceiver Does Not Display A Valid Position 0074 00
Precision Lightweight Global Positioning Receiver (PLGR) Has No Power 0075 00
Precision Lightweight Global Positioning Receiver (PLGR) Does Not Display A Valid Position 0076 00
Navigation Lights Audible Pulse Beeper Sounds 0077 00
Mast Assembly Lamp Fixture On Main or Stub Mast Not Working 0078 00
Main or Stub Mast, Loss Of Power 0079 00
Mast Enclosure Lamp Indicator Light On Junction Box Not Working 0080 00
Navigation Lights Will Not Function 0081 00
Navigation Lights, One or More Navigation Lights Are Not Functioning 0082 00
Stub Mast Stern Light Not Functioning 0083 00

CHAPTER 3 - UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE INSTRUCTIONS

Service Upon Receipt of Materiel 0084 00
Preventive Maintenance Checks and Services (PMCS) Procedures, Introduction 0085 00
Preventive Maintenance Checks and Services (PMCS) and Lubrication Procedures 0086 00
Powered Section Intake Plenum Assembly, Removal and Installation 0087 00
Powered Section Intake Plenum Air Intake Louver, Replacement 0088 00
Powered Section Intake Plenum Wire Rope, Replacement 0089 00
Powered Section Intake Plenum Interconnect Cover, Removal and Installation 0090 00
Powered Section Intake Plenum Interconnect Cover Gasket, Replacement 0091 00
Powered Section Exhaust Plenum, Removal and Installation 0092 00
Powered Section Exhaust Plenum Cover, Replacement 0093 00
Powered Section Exhaust Plenum Door, Replacement 0094 00
Powered Section Exhaust Plenum Locking Handle, Removal and Installation 0095 00
Powered Section Exhaust Plenum Vent Fan, Replacement 0096 00
Powered Section Operators Cab Side Access Panel, Removal and Installation 0097 00
Powered Section Operators Cab, Removal and Installation 0098 00
Powered Section Engine Hatch, Removal and Installation 0099 00
Powered Section Thruster Hatch, Removal and Installation 0100 00
Raw Water Cooling System Butterfly (Sea Chest) Valve, Replacement 0101 00
Raw Water Cooling System Sea Chest Zinc Anode Plug, Replacement 0102 00
Raw Water Cooling System Strainer Basket, Removal, Cleaning and Installation 0103 00
Raw Water Cooling System Duplex Strainer, Replacement and Adjustment 0104 00
Raw Water Cooling System Duplex Strainer, Repair 0105 00
Raw Water Cooling System Butterfly (Sea Chest) Valve To Duplex Strainer Water Hose, Replacement 0106 00
Raw Water Cooling System Duplex Strainer To Raw Water Pump Hose, Replacement 0107 00
Raw Water Cooling System Exhaust Shutoff Ball Valve, Replacement 0108 00
Raw Water Cooling System Shutoff Ball Valve To Marine Gear Heat Exchanger Water Hose, Replacement 0109 00
Raw Water Cooling System Shutoff Ball Valve To Exhaust Crossover Tee Water Hose, Replacement 0110 00
Raw Water Cooling System Shutoff Ball Valve To Transfer Case Heat Exchanger Water Hose, Replacement 0111 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 3 - MAINTENANCE INSTRUCTIONS (CONT'D)

Raw Water Cooling System Transfer Case Heat Exchanger To Overboard Discharge Water Hose, Replacement 0112 00
Raw Water Cooling System Marine Gear Heat Exchanger To Engine Heat Exchanger Water Hose, Replacement 0113 00
Raw Water Cooling System Pump To Engine Fuel Cooler Water Hose, Replacement 0114 00
Drive Train Transfer Case To Pump-Jet Machinery Guards, Removal and Installation 0115 00
Drive Train Marine Gear To Transfer Case Machinery Guards, Removal and Installation 0116 00
Drive Train Drive Shafts, Inspection and Servicing 0117 00
Drive Train Shafts, Removal and Installation 0118 00
Drive Train, Alignment 0119 00
Drive Train Main Engine Oil Filter, Replacement 0120 00
Drive Train Fast Lube System Hose, Replacement 0121 00
Drive Train Engine Oil Filter Inlet Hose, Replacement 0122 00
Drive Train Engine Oil Filter Outlet Hose, Replacement 0123 00
Drive Train Engine Oil Filter Adaptor, Replacement 0124 00
Drive Train Engine Heater Hose, Replacement 0125 00
Drive Train Heater Hose Female Quick Disconnect, Replacement 0126 00
Pump-Jet Braking Valve, Replacement 0127 00
Pump-Jet Gearcase, Servicing 0128 00
Pump-Jet Primary Planetary Gearbox, Servicing 0129 00
Pump-Jet Primary Planetary Gearing, Replacement 0130 00
Pump-Jet Auxiliary Planetary Gearbox, Servicing 0131 00
Pump-Jet Auxiliary Planetary Gearing, Replacement 0132 00
Pump-Jet Hydro-Motor, Removal and Installation 0133 00
Pump-Jet Expansion Tank, Cleaning 0134 00
Pump-Jet Expansion Tank, Replacement 0135 00
Hydraulic System, Vent 0136 00
Hydraulic System Pressure, Adjustment 0137 00
Hydraulic System Flow, Adjustment 0138 00
Hydraulic Steering System, Adjustment 0139 00
Hydraulic System Reservoir Fluid Level Sensor Subassembly, Removal, Testing and Installation 0140 00
Hydraulic System Reservoir Tank Strainer, Removal, Cleaning and Installation 0141 00
Hydraulic System Reservoir, Draining and Cleaning 0142 00
Hydraulic System Reservoir, Servicing 0143 00
Hydraulic System Filter Elements, Replacement 0144 00
Hydraulic System Reservoir, Replacement 0145 00
Hydraulic System Return Filter, Replacement 0146 00
Hydraulic System Reservoir Breather/Filler, Replacement 0147 00
Hydraulic System Reservoir Sight Gauge, Replacement 0148 00
Hydraulic System Reservoir To Hydraulic Pump Suction Hose, Replacement 0149 00
Hydraulic System Pump To Pressure Filter Tube, Replacement 0150 00
Hydraulic System Way-Valve Port M To Pump-Jet Manifold Port H Hydraulic Line, Replacement 0151 00
Hydraulic System Way-Valve Port N To Pump-Jet Manifold Port J Hydraulic Line, Replacement 0152 00
Hydraulic System Pump-Jet Manifold To 3/2 Ball Valve Line, Replacement 0153 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 3 - MAINTENANCE INSTRUCTIONS (CONT'D)

Hydraulic System 3/2 Ball Valve To Hand Pump Hydraulic Line, Replacement 0154 00
Hydraulic System 3/2 Ball Valve To Pump-Jet Brake Hydraulic Line, Replacement 0155 00
Hydraulic System Pump-Jet Hydraulic Motor To Reservoir Return Line, Replacement 0156 00
Hydraulic System Way Valve To Reservoir Return Line, Replacement 0157 00
Hydraulic System Pump To Reservoir Return Line, Replacement 0158 00
Hydraulic System Way-Valve Hydraulic Pump Line, Replacement 0159 00
Hydraulic System Pressure Filter To Way-Valve Line, Replacement 0160 00
Hydraulic System Needle Valve To Jet-Pump Motor Hydraulic Line, Replacement 0161 00
Hydraulic System Reservoir Return Line Filter Hose, Replacement 0162 00
Hydraulic Pump, Replacement 0163 00
Hydraulic Pump, Repair 0164 00
Hydraulic Hand Pump, Servicing 0165 00
Hydraulic Hand Pump, Replacement 0166 00
Hydraulic Hand Pump, Bleeding 0167 00
Hydraulic System Way-Valve, Replacement 0168 00
Hydraulic Way-Valve, Repair 0169 00
Hydraulic System 3/2 Ball Valve, Replacement 0170 00
Pump-Jet Planetary Gearing Feedback Unit, Replacement 0171 00
Alternator Belt Guard, Removal and Installation 0172 00
Alternator Drive Belts, Replacement 0173 00
Alternator, Replacement 0174 00
Alternator Drive Belts, Adjustment 0175 00
Engine Exhaust System, Removal, Inspection and Installation 0176 00
Engine Exhaust Muffler, Replacement 0177 00
Bilge Pump Float Switch, Cleaning and Testing 0178 00
Bilge Pump Check Valve and Discharge Hose, Removal, Cleaning, Inspection and Installation 0179 00
Bilge Float Switch With Guard, Replacement 0180 00
Bilge Check Valve, Replacement 0181 00
Bilge Pump, Replacement 0182 00
Fuel System Filler Neck Strainer, Removal, Cleaning and Installation 0183 00
Fuel System Tank, Inspection For Water 0184 00
Fuel System Tank, Draining 0185 00
Fuel System Inspection Covers, Removal and Installation 0186 00
Fuel System Tank, Inspection, Internal 0187 00
Fuel System Tank, Cleaning 0188 00
Fuel System Filler Neck Check Valve, Replacement 0189 00
Fuel System Ball Valves, Replacement 0190 00
Fuel System Tank Sight Level, Replacement 0191 00
Fuel System Tank Sight Level Shutoff Cock, Replacement 0192 00
Fuel System Rubber Hoses, Replacement 0193 00
Fuel System Tank Rigid Fuel Line, Replacement 0194 00
Fuel System Fuel/Water Separator, Draining 0195 00
Fuel System Fuel/Water Separator Filter Element, Replacement 0196 00
Fuel System Fuel/Water Separator Assembly, Replacement 0197 00
Powered Section Main Batteries Negative Lead Terminals, Removal and Installation 0198 00
Electrical System Batteries, Testing and Servicing 0199 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 3 - MAINTENANCE INSTRUCTIONS (CONT'D)

Electrical System Batteries, Replacement 0200 00
Electrical System Battery Box, Replacement 0201 00
Electrical System Junction Box JB1 Fuse, Replacement 0202 00
Electrical System Module Interconnect Assembly, Removal, Inspection and Installation 0203 00
Electrical System Module Interconnect Cable, Repair 0204 00
Electrical System Pump-Jet Junction Box A2jb2, Removal and Installation 0205 00
Electrical System Pump-Jet Thruster Junction Box A2jb2, Repair 0206 00
Electrical System Propulsion Module Junction Box A3, Removal and Installation 0207 00
Electrical System Propulsion Module Junction Box A3, Repair 0208 00
Electrical System Junction Box A4, Removal and Installation 0209 00
Electrical System Engine Junction Box Assembly A4, Repair 0210 00
Electrical System Bilge Pump Control Panel Assembly A5, Removal and Installation 0211 00
Electrical System Bilge Pump Control Panel Assembly A5, Repair 0212 00
Electrical System Propulsion Module Circuit Breaker Panel A6, Removal and Installation 0213 00
Electrical System Propulsion Module Circuit Breaker Panel A6, Repair 0214 00
Electrical System Single Bilge Pump Control Assembly A7, Removal and Installation 0215 00
Electrical System Single Bilge Pump Control Assembly A7, Repair 0216 00
Electrical System Vent Fan Relay Enclosure Assembly A8, Removal and Installation 0217 00
Electrical System Vent Fan Relay Enclosure Assembly A8, Repair 0218 00
Electrical System Pump-Jet Direction/Auxiliary Battery Junction Box A9, Removal and Installation 0219 00
Electrical System Pump-Jet Direction/Auxiliary Battery Junction Box A9, Repair 0220 00
Electrical System Starboard Receptacle A5/Port Receptacle A6 Assemblies, Removal and Installation 0221 00
Electrical System Starboard Receptacle A5/Port Receptacle A6 Assembly Receptacle 3A5J1/3A6J1, Replacement 0222 00
Electrical System Starboard Receptacle A5/Port Receptacle A6 Assembly Receptacle 3A5J4/3A6J4, Replacement 0223 00
Electrical System Starboard Receptacle A5/Port Receptacle A6 Assembly Receptacle 3A5J2/3A6J2, Replacement 0224 00
Electrical System Starboard Receptacle A5/Port Receptacle A6 Assembly Receptacle 3A5J3/3A6J3, Replacement 0225 00
Emergency Steering Unit, Repair 0226 00
Emergency Steering Adaptor, Removal and Installation 0227 00
Powered Module, Marine Growth Removal 0228 00
Powered Module, Cleaning and Painting 0229 00
Powered Module Male and Female Guillotine Connectors, Inspection, Repair, Lubrication and Adjustment 0230 00
Propulsion Module Fuel/Oil Compartment Gasket, Replacement 0231 00
Non-Powered Module, Marine Growth Removal 0232 00
Non-Powered Module, Cleaning and Painting 0233 00
Non-Powered Module, Inspection 0234 00
Non-Powered Module, Pressure Testing 0235 00
Non-Powered Module Male and Female Guillotine Connectors, Inspection, Repair, Lubrication and Adjustment 0236 00
Operators Cab Access Panel, Removal and Installation 0237 00
Operators Cab Air Intake Plenum, Replacement 0238 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 3 - MAINTENANCE INSTRUCTIONS (CONT'D)

Operators Cab Defroster Valves, Replacement 0239 00
Operators Cab Heater Valves, Replacement 0240 00
Operators Cab Defroster Water Hoses, Replacement 0241 00
Operators Cab Heater Water Hoses, Replacement 0242 00
Operators Cab Heater Hose Male Quick Disconnect, Replacement 0243 00
Operators Cab Window, Replacement 0244 00
Middle Control Panel A1, Removal and Installation 0245 00
Middle Control Panel A1 Indicator Light Bulb, Replacement 0246 00
Middle Control Panel A1 Tachometer Gauge, Replacement 0247 00
Middle Control Panel A1 Oil Pressure Gauge, Replacement 0248 00
Middle Control Panel A1 Ammeter Gauge, Replacement 0249 00
Middle Control Panel A1 Water Temperature Gauge, Replacement 0250 00
Middle Control Panel A1 Oil Temperature Gauge, Replacement 0251 00
Middle Control Panel A1 Engine Alarm Indicator, Replacement 0252 00
Middle Control Panel A1 Engine Start Push Button, Replacement 0253 00
Middle Control Panel A1 Toggle Switch, Replacement 0254 00
Middle Control Panel A1 Thrust Indicating Device, Replacement 0255 00
Middle Control Panel A1 Thrust Indicating Device Light Bulb, Replacement 0256 00
Middle Control Panel A1 Thrust Indicating Device Servo Unit, Repair 0257 00
Middle Control Panel A1 Engine Alarm Indicator Light Bulb, Replacement 0258 00
Middle Control Panel A1 Emergency Stop Push Button, Replacement 0259 00
Middle Control Panel A1 Engine Stop Push Button, Replacement 0260 00
Middle Control Panel A1 Navigation Horn Push Button, Replacement 0261 00
Lower Control Panel A2, Removal and Installation 0262 00
Lower Control Panel A2 Throttle Control, Replacement 0263 00
Lower Control Panel A2 Toggle Switch, Replacement 0264 00
Lower Control Panel A2 Steering Control Joystick Lever, Replacement 0265 00
Lower Control Panel A2 Dimmer Switch, Replacement 0266 00
Lower Control Panel A2 Indicator, Replacement 0267 00
Lower Control Panel A2 Indicator Light Bulb, Replacement 0268 00
Lower Control Panel A2 Sonalert Beeper Indicator, Replacement 0269 00
Lower Control Panel A2 Bilge Pump System Indicator Light, Replacement 0270 00
Lower Control Panel A2 Bilge Pump System Indicator Light Bulb, Replacement 0271 00
Operators Cab Circuit Breaker Panel A3, Removal and Installation 0272 00
Operators Cab Circuit Breaker Panel A3 Rotary Switch, Replacement 0273 00
Circuit Breaker Panel A3, Testing 0274 00
Circuit Breaker Panel A3 Circuit Breakers, Replacement 0275 00
Terminal Strip A4, Repair 0276 00
Terminal Strip A4, Removal and Installation 0277 00
Spotlight, Cleaning and Adjustment 0278 00
Spotlight Bulb, Replacement 0279 00
Spotlight, Replacement 0280 00
Spotlight Push-Rod Packing, Replacement 0281 00
Spotlight Mounting Gasket, Replacement 0282 00
Operators Cab Defroster, Replacement 0283 00
Operators Cab Enclosure Heater, Replacement 0284 00
Windshield Wiper Blade, Replacement 0285 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 3 - MAINTENANCE INSTRUCTIONS (CONT'D)

Windshield Wiper Arm, Replacement 0286 00
Windshield Wiper Motor, Replacement 0287 00
VHF/FM Handheld Transceiver Antenna, Replacement 0288 00
VHF/FM Handheld Transceiver Control Knobs, Replacement 0289 00
VHF/FM Handheld Transceiver Rechargeable Battery Pack, Replacement 0290 00
VHF/FM Handheld Transceiver Alkaline Battery Pack, Replacement 0291 00
VHF/FM Handheld Transceiver Battery Charger, Replacement 0292 00
Interface and Switchbox, Replacement 0293 00
Interface and Switchbox Mount, Replacement 0294 00
Public Address Set (Loudhailer) Microphone, Replacement 0295 00
Public Address Set (Loudhailer), Replacement 0296 00
Public Address Set (Loudhailer) Mount, Replacement 0297 00
Hailer Horn (Loudhailer External Speaker), Replacement 0298 00
SINCGARS Radio, Removal and Installation 0299 00
SINCGARS Radio Remote and Microphone, Removal and Installation 0300 00
SINCGARS Radio Antenna, Removal and Installation 0301 00
VHF/FM DSC Transceiver Microphone, Replacement 0302 00
VHF/FM DSC Transceiver, Replacement 0303 00
VHF/FM DSC Transceiver Mount, Replacement 0304 00
VHF/FM DSC Transceiver Antenna, Replacement 0305 00
VHF/FM DSC Transceiver Antenna Mount, Replacement 0306 00
VHF/FM DSC Transceiver Antenna Cable, Replacement 0307 00
Compass, Replacement 0308 00
Precision Lightweight Global Positioning Receiver (PLGR) Memory Battery, Replacement 0309 00
Precision Lightweight Global Positioning Receiver (PLGR) Battery, Removal and Installation 0310 00
Precision Lightweight Global Positioning Receiver (PLGR) Interface Cable, Replacement 0311 00
Precision Lightweight Global Positioning Receiver (PLGR), Replacement 0312 00
Precision Lightweight Global Positioning Receiver (PLGR) Mounting Base, Replacement 0313 00
Precision Lightweight Global Positioning Receiver (PLGR) Pivot Mount, Replacement 0314 00
Precision Lightweight Global Positioning Receiver (PLGR) Pivot Base, Replacement 0315 00
Global Positioning System (GPS) Antenna, Replacement 0316 00
Global Positioning System (GPS) Antenna Mount Plate, Replacement 0317 00
Global Positioning System (GPS) Antenna Mount, Replacement 0318 00
Global Positioning System (GPS) Antenna Cable, Replacement 0319 00
Navigational Horn, Replacement 0320 00
Mast Enclosure A7 Fuses, Removal and Installation 0321 00
Mast Enclosure A7 Toggle Switch, Replacement 0322 00
Mast Enclosure A7 Sonalert Beeper, Replacement 0323 00
Mast Enclosure A7 Reed Switch Assembly, Replacement 0324 00
Mast Enclosure A7 Terminal Block, Replacement 0325 00
Mast Enclosure A7 Indicator Light, Replacement 0326 00
Mast Enclosure A7, Removal, Inspection and Installation 0327 00
Main Mast Navigation Assembly, Removal, Inspection, Repair and Installation 0328 00
Main Mast Yardarms, Removal, Inspection, Repair and Installation 0329 00
Main Mast Navigation Light Bulbs, Replacement 0330 00
Main Mast Navigation Lights, Removal, Inspection, Repair and Installation 0331 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 3 - MAINTENANCE INSTRUCTIONS (CONT'D)

Main Mast Navigation Light Junction Box, Removal and Installation 0332 00
Main Mast Navigation Assembly Terminal Box, Removal and Installation 0333 00
Main Mast Navigation Assembly Terminal Box Terminal Block, Removal and Installation 0334 00
Stern Light Bulbs, Replacement 0335 00
Stub Mast Enclosure Assembly, Removal, Inspection, Repair and Installation 0336 00
Operators Cab Electrical System Junction Box Assembly JB1, Removal and Installation 0337 00
Operators Cab Electrical System Junction Box Assembly JB1 Terminal Board, Replacement 0338 00
Operators Cab Electrical System Junction Box Assembly JB1 Receptacle, Replacement 0339 00
Operators Cab Electrical System VHF/FM DSC Voltage Converter, Replacement 0340 00
Operators Cab Electrical System DC To DC Converter, Replacement 0341 00
Operators Cab Electrical System DC To DC Converter Junction Box, Replacement 0342 00
Operators Cab Electrical System VHF/FM Handheld Transceiver Terminal Block, Replacement 0343 00
Anchorboard Assembly, Inspection and Repair 0344 00
Intermediate Section Non-Powered Module, Marine Growth Removal 0345 00
Intermediate Section Non-Powered Module, Cleaning and Painting 0346 00
Intermediate Section Non-Powered Module, Inspection for Water 0347 00
Intermediate Section Non-Powered Module, Pressure Test 0348 00
Intermediate Section Non-Powered Module Male and Female Guillotine Connectors, Inspection, Repair, Lubrication and Adjustment 0349 00
Beach End Section Non-Powered Module, Marine Growth Removal 0350 00
Beach End Section Non-Powered Module, Cleaning and Painting 0351 00
Beach End Section Non-Powered Module, Inspection for Water 0352 00
Beach End Section Non-Powered Module, Pressure Test 0353 00
Beach End Section Non-Powered Module Male and Female Guillotine Connectors, Inspection, Repair, Lubrication and Adjustment 0354 00
Hand Lantern Incandescent Bulb, Replacement 0355 00
Hand Lantern Batteries, Replacement 0356 00
Hand Lantern Mounting Bracket, Replacement 0357 00
Weight Lifting Devices, Inspection 0358 00
Weight Lifting Devices, Testing 0359 00
Diodes, Replacement 0360 00
Electrical Wiring, Repair 0361 00
Pipe Thread Nipples, Elbows, Tees and Reducers, Replacement 0362 00
Illustrated List of Manufactured Items 0363 00
Fuel Hose PN E11488, Manufacture 0364 00
Fuel Hose PN E11508-1, E11508-2, E11508-3, Manufacture 0365 00
Fuel Hose PN E11518-1, E11518-2, E11518-3, E11518-4, Manufacture 0366 00
Hose Assembly PN E27778-1, E27778-2, Manufacture 0367 00
Hose PN E19108-1, Manufacture 0368 00
Hose PN E13208-1, E13208-2, E13208-3, E13208-4, E13208-5, E13208-6, E13208-7, Manufacture 0369 00
Hose PN E27328, Manufacture 0370 00
Tube PN 0007211, Manufacture 0371 00
Tube PN 0007212, Manufacture 0372 00
Tube PN 0007213, Manufacture 0373 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.

CHAPTER 3 - MAINTENANCE INSTRUCTIONS (CONT'D)

Tube PN 0007214, Manufacture 0374 00
Battery Cushion, Manufacture 0375 00
Battery Pad, Manufacture 0376 00
Torque Limits Work Package 0377 00
Wiring Diagrams 0378 00

CHAPTER 4 - UNIT, DIRECT SUPPORT AND GENEERAL SUPPORT SUPPORTING INFORMATION

References 0379 00
Maintenance Allocation Chart (MAC), Introduction 0380 00
Maintenance Allocation Chart (MAC) 0381 00
Expendable and Durable Items List (EDIL) 0382 00
Tool Identification List (TIL) 0383 00

INDEX

Alphabetical ..... INDEX - 1
Wiring Diagram Foldouts FO-1

HOW TO USE THIS MANUAL

This manual contains certain features to improve the convenience of using this manual and increase the user's efficiency. These features include:

a. Accessing Information

Information is accessed by referring to the Table of Contents, located in the front of this manual, or by looking in the Alphabetical Index, located in the back of this manual.

b. Illustrations

Various methods are used to locate and repair components. Locator illustrations in Controls and Indicator tables, PMCS tables, exploded views and cut-away diagrams make the information in the manual easier to understand and follow.

c. Using This Manual

When using this manual, read and understand the entire maintenance action before performing the task. Also, read and understand all warnings, cautions and notes as well as general safety precautions that apply to the task to be performed. The warning summary will inform personnel of hazards associated with the equipment to be worked on. However, the summary is not all inclusive and personnel should be aware at all times of hazardous conditions that may arise.

Prior to starting the procedures in this manual, the initial setup requirements are located directly above each procedure. The information is given to ensure all materials, expendables, tools and any other equipment necessary are readily available for use. The initial setup will be accomplished prior to starting the actual steps of each maintenance procedure.

Locating Major Components

Obtain the manual for the system to be worked on. Open to the Table of Contents located in the front of this manual. Find Chapter 1, *Description and Theory of Operation*. Under the chapter title you will find the work package titled *Location and Description of Major Components*. Turn to the work package indicated. This work package will give a brief description of the major components, and show an illustration of what the component looks like and its location.

The Alphabetical Index, located in the back of this manual, contains an alphabetical list of all sections of this manual. *Location and Description of Major Components* is found in section L. The work package is found on the right side of the title where the *Location and Description of Major Components* is located. Turn to the work package indicated to find the description and location of each component.

Troubleshooting Procedures

The Table of Contents or Alphabetical Index may be used to locate sections within this manual. To locate a particular troubleshooting procedure, open the manual to the Table of Contents located in the front of this manual. Find Chapter 2, *Troubleshooting Procedures.* Under this section, find a work package titled *Troubleshooting Index*. Turn to the work package indicated, which lists all of the troubleshooting procedures. Look down the list until you find the appropriate work package for the problem you are trying to solve. To the right side of the procedure will be a work package number. Turn to the work package indicated and follow the steps to complete the troubleshooting procedure. The procedures list the malfunction, symptom and the corrective action. The corrective action will indicate which maintenance procedure to go to for the repair of the symptom or what level of maintenance is capable of repair of the problem. Follow the procedures indicated to complete the task. At the top of the task you will have a section called INITIAL SETUP. There are five basic headings listed under INITIAL SETUP.

Test Equipment: Lists all test equipment (standard or special) required to troubleshoot, test and inspect the equipment covered in this manual. The test equipment is identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information*.

Tools: Lists all tools (standard or special) required to perform the task. Tools are identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information.*

Personnel Required: Lists all personnel necessary to perform the task.

Equipment Condition: Notes the conditions that must exist before starting the task. The equipment condition will also include any prerequisite maintenance tasks to be performed with reference to the work package number or to the TM number.

References: Includes any other manuals necessary to complete the task. When there are no references listed, all steps necessary to complete the task are contained within this manual. A listing of reference materials is contained in the work package *References* in Chapter 4, *Supporting Information*.

Maintenance Instructions

To locate a maintenance procedure, open the manual to the Table of Contents located in the front of this manual. Find Chapter 3, *Maintenance Instructions.* Look down the list and find the maintenance procedure to be accomplished. On the right side of the maintenance procedure will be a work package number. Turn to the work package indicated. Before beginning the maintenance task, look through the procedure to familiarize yourself with the entire maintenance procedure. At the top of the task you will have a section called INITIAL SETUP. There are five basic headings listed under INITIAL SETUP.

Tools: Lists all tools (standard or special) required to perform the task. Tools are identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information.*

Materials/Parts: Lists all parts or materials necessary to perform the task. Expendable and durables are identified with an item number from the applicable work package located in Chapter 4, *Supporting Information*.

Personnel Required: Lists all personnel necessary to perform the task.

References: Includes any other manuals necessary to complete the task. When there are no references listed, all steps necessary to complete the task are contained within this manual. A listing of reference materials is contained in the work package *References* in Chapter 4, *Supporting Information*.

Equipment Condition: Notes the conditions that must exist before starting the task. The equipment condition will also include any prerequisite maintenance tasks to be performed with reference to the work package number or to the TM number.

Test Equipment: Lists all test equipment (standard or special) required to troubleshoot, test and inspect the equipment covered in this manual. The test equipment is identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information*.

Repair Parts and Special Tools List

Refer to TM 55-1945-205-24P-1 when requisitioning parts, special tools and equipment.

Identify the mandatory repair parts required to perform this task listed at the top of the work package in the INITIAL SETUP. Using the part number provided, refer to the part number index work package in TM 55-1945-205-24P-1. Look up the part number in the part number column and identify the figure and item number where the part is located. Turn to the figure and locate the item number listed. Verify that the item is correct.

CHAPTER 1

DESCRIPTION AND THEORY OF OPERATION FOR MODULAR CAUSEWAY SYSTEM (MCS) CAUSEWAY FERRY (CF)

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
CAUSEWAY FERRY
GENERAL INFORMATION

SCOPE

This manual contains descriptions and instructions for the Causeway Ferry (CF).

Type of Manual: Unit, Direct Support and General Support Maintenance.

Purpose of Equipment: The CF is used to transport containerized and rolling break bulk cargo from ocean going vessels in the stream to the beach. MCS sections, including two powered sections, are assembled to form a CF.

MAINTENANCE FORMS, RECORDS AND REPORTS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750 The Army Maintenance Management System (TAMMS); and AR 700-138, Army Logistics Readiness and Sustainability.

REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR)

If any component in your system needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF 368, Product Quality Deficiency Report. Mail it to the address specified in DA PAM 738-750, or as specified by the contracting activity. We will send you a reply.

CORROSION PREVENTION AND CONTROL (CPC)

CPC of Army materiel is a continuing concern. It is important that any corrosion problems with this item be reported so that the problem can be corrected and improvements can be made to prevent the problem in future items.

While corrosion is typically associated with rusting of metals, it can also include deterioration of other materials, such as rubber and plastic. Unusual cracking, softening, swelling or breaking of the materials may be a corrosion problem. If a corrosion problem is identified, it can be reported using an SF 368, Product Quality Deficiency Report. Use of key words, such as “corrosion”, “rust”, “deterioration” or “cracking”, will ensure that the information is identified as a CPC problem. The form should be submitted to the address specified in DA PAM 738-750, Functional Users Manual for The Army Maintenance Management System (TAMMS).

OZONE DEPLETING SUBSTANCES (ODS)

The continued use of ODS has been prohibited by Executive Order 12856 of 3 August 1993.

DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

The procedures for destruction of Army materiel to prevent enemy use are contained in TM 750-244-6.

PREPARATION FOR STORAGE AND SHIPMENT REFERENCE

Reference TM 55-1945-205-10-1 for preparation for storage or shipment of the CF.

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
CAUSEWAY FERRY
DESCRIPTION AND DATA

EQUIPMENT CHARACTERISTICS, CAPABILITIES AND FEATURES

The Causeway Ferry (CF) system is a combination of modules assembled to form section assemblies. Individual modules connect together by means of the male/female vertical connectors located around the perimeter of each module. Section assemblies are then connected end-to-end to form the completed CF. The sections are secured to other sections by means of flexor connectors. The assembled CF consists of four sections: one powered section, two (non-powered) intermediate sections and one beach end section. The powered section and the (non-powered) intermediate sections are 24 ft wide and 80 ft long. The (non-powered) beach end section is 24 ft wide and 85 ft long. When all four sections are connected end-to-end they form a single CF 24 ft wide and 325 ft long. The powered section is assembled with two propulsion modules that facilitate self-powered movement and maneuvering. The powered section is fitted with an operators cab, intake and exhaust plenums, interconnect (cable) assembly, navigational lighting system, hand rails and an emergency anchor with all above deck components located to allow drive through operation. The cab and navigational lighting can be installed on either the port or starboard side of the powered section.

The fully assembled CF has a cargo capacity of 350 short tons, can maintain the speed of 6 knots at maximum load capacity in a Sea State 2 condition and carries enough fuel to operate under those conditions for 10 hours. The fully loaded CF will maintain a freeboard of approximately 12 in., can execute a 180° turn within 2 minutes, a 360° turn within 4 minutes and can be brought from full speed (6 knots) to a dead stop within 320 ft. The propulsion (diesel) engines are capable of being started in an ambient temperature of -25°F.

The CF is used to transport containerized and rolling break bulk cargo from oceangoing vessels in the stream to the beach. The unassembled components of the causeway ferry are transported in an International Standards Organization Package (ISOPAK) configuration by Fast Sealift Ship (FSS) and/or commercial container ships to the operational area and assembled after arrival. The CF modules are ISO container compatible and are outfitted with ISO corner fittings. Components can also be transported by rail and motor vehicle over improved and unimproved roads. Upon arrival in the operational area, the CF can be assembled on deck, on land or in water at Sea State 0. The CF is designed to augment the Modular Causeway System (MCS) in applications where powered assemblies are required. The system utilizes the Navy flexor and shear connector system for causeway end-to-end connection and is interchangeable with existing Navy Lighter (NL) and Army hardware at the sectional level.

The CF, with maximum payload, is capable of beaching and retracting under its own power in those gradients commonly found in beach environments and operating in surf conditions up to 5 ft.

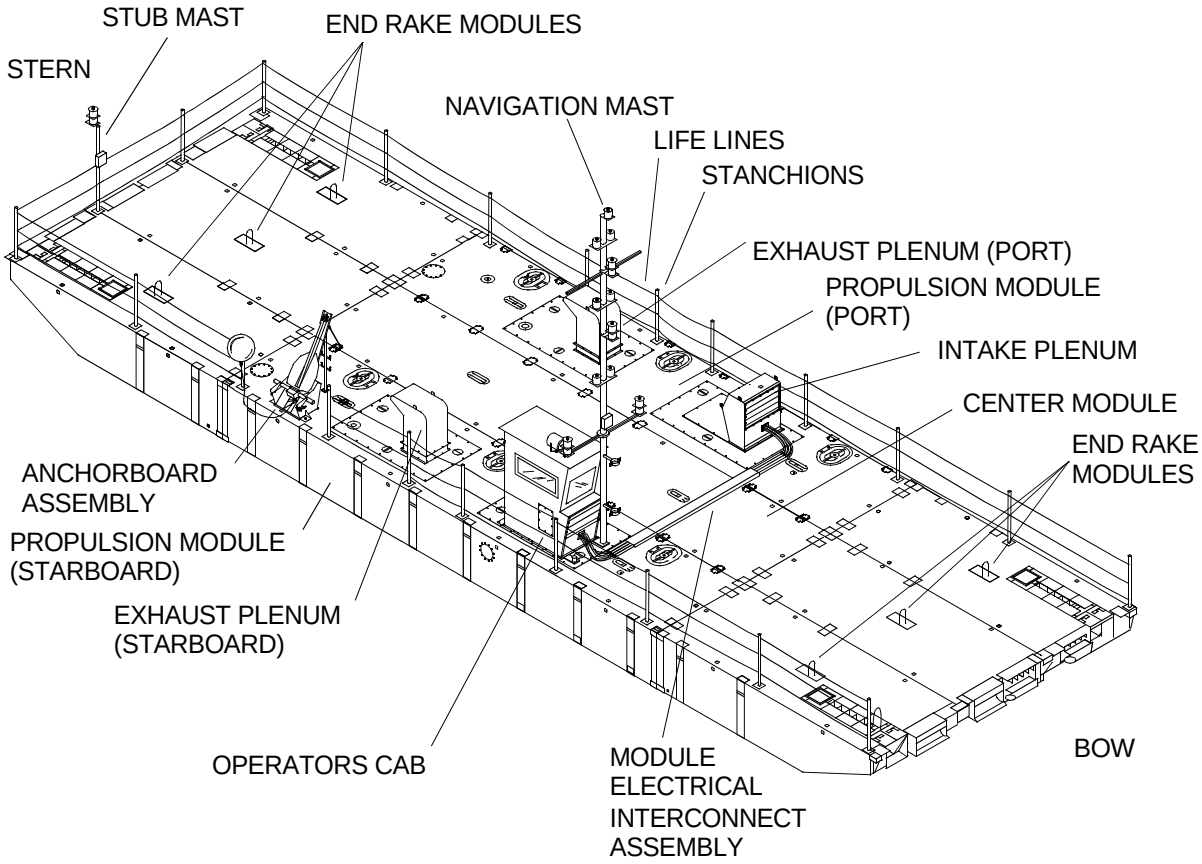

POWERED SECTION

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
CAUSEWAY FERRY
DESCRIPTION AND DATA

LOCATION AND DESCRIPTION OF MAJOR COMPONENTS

The Causeway Ferry (CF) system consists of one powered section, two intermediate sections and one beach end section. The powered section can be broken down to the propulsion modules, the center module (non-powered), end rake modules, connectors, operators cab, intake plenum, exhaust plenums, navigation masts, module electrical interconnect, anchorboard and hand rails. The intermediate sections can be broken down to center modules (non-powered), end rake modules and connectors. The beach end section can be broken down into center modules (non-powered), end rake modules, connectors and beach end modules, weighs approximately 2950 lb, are 8 ft wide, 3 ft long and 4 ft 6 in. deep and provide an alternate configuration capability. The completely assembled CF is 325 ft long, 24 ft wide. When operating in an optional configuration, using P3 adaptor modules to invert the beach end rake modules, the length is increased to approximately 329 ft.

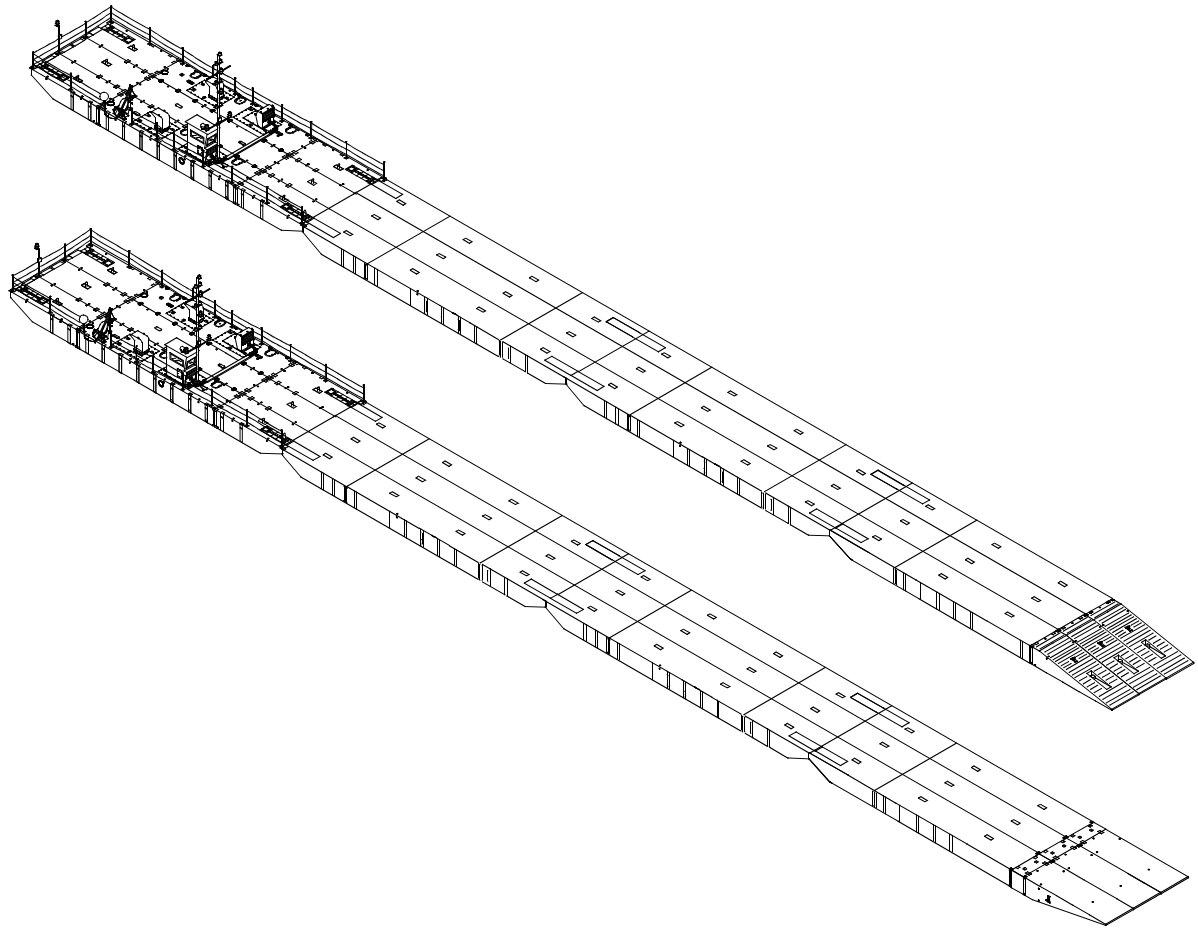

CF (FULL ARRANGEMENT)

BEACH END SECTION

The beach end section is attached to the last intermediate section of the beachward end of the causeway. The beach end section is made up of three center modules (non-powered), three end rake modules (left, center, and right) and three beach end rake modules. All end rakes are compatible with U.S. Navy flexor attachments and shear connectors are fully compatible with ISO-container standards. The P3 adaptors allow the beach end rake modules to be mated in the inverted position.

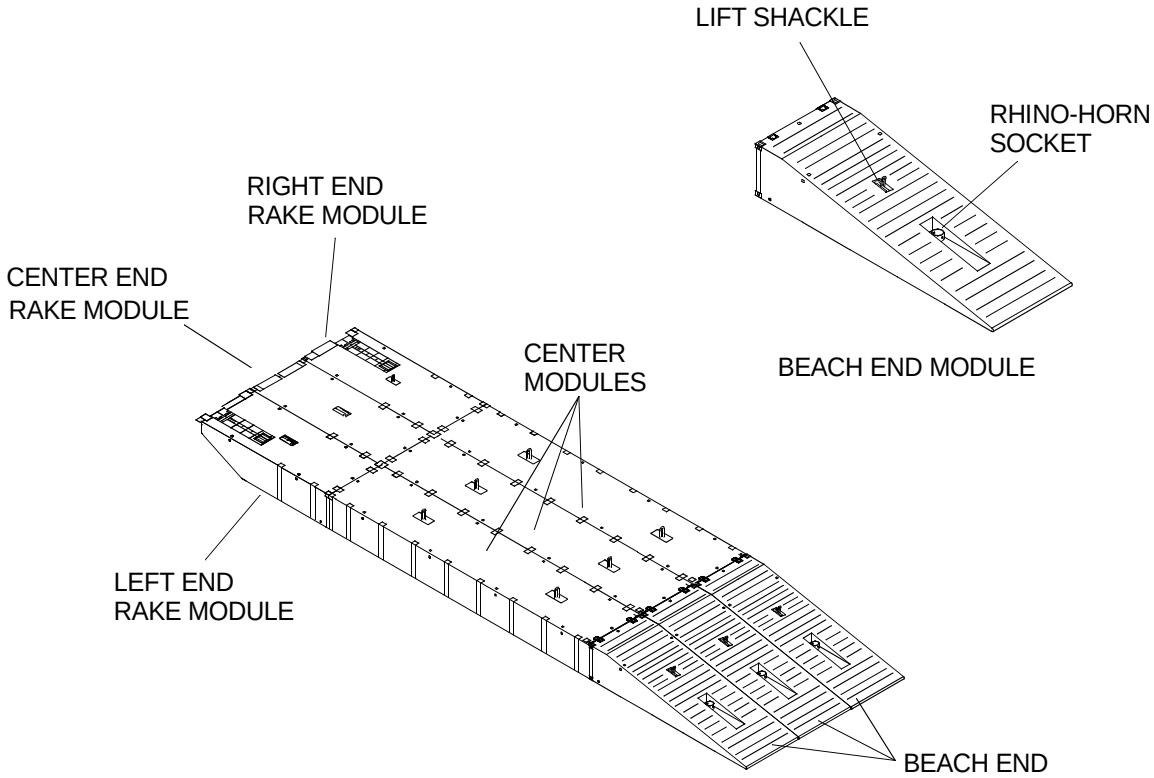

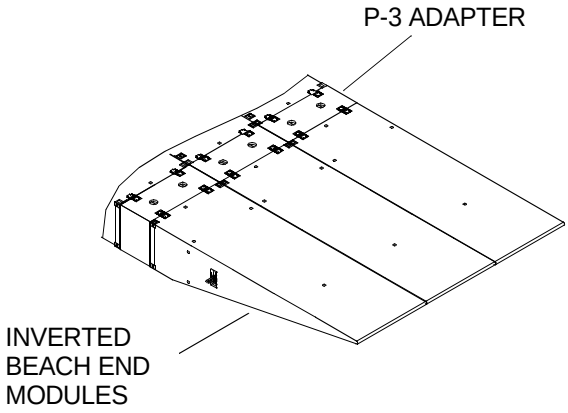

ALTERNATE CONFIGURATION

BEACH END SECTION

END RAKE MODULES

The left, right and center end rake modules are empty containers. Nominal dimensions of the left, right and center end rake modules are 8 ft wide, 20 ft long and 4 ft 6 in. deep. Each left, right and center end rake module has one 25 ton capacity lifting shackle, which is flush mounted in the deck. The textured deck and smooth bottom are free of any protrusions that might obstruct packing. Access for internal leak detection of each compartment is provided by a recessed threaded plug. The left end rake has a flexor connector pocket for flexor connector installation in the left forward corner of the module. The right end rake has a flexor connector pocket for flexor connector installation in the right forward corner of the module. Weight of the left, right and center end rake modules is approximately 12,500 lb.

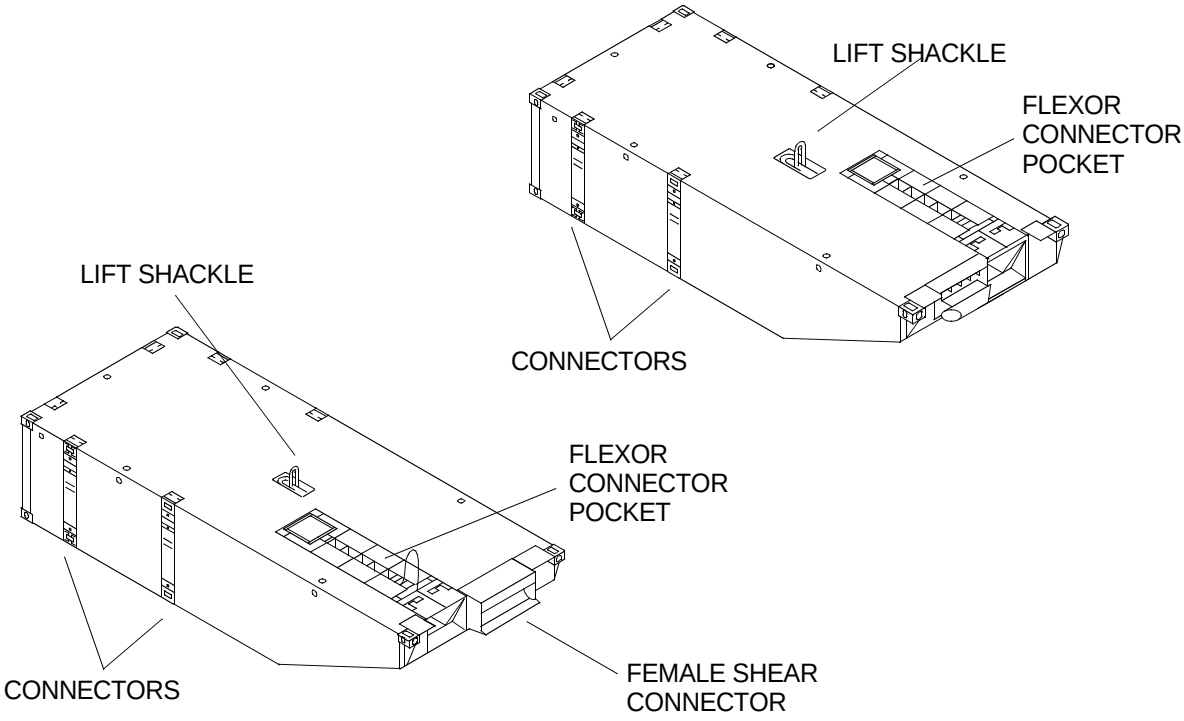

END RAKE MODULES, LEFT HAND (PORT) AND RIGHT HAND (STARBOARD)

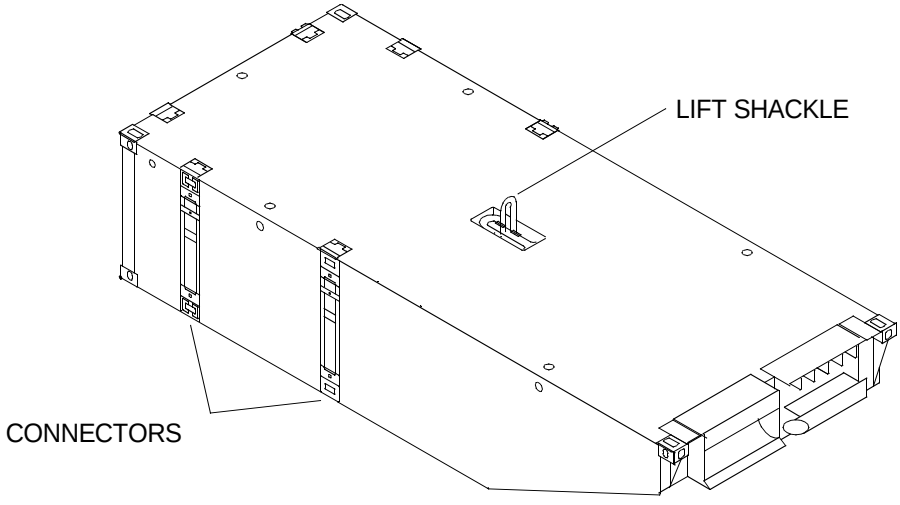

END RAKE MODULE, CENTER