LUBRICATION ORDER

L05-4320-248-12

20 JULY 1977 (Supersedes LO5-4320-248-12, 13 October 1967)

FUEL SYSTEM, TRANSFER, PORTABLE, PUMP CENTRIFUGAL, 100 GPM, TWO DISCHARGE HOSE ASSEMBLIES, ONE SUCTION HOSE ASSEMBLY, TWO NON-AUTOMATIC NOZZLE ASSEMBLIES, ONE MONITOR GO-NO-GO GAGE 100 GPM, 3 HP GASOLINE ENGINE, ONE BASKET ASSEMBLY (KENCO MODEL 114 MX1A) W/BRIGGS AND STRATTON ENGINE MODEL 81232 TYPE 9188-01

Reference: C9100-IL

Intervals and related task-hour times are based on normal hours of operation. The task-hour time specified is the time you need to do all the services prescribed for a particular interval. Change the interval if your lubricants are contaminated or if you are operating the equipment under adverse operating conditions, including longer-than-usual operating hours. You may extend the interval during periods of low activity, but you must take adequate preservation precautions.

*The time specified is the time required to perform all services at the particular interval.

Clean fittings before lubricating. Relubricate all areas exposed to water after amphibious operation. Lubricate points indicated by dotted arrow shaft on both sides of equipment. Clean parts with SOLVENT, dry cleaning, or with OIL, fuel, diesel. Dry before lubricating. Drain crankcases when HOT. Fill and check level. The lowest level of maintenance authorized to lubricate a point is indicated by one of the following: (C) operator/crew, or (0) organizational maintenance.

You can improve this publication by calling attention to errors and by recommending improvements and by stating your reasons for the recommendations. Your letter or DA Form 2028 (Recommended Changes to Publications and Forms) should be mailed directly to Commander, U. S. Army Troop Support Command, ATTN: DRSTS-MPP, 4300 Goodfellow Blvd., St. Louis, MO. 63120. A reply will be furnished directly to you.

FOLD

FOLD

LUBRICANT ● INTERVAL

INTERVAL ● LUBRICANT

CAUTION: When OEA Oil is used the level will be checked more often

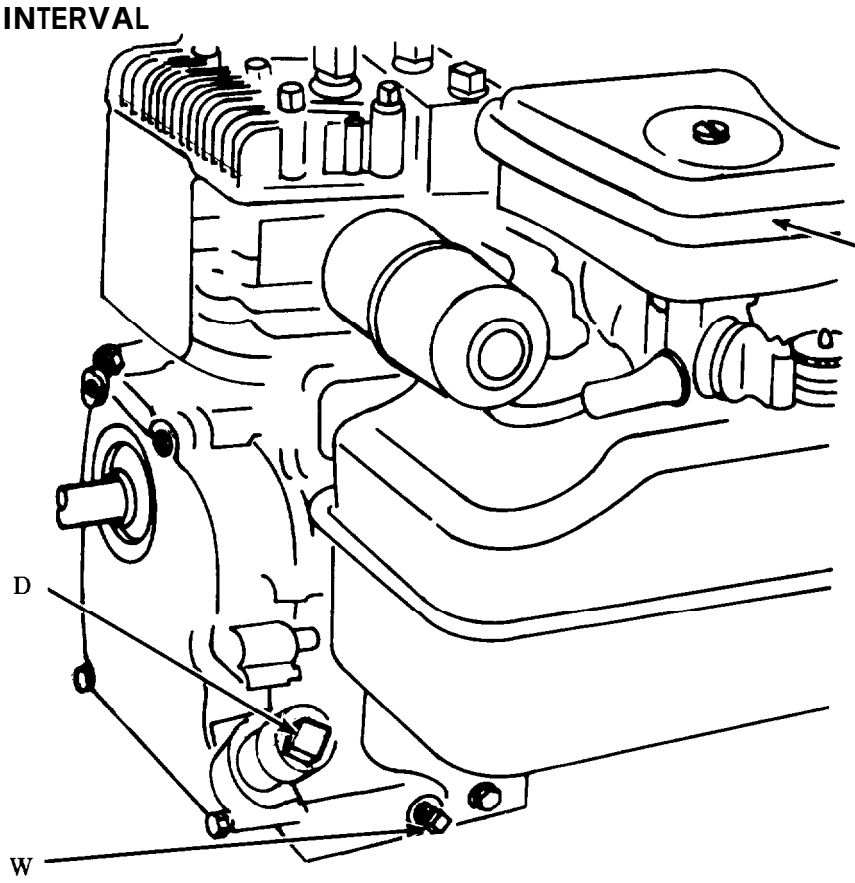

W OE/HDO Air Cleaner (See note 2) (C)

Crankcase Fill and Level (Check Level) (Keep filled to Plug opening) (See key) (C) — OE/HDO D

Crankcase Drain (Drain and refill) (C) — W

*TOTAL TASK HOURS	
INTERVAL	TASK-HOURS
D	0.5

*TOTAL TASK HOURS	
INTERVAL	TASK-HOURS
W	1.5

CARD 1 OF 2