TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

PUMP UNIT, CENTRIFUGAL, FLOOD AND TRANSFER, DIESEL-ENGINE-DRIVEN, 1250 GPM AT 180 FTH NSN 4320-01-194-5601

This copy is a reprint which includes current pages from Change 1.

Approved for public release. Distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

TECHNICAL MANUAL

TM 5-4320-306-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 18 July 1988

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

PUMP UNIT, CENTRIFUGAL, FLOOD AND TRANSFER,
DIESEL-ENGINE-DRIVEN, 1250 GPM AT 180 FTH
NSN 4320-01-194-5601

Current as of 17 May 1988

Approved for public release. Distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illus Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST	1-1	
Group 00.	Pump and Skid Assembly	1-1	1
	Cover, Lifting Bail, Noise Shield	1-1	1
Group 01.	Battery System	2-1	2
	Battery, System	2-1	2
Group 02.	Electrical System	3-1	3
	Electrical Assembly	3-1	3
	Control Panel Mounting Assembly	4-1	4
	Control Panel Wiring Assembly	5-1	5
	Control Panel Assembly	6-1	6
Group 03.	Pump Suction Assembly	7-1	7
	Pump Suction Assembly	7-1	7
	6-Inch Gate Valve	8-1	8

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
Group 04.	Pump Discharge Assembly	9-1	9
	Pump Discharge Assembly	9-1	9
	Air Valve Cover Assembly	10-1	10
	Air Release Valve	11-1	11
	Discharge Check Valve Assembly	12-1	12
	6-Inch Gate Valve	13-1	13
Group 05.	Pump Assembly	14-1	14
	Pump Assembly	14-1	14
Group 06.	Engine Cover	15-1	15
	Engine Cover	15-1	15
	Ether Start Kit	16-1	16
	Throttle Control Lever Extension.	17-1	17
Group 07.	Engine Assembly	18-1	18
	Engine Assembly	18-1	18
	V-Belts	19-1	19
	Air Cleaner and Air Inlet Assembly	20-1	20
	Flywheel	21-1	21
	Breather Assembly	22-1	22
	Lube Oil Cooler	23-1	23
	Cooling Blower Ducting	24-1	24
	Cooling Blower Assembly	25-1	25
	Exhaust Assembly	26-1	26
	Exhaust Manifold	27-1	27
	Suction Pipe	28-1	28
	Oil Sump	29-1	29
	Oil Drain Assembly	30-1	30
	Oil Filter, Lines and Fittings	31-1	31
	Lube Oil Pump	32-1	32
	Two Stage Fuel Filter	33-1	33
	Full Lines and Fittings	34-1	34
	Injection Pipes	35-1	35
	Fuel Injection Pump Mounting and Drive	36-1	36
	Fuel Injection Pump	37-1	37
	Governor Assembly	38-1	38
	Solenoid Valve	39-1	39
	Fuel Pump	40-1	40
	Fuel Injector	41-1	41
	Turbocharger	42-1	42
	Starter Assembly	43-1	43
	Alternator Assembly	44-1	44
	Cylinder Head Assembly	45-1	45
	Rocker Arms, Pushrods and Tappets	46-1	46
	Idler Pulley Cover Assembly	47-1	47
	Camshaft Drive	48-1	48
	Front Cover	49-1	49
	Camshaft	50-1	50
	Piston Assembly	51-1	51
	Connecting Rod Assembly	52-1	52

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
	Crankshaft Assembly	53-1	53
	Crankcase Assembly	54-1	54
	Crankcase Housing Adapter	55-1	55
	Data Plates	56-1	56
Group 08.	Fuel System	57-1	57
	Tool Box and Accessories	57-1	57
	Ground Rods	58-1	58
	Fuel Tank Mounting	59-1	59
	Fuel Tank Assembly	60-1	60
	3-Way Valve Assembly	61-1	61
Group 09.	Skid	62-1	62
	Skid Assembly	62-1	62
Section III.	SPECIAL TOOLS LIST	63-1	
	Special Tools		63
Section IV.	CROSS-REFERENCE INDEXES	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-4	
	Figure and Item Number Index	I-28	

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, general support maintenance of the centrifugal pump unit. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. **Repair Parts List**. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. **Special Tools List**. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. **Cross-references Indexes**. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

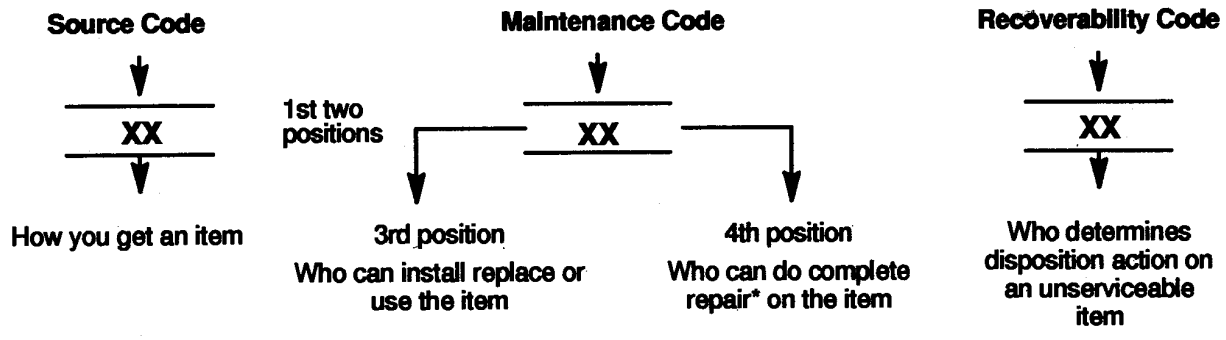

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

Code	Explanation
MO--(Made at org. AVUM Level MF--(Made at DS/ AVUM Level MH--(Made at GS Level) ML--Made at Specialized Repair Activity (SRA)) MD--(Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.