TM 11-5821-260-34P-1

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

RADIO SET AN/ARC-115A(V)1

(NSN 5821-01-057-4037)

HEADQUARTERS, DEPARTMENT OF THE ARMY

10 MARCH 1980

TECHNICAL MANUAL

No. 11-5821-260-34P-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 10 March 1980

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

RADIO SET AN/ARC-115A(V)1
(NSN 5821-01-057-4037)

Current as of 2 October *1979*

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know.

Mail your letter, DA Form 2028 (Recommended Changes to publications and Blank Forms), or DA *Form* 2028-2 located in back of this manual direct to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.

In any case, a reply will be furnished direct to You.

TABLE OF CONTENTS

			Page	Illus Figure
SECTION	I.	Introduction	1	
	II.	Repair Parts Lift	6	
GROUP	00	Radio Set AN/ARC-115(V)1	6	1
	01	Panel Assembly, Radio Set	9	2
	02	Frequecy Selector	18	3
		0201 Tuning Matrix "C/D" Deck Assembly	17	4
		0202 Tuning Matrix "A" Deck Assembly	19	6
		0203 Tuning Matrix "B" Deck Assembly	21	6
	03	Amplifier Synthesizer Assembly	23	7
		0301 Phase Locked RF Generator	27	8
		0302 Dividers 10 MC Osc	33	9
		0303 VCO and D-A Converter Assembly	39	10
		0304 Transmit Audio and Comparater Assembly	43	11

*This manual supersedes TM 11-5821-260-34P-1, 23 June. 1978.

			Page	Illus Figure
GROUP	0306	Guard IF Amplifer	47	12
		0306Guard and Detector and AGC Amplifier	49	13
		0307 Guard Squelch Circuit	66	14
		0308 Audio Amplifier Assembly	67	15
		0309 Main Squelch Cicuit (no parts authorized)		
		0310 Main 2nd IF Detector and AGC Amplifier (no parts Authorized)		
		0311Main IF Amplifier	61	16
		0312 Chassis and Cable Assembly	67	17
	04	Main RF Amplifier Mixer Assembly	71	18
		0401 Main Receiver, RF Amplifier and Mixer -	76	19
		0402 Guard RF Amplifier Mixer Assembly	79	20
		0403 Noise Generator	68	21
		0404 Guard Receiver AssembIy	67	22
	05	RF Coupler and Filter Assembly	89	23
		0601 T/R Relay (no parts authorized)		
		0502 Low Pass Filter Circuit Card	91	24
		0508 RF Coupler Circuit Card	96	25
	06	Power Supply	97	26
	07	Surge Protector Transistor	101	27
	08	+9V Regulator Transistor	101	27
	09	Circuit Card Modulator	108	28
	10	Power Amplifier Exciter Assembly	107	29
		1001 Exciter	111	30
		1002 Power Amplifier	115	31
Section	III.	Special Tools List (not applicable)		
	IV.	National *Stock Number and Part Number Index*	116	

SECTION I
INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the AN/ARC-115A(V)1. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2 General

This Repair Parts and Special Tools List is divided into the following sections:

a. ***Section II. Repair Parts Lists.*** **A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.**

b. Section III. Special Tools List. **Not applicable.**

c. ***Section IV. National Stock Number and Part Number Index.*** **A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.**

3. Explanation of Columns

a. ***Illustration. This*** **column is divided as follows:**

(1) ***Figure number.*** **Indicates the figure number of the illustration on which the item is shown.**

(2) ***Item number.*** **The number used to identify item called out in the illustration.**

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

code	Definition
PA	**Item procured and stocked for anticipated or known usage.**
K.F	**An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.**
AH	**Item to be assembled at general support maintenance level.**
XA	**Item is not procured or stocked because the requirement for the item will result in the replacement of the next higher assembly.**
XD	**A support item that is not stocked. When required, item will be procured through normal supply channels.**

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) ***Maintenance code.*** **Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:**

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	*Application/Explanation*
O	**Support item is removed, replaced, used at the organizational level.**
F	**Support item is removed, replaced, used at the direct support level.**
H	**Support item is removed, replaced, used at the general support level.**
D	**Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.**

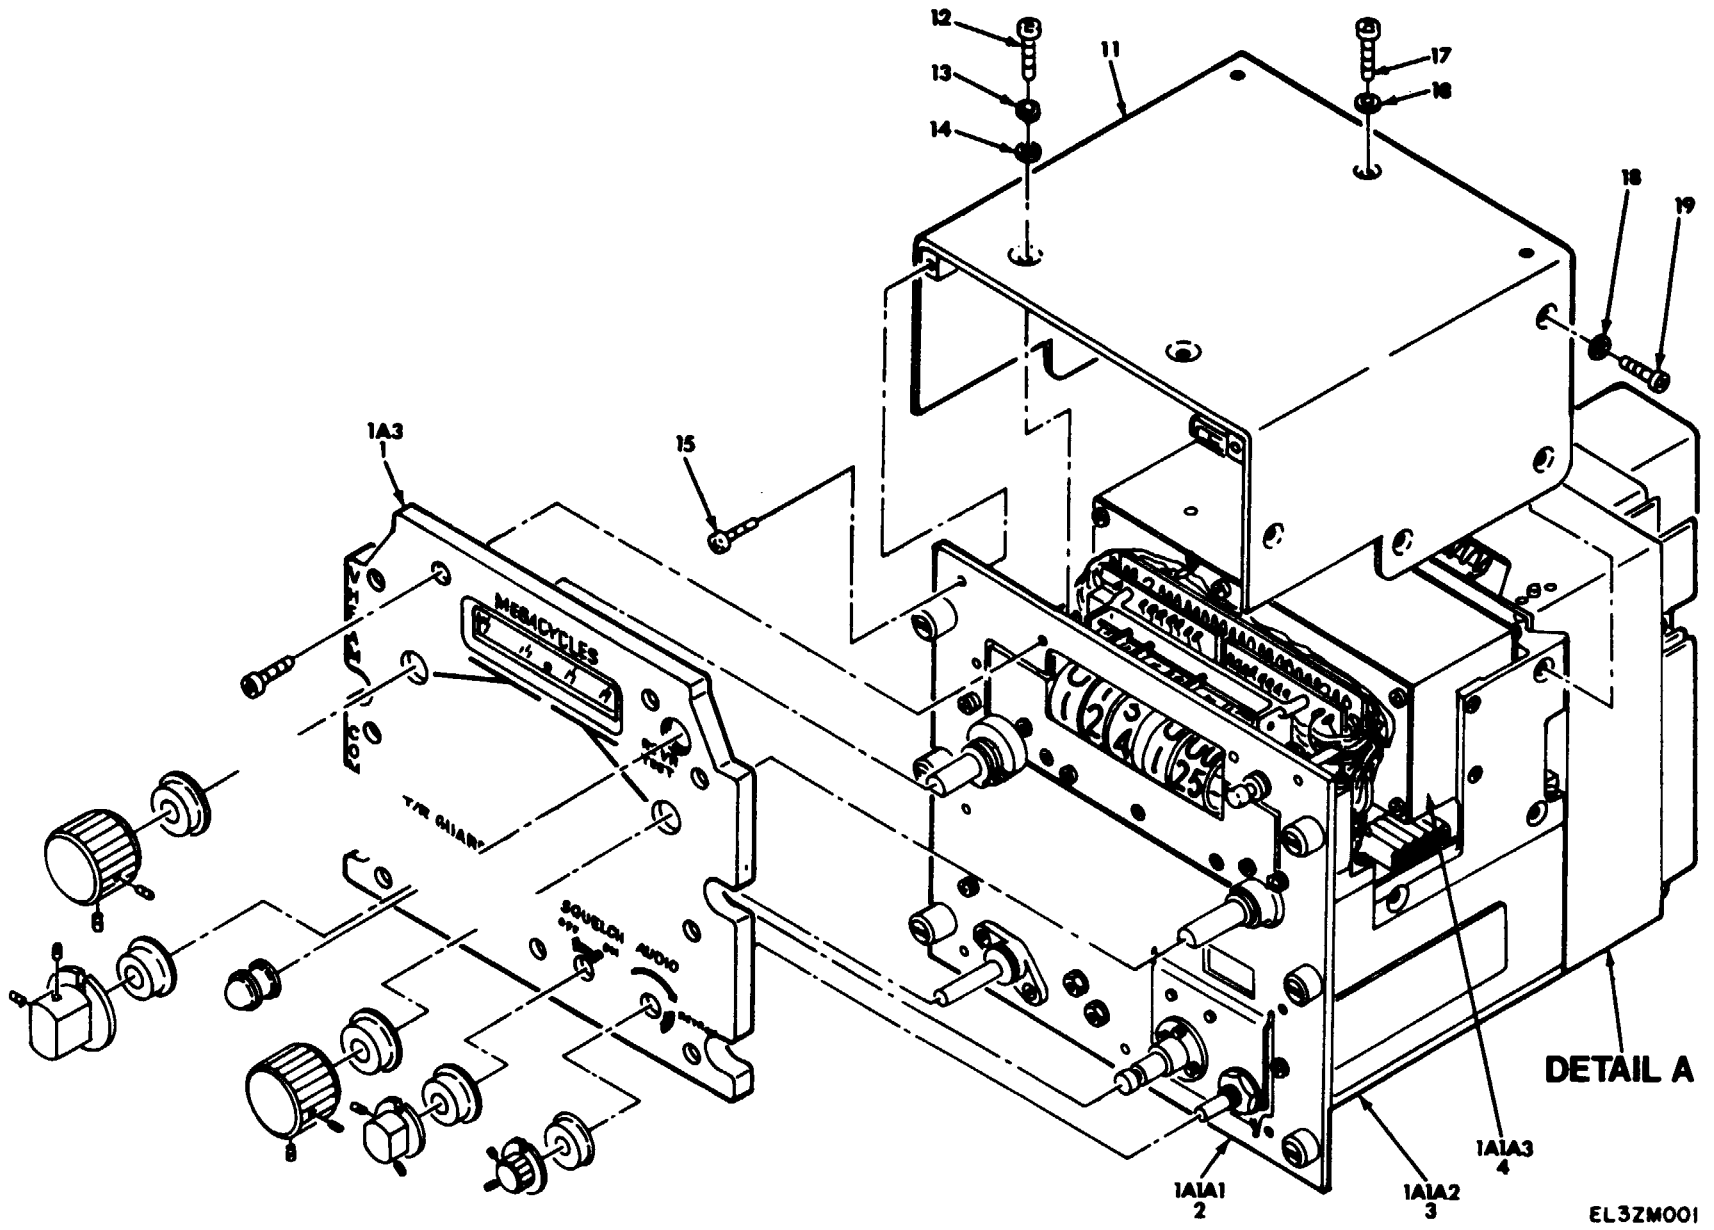

Figure 1. Radio Set AN/ARC-115A(V)1 (Sheet 1 of 3)

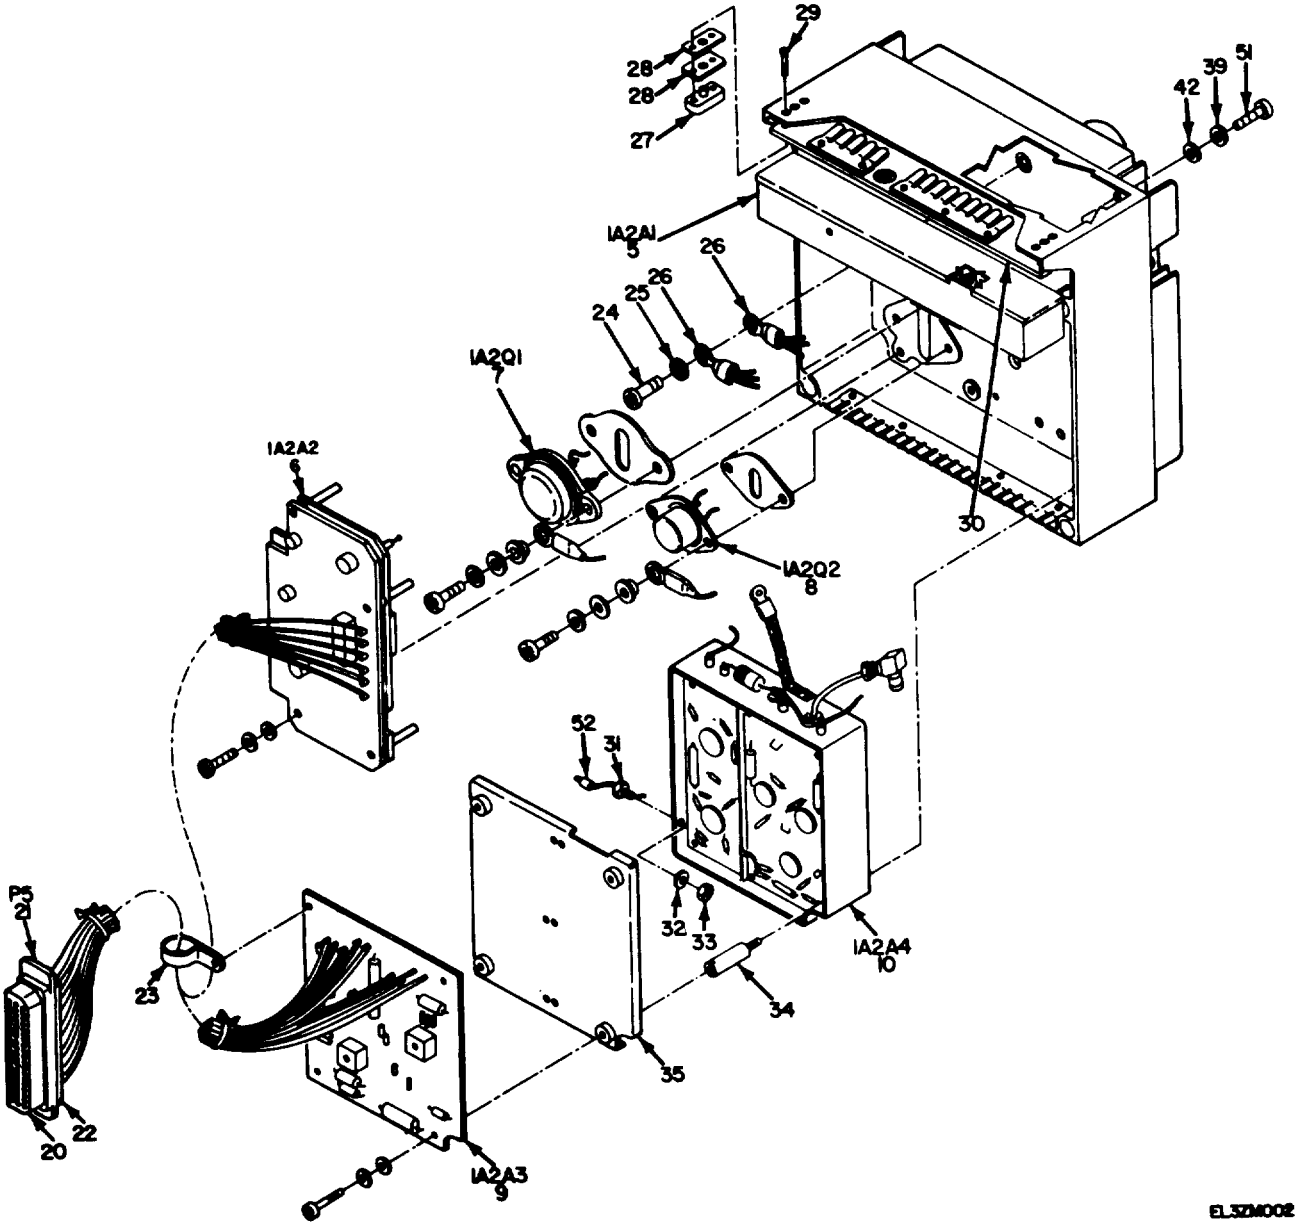

Figure 1. Radio Set AN/ARC-l15A(V)l (Sheet 2 of 3)