TM 10-5411-201-14
T.O. 35E4-178-1

TECHNICAL MANUAL

**OPERATOR, ORGANIZATIONAL,
DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE
FOR**

SHELTER, TACTICAL, EXPANDABLE, ONE-SIDED

**NSN 5411-01-124-1377
60 AMP MODEL
NSN 5411-01-295-3433
100 AMP MODEL**

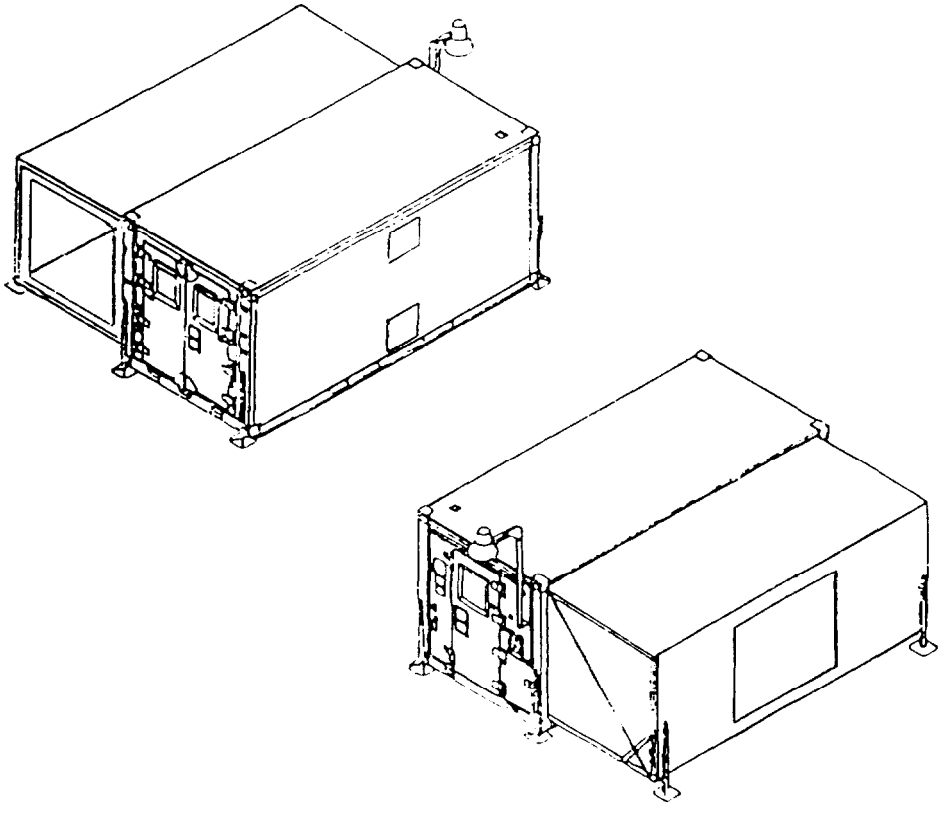

INTRODUCTION Page 1-1

OPERATING INSTRUCTIONS Page 2-1

OPERATOR MAINTENANCE INSTRUCTIONS Page 3-1

ORGANIZATIONAL MAINTENANCE INSTRUCTIONS Page 4-1

DIRECT SUPPORT MAINTENANCE INSTRUCTIONS Page 5-1

GENERAL SUPPORT MAINTENANCE INSTRUCTIONS Page 6-1

REFERENCES Page A-1

MAINTENANCE ALLOCATION CHART Page B-1

COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LIST Page C-1

ADDITIONAL AUTHORIZED LIST Page D-1

EXPENDABLE SUPPLIES AND MATERIALS LIST Page E-1

HEADQUARTERS, DEPARTMENT OF THE ARMY
1 APRIL 1986

TECHNICAL MANUAL

NO. 10-5411-201-14

HEADQUARTERS, DEPARTMENTS OF
THE ARMY AND THE AIR FORCE
WASHINGTON, D.C., 1 April 1986

OPERATOR, ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

SHELTER, TACTICAL, EXPANDABLE, ONE-SIDED
(NSN 5411-01-124-1377) (60 Amp Model)
(NSN 5411-01-295-3433) (100 Amp Model)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Reports shall be submitted as follows: A reply will be furnished to *you.*

(A) Army - DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798.

(F) Air Force-AFTO Form 22 directly to Commander, Sacramento Air Logistics Center, ATTN: MMST, McClellan Air Force Base. CA *95652* in accordance with TO-00-5-1.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page
CHAPTER 1	INTRODUCTION	1-1
Section I.	General Information	1-1
Sectian II.	Equipment Description and Data	1-3
CHAPTER 2	OPERATING INSTRUCTIONS	2-1
Section I.	Description and Use of Operator's Controls and Indicators	2-1
Section II.	Operator's Preventive Maintenance Checks and Services (PMCS)	2-4
Section III.	Setup of Shelter	2-11
Section IV.	Operation Under Usual Conditions	2-32
Section V	Operation Under Unusual Conditions	2-33
CHAPTER 3	OPERATOR MAINTENANCE INSTRUCTIONS	3-1
Section I	Troubleshooting Procedures	3-1
Section II.	operator Maintenance Procedures	3-4

TABLE OF CONTENTS (cont)

		Page
CHAPTER 4	ORGANIZATIONAL MAINTENANCE INSTRUCTIONS	4-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment	4-1
Section II.	Troubleshooting Procedures	4-2
Section III.	Organizational Maintenance Procedures	4-5
Section IV.	Preparation for Storage and Shipment	4-193
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
CHAPTER 6	GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
APPENDIX A	REFERENCES	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-1
APPENDIX C	COMPONENTS *OF* END ITEM LIST	C-1
APPENDIX D	ADDITIONAL AUTHORIZED LIST	D-1
APPENDIX E	EXPENDABLE SUPPLIES AND MATERIALS LIST	E-1
INDEX		INDEX 1

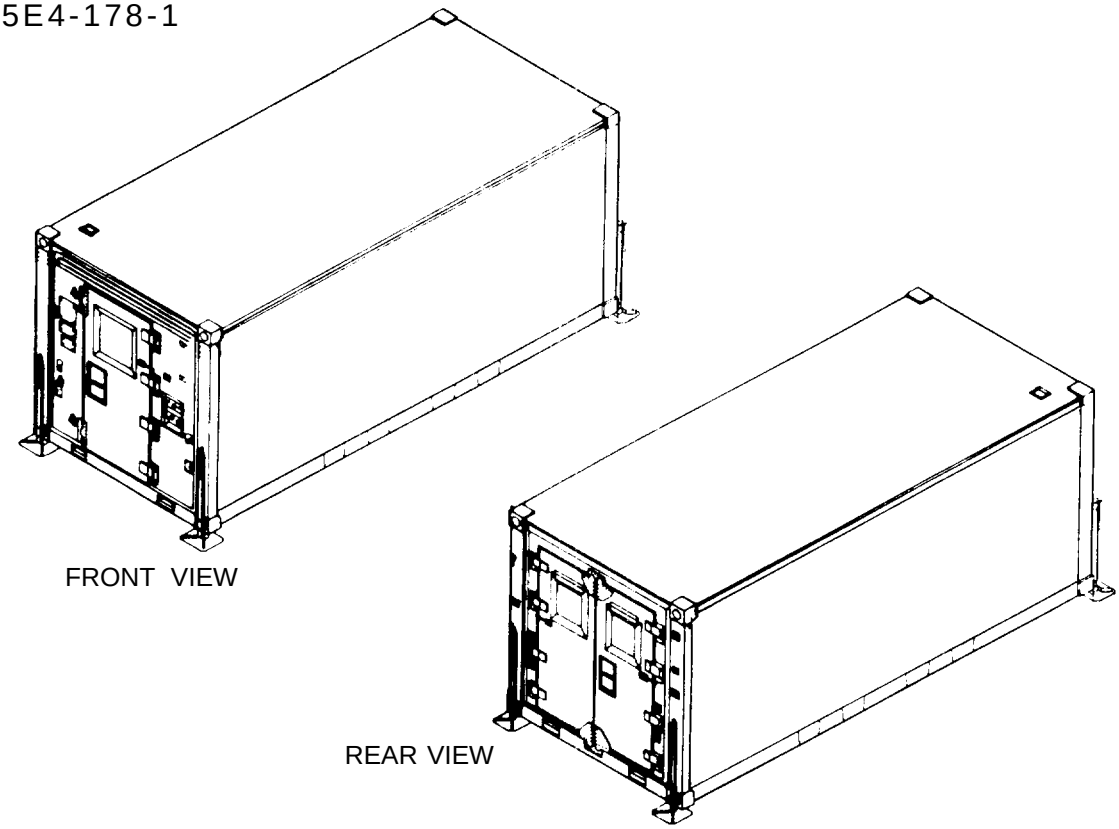

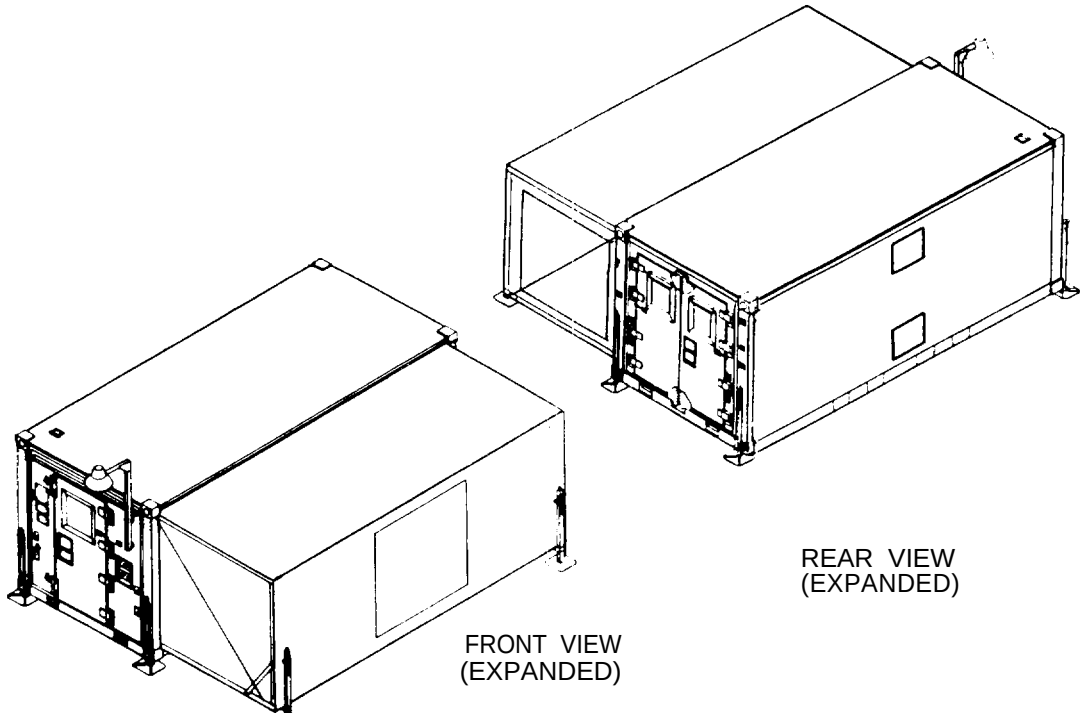

Full External View of One-Sided Expandable Tactical Shelter

CHAPTER 1

INTRODUCTION

Section I. GENERAL INFORMATION

1-1. SCOPE. This manual is for use by personnel responsible for operation and maintenance of the two-sided expandable tactical shelter assembly, which will be referred to as the shelter. It provides the user with necessary instructions to use the shelter and to perform required maintenance in accordance with the Maintenance Allocation Chart in Appendix B.

NOTE

Some portions of this publication are not applicable to all services. These portions are prefixed to indicate the services to which they pertain (A) for Army, (F) for Air Force, and (N) for Navy. Portions not prefixed are applicable to al I services.

1-2. MAINTENANCE FORMS, RECORDS, AND REPORTS. Maintenance forms, records, **and** reports used by:

a. (A) Are prescribed by DA PAM 738-750, the Army Maintenance Management System (TAMMS).

b. (F) Are prescribed in AFM-66-1 and the applicable 00-20 Series Technical Orders.

c. (A) Users shall refer to the Maintenance Allocation Chart (MAC) for task and levels of maintenance to be performed. Where the density of equipment is not sufficient to authorize unit personnel with skills necessary to perform unit-level maintenance functions, AR 750-1, paragraph 2-8c states, “Unserviceable reparable, (properly preserved, protected, and tagged) that are beyond the authorized capability or capacity to repair, will be evacuated through the appropriate supply support activities for repair or exchange. ” For units authorized personnel with skills to perform greater than unit-level maintenance functions, AR 750-1, paragraph 2-9b states, “DS and GS units may grant authority to supported units to perform the next higher level repair, if the supported unit has the capability and capacity to perform the repair.”

d. (F) Users shall accomplish maintenance at the user level consistent with their capability in accordance with policies established in AFM 66-1.

1-3. (A) DESTRUCTION OF MATERIEL TO PREVENT ENEMY USE. For destruction procedures for materiel refer to TM 750-244-3.

1-4. ADMINISTRATIVE STORAGE. For procedures and inspections required during administrative storage, refer to Chapter 4, paragraph 4-44.