TM 10-5411-201-24P
T.O. 35E4-178-4

TECHNICAL MANUAL

Unit, Direct Support and General Support Maintenance Repair Parts and Special Tools List for

SHELTER, TACTICAL, EXPANDABLE, ONE-SIDED

60 AMP (NSN 5411-01-124-1377)
100 AMP (NSN 5411-01-295-3433)

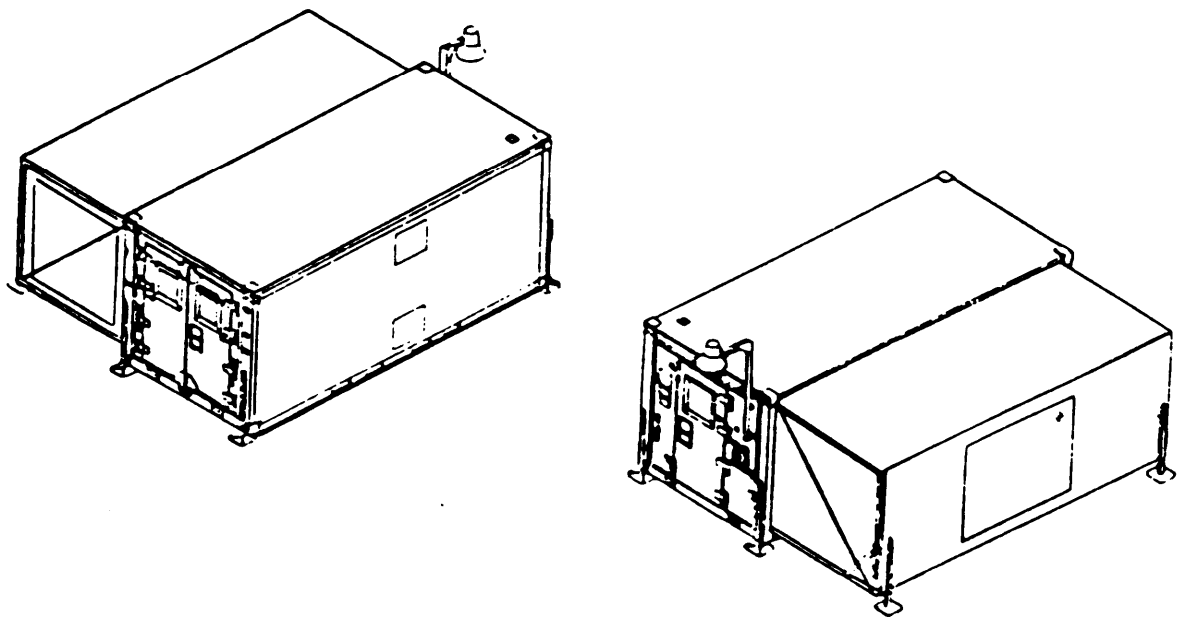

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

***This manual supersedes TM 10-5411-201-24P, dated 8 August 1988.**

HEADQUARTERS, DEPARTMENTS OF THE ARMY AND THE AIR FORCE

15 DECEMBER 1993

TECHNICAL MANUAL

NO.10-5411-201-24P

HEADQUARTERS
DEPARTMENTS OF THE ARMY
AND THE AIR FORCE
WASHINGTON, D.C., 15 DECEMBER 1993

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR SHELTER, TACTICAL, EXPANDABLE, ONE-SIDED (60 AMP NSN 5411-01-124-1377 PCC:DNT) (1OO AMP NSN 5411-01-295-3433 PCC:ERJ)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward to Commander, San Antonio Air Logistics Center, ATTN: SA-ALC-MMDDA, Kelly Air Force Base, Texas 78241-5000.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Figure
Section I. INTRODUCTION	1-1	
Section II. REPAIR PARTS LIST	2-0	
Group 01 Electrical System	2-0	
Panel board Assembly	2-0	1
Fixed Fluorescent Light Assembly	2-4	2
Movable Fluorescent Light Assembly	2-8	3
Incandescent Light Installation	2-12	4
Exterior Light Assembly	2-14	5
Power Entry Panel	2-18	6
Cable and Receptacle Assembly - Panel board	2-22	7
Roof Beam Cable and Receptacle Assembly	2-26	8
Receptacle and Outlets Wiring	2-30	9
Group 02 Environmental System	2-36	
Environmental Control Unit Return Panel Assembly.	2-36	10
Environmental Control Unit Intake Panel Assembly.	2-38	11
Closeout Panel Assembly	2-40	12
Group 03 Door Assemblies	2-42	
Personnel and Right Cargo Door Assembly	2-42	13
Door Handle and Latch Installation	2-46	14
Vent Installation	2-50	15
Left Cargo Door	2-54	16

* This manual supercedes TM 10-5411-201-24P, dated 8 August 1988

TABLE OF CONTENTS - Continued

		Page	Illus Figure
	Personnel and Right Cargo Door Stop	2-62	17
	Left Cargo Door Stop	2-68	18
	Personnel Door Shear Plates Installation	2-74	19
	Cargo Doors Shear Plates Installation	2-76	20
	Closeout Panel	2-78	21
Group 04	Leveling Jack Assemblies	2-80	
	Hinged Section Jack	2-80	22
	Jack Extension	2-84	23
Group 05	Folding Panel Assemblies	2-86	
	Hinged Roof	2-86	24
	Hinged Roof Support Strut	2-88	25
	Personnel End Hinged Endwall	2-92	26
	Cargo End Hinged Endwall	2-96	27
	Closeout Hinged Sidewall	2-100	28
	Hinged Sidewall	2-104	29
	Hinged Floor	2-108	30
	Front and Rear Brace Installation	2-112	31
Group 06	Container Lift Jack Assemblies	2-114	
	Jack Assembly International Standard Fitting	2-114	32
Group 07	Fixed Panel Assemblies	2-118	
	Fixed Sidewall	2-118	33
	Personnel End Fixed Endwall	2-122	34
	Personnel Endwall Level	2-128	35
	Cargo End Fixed Endwall	2-130	36
	Cargo Endwall Level	2-132	37
	Fixed Roof	2-134	38
	Fixed Roof Mechanism Installation	2-140	39
	Fixed Roof Beam	2-144	40
	Fixed Floor	2-148	41
	Fixed Floor Base	2-152	42
	Frame Assembly	2-154	
	Fixed Sidewall Corner Post and Enclosure	2-154	43
	Inside Guide Roller	2-158	44
	Hinged Section Corner Post	2-160	45
Group 09	Equipment Container	2-164	
	Equipment Container	2-164	46
Group 10	Bulk Materials List	2-167	
Section III.	SPECIAL TOOLS LIST	3-0	
	Special Tools	3-0	47
	Blind Nut Removal Tool Kit, P/N 105-60	3-2	48
	Blind Nut Removal Tool Kit, P/N 105-80	3-4	49
Section IV.	NATIONAL STOCK NUMBER AND PART NUMBER INDEX	4-1	

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

Section 1. INTRODUCTION

1. *Scope*. This joint Army, Navy, Air Force and Marine Corps manual lists repair parts and special tools required for the performance of organizational, intermediate (field), direct and general support maintenance of the expandable tactical shelter. The following paragraphs are keyed to applicable users. All users should read paragraph 4, Special Information, prior to using this manual.

NOTE: (Army) Repair parts listed represent those authorized for use at indicated maintenance levels and will be requisitioned on an "as required" basis until stockage is justified by demand in accordance with AR 710-2.

NOTE: (Army) Organizational Maintenance personnel are to extract the maintenance coded -O- items they require from Section II, Column (2), Third and or Fourth Position of the Direct and General Support Repair Parts and Special Tools List.

2. General. This Repair Parts and Special Tools List is divided into the following sections:

a. (ALL) Repair Parts -- Section II. A list of repair parts authorized for the performance of maintenance at the organizational, intermediate (field), direct support, general support in figure and item number sequence.

b. (ALL) Special Tools. Test and Support Equipment -- Section III. A list of special tools, test and support equipment authorized for the performance of maintenance at the organizational, intermediate (field), (direct support and general support).

c. National Stock Number and Reference Number Index -- Section IV. A list of National stock numbers in numerical sequence, followed by a list of reference numbers appearing in all the listings in alphanumeric sequence, cross-referenced to the illustration figure number and item number.

3. *Explanation of columns*. The following provides an explanation of columns in the tabular lists in Sections II and III.

a. (ALL) Illustrations. (Column 1.) This column is divided as follows:

(1) Figure Number. Indicates the figure number of the illustration on which the item is shown.

(2) Item Number. Indicates the number used to identify the item on the illustration.

b. (ALL) Source, Maintenance, and Recoverability Codes (SMR) (Column 2.)

(1) Uniform Source Codes applicable to all Military Services.
GENERAL: Source Codes are assigned to support. items to indicate the manner of accounting support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

CODE	DEFINITION
PA	Item procured and stocked for anticipated or known usage.