*TM 10-5411-206-24P

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

for

SHELTER, ELECTRICAL EQUIPMENT S-280B/G (NSN 5411-00-117-2868) S-280B/G (SHIELDED) (NSN 5411-00-001-4093)

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

* This manual supersedes S-280B/G portions of TM 11-5410-213-14P, dated April 1978.

HEADQUARTERS, DEPARTMENT OF THE ARMY
30 SEPTEMBER 1993

TECHNICAL MANUAL

NO. 10-5411-206-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 30 SEPTEMBER 1993

TECHNICAL MANUAL

Unit, Direct Support and General Support Maintenance
Repair Parts and Special Tools List
for

SHELTER, ELECTRICAL EQUIPMENT
S-280B/G (NSN 5411-00-117-2868)
S-280B/G (SHIELDED) (NSN 5411-00-001-4093)

Current as of 13 September 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		PAGE	ILLUS/ FIGURE
Section I.	INTRODUCTION	I	
Section II.	REPAIR PARTS LIST	1-1	
Group 00	Shelter, Electrical Equipment		
	Drip Mold, Data Plates and Base Hardware	1-1	1
Group 01	Door Brace Assembly		
	Door Brace Assembly	2-1	2
Group 02	Door Assembly		
	Door Assembly	3-1	3
	Emergency Exit Panel Assembly	4-1	4
	Door Handles, Locks and Latches	5-1	5
Group 03	Towing Eye Assembly		
	Towing Eye Assembly	6-1	6
Group 04	Lifting Eye Assembly		
	Lifting Eye Assembly	7-1	7
Group 05	Steps, Hand Holds and Drain Plug		
	Steps, Hand Holds and Drain Plug	8-1	8
Group 06	RFI Components		
	RFI Components	9-1	9
Group 07	Skid Assembly and Mounting Brackets		
	Skid Assembly and Mounting Brackets	10-1	10
Section III.	SPECIAL TOOLS LIST (Not Applicable)		

* This manual supersedes S-280B/G portions of TM 11-5410-213-14P, dated April 1978.

Section IV. CROSS REFERENCE INDEXES

National Stock Number Index I-1
Part Number Index I-2
Figure and Item Number Index I-6

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Shelter, Electrical Equipment, S-280B/G and S-280B/G (Shielded). It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Colomn (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

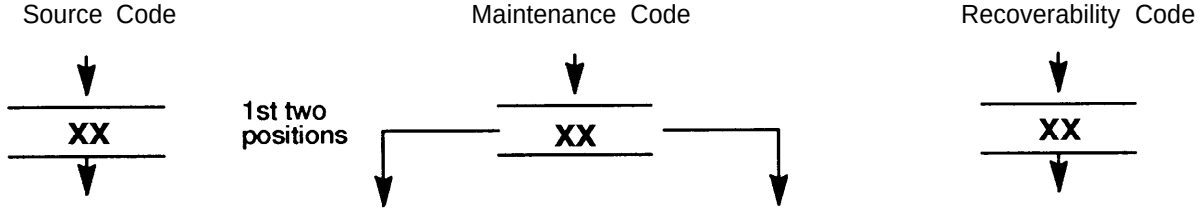

***** Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair' function in a use/user environment in order to restore serviceability to a failed item.

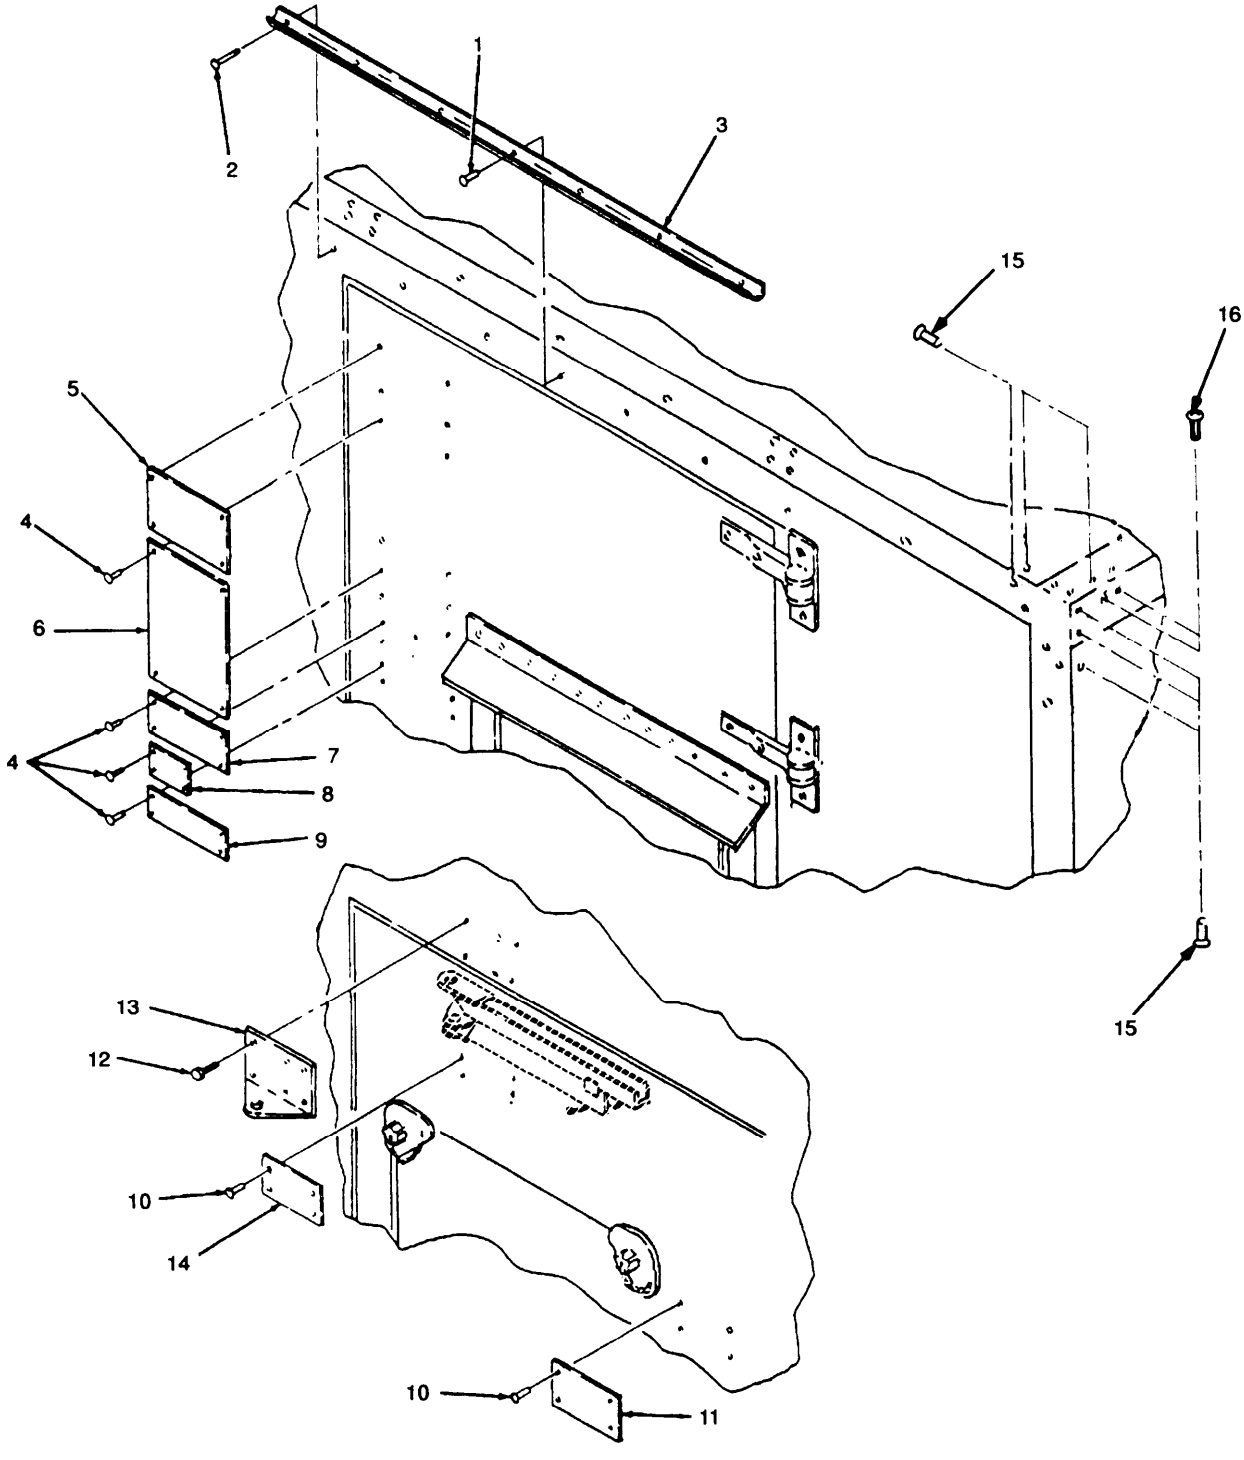

Figure 1. Drip Mold, Data Plates and Base Hardware (Sheet 1 of 2).

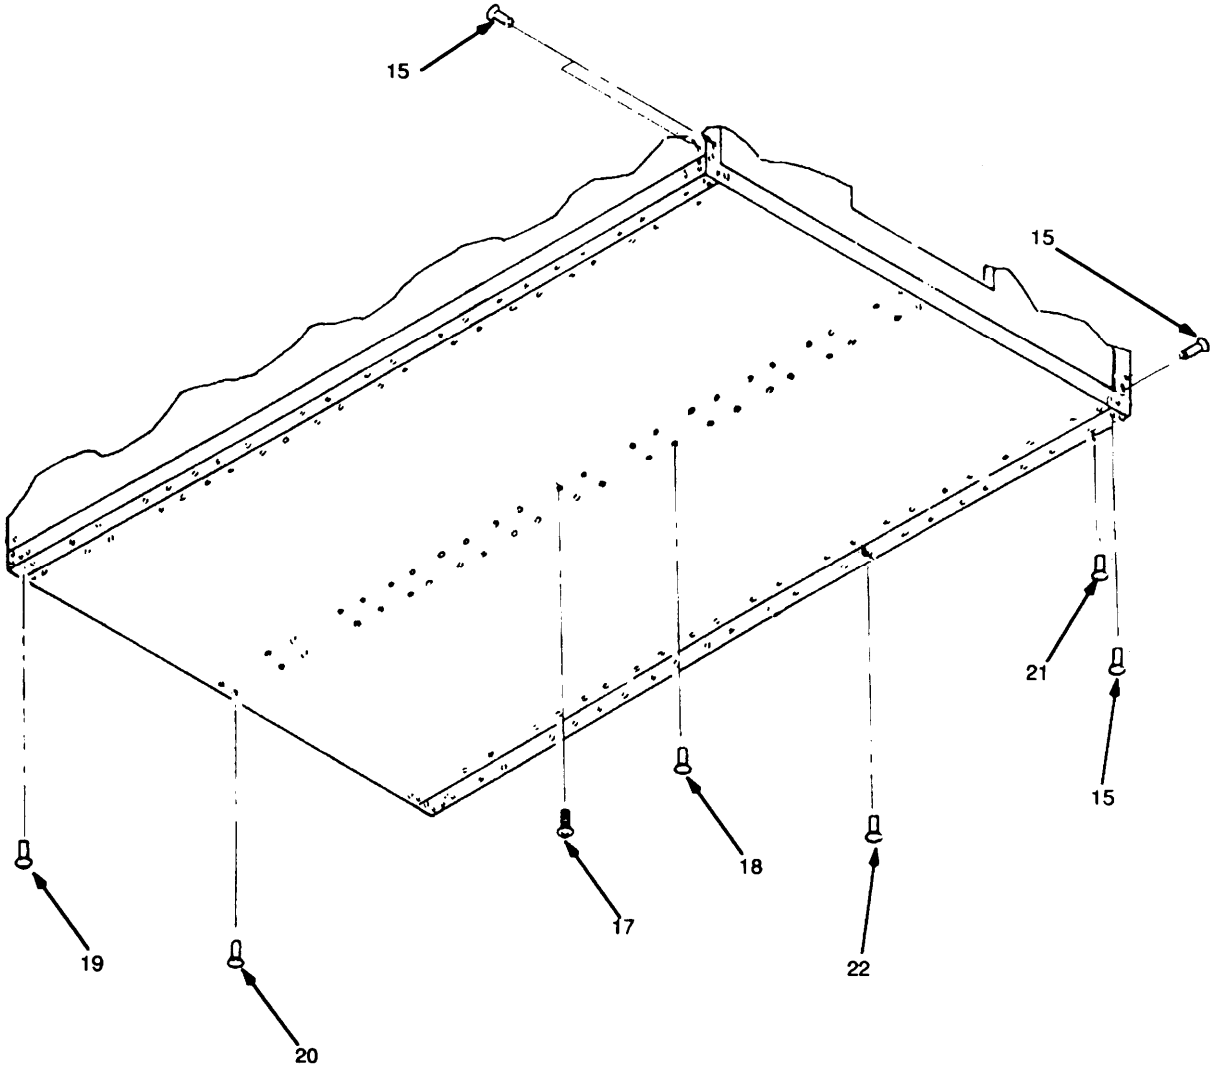

Figure 1. Drip Mold, Data Plates and Base Hardware (Sheet 2 of 2).