***ARMY TM 10-8340-211-13**
AIR FORCE TO 35E5-1-101

TECHNICAL MANUAL

OPERATOR, UNIT AND DIRECT SUPPORT MAINTENANCE MANUAL FOR

TENT, GENERAL PURPOSE
SMALL NSN 8340-00-470-2335
MEDIUM NSN 8340-00-482-3963
LARGE NSN 8340-00-470-2342

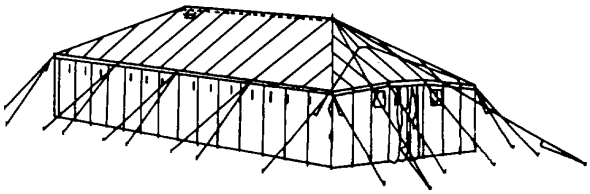

EQUIPMENT DESCRIPTION AND DATA PAGE 1-2

OPERATOR PMCS PAGE 2-16

OPERATOR MAINTENANCE PROCEDURES PAGE 3-3

SERVICE UPON RECEIPT PAGE 4-2

UNIT PMCS PAGE 4-21

UNIT MAINTENANCE PROCEDURES PAGE 4-24

MAINTENANCE ALLOCATION CHART PAGE B-1

This copy is a reprint which includes current pages from Changes 1 through 4.

Approved for public release; distribution Is unlimited.

***This manual supersedes TM 10-8340-211-13, 29 September 1972.**

HEADQUARTERS, DEPARTMENTS OF THE ARMY AND AIR FORCE
16 SEPTEMBER 1990

TECHNICAL MANUAL
NO. 10-8340-211-13

HEADQUARTERS
DEPARTMENTS OF THE ARMY AND AIR FORCE
WASHINGTON, D.C., 16 SEPTEMBER 1990

OPERATOR, UNIT, AND DIRECT SUPPORT MAINTENANCE MANUAL FOR TENT, GENERAL PURPOSE SMALL NSN 8340-00-470-2335, MEDIUM NSN 8340-00-482-3963 LARGE NSN 8340-00-470-2342

Current as of 1 January, 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

AIR FORCE

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to prime ALC/MST.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page
CHAPTER 1.	INTRODUCTION	
	Overview	1-1
Section I	General Information	1-1
Section II	**Equipment Description and Data**	1-2
Section III	Principles of Operation	1-6
CHAPTER 2.	OPERATING INSTRUCTIONS	
	Overview	2-1
Section I	Description and use of Operator's Controls	2-1
Section II	**Operator Preventive Maintenance Checks and Services (PMCS)**	2-16
Section III	Operating Under Usual Conditions	2-20
Section IV	Operating Under Unusual Conditions	2-26
CHAPTER 3.	OPERATOR MAINTENANCE INSTRUCTIONS	
	Overview	3-1
Section I	Lubrication Instructions	3-1
Section II	Operator Troubleshooting	3-1
Section III	**Operator Maintenance Procedures**	3-3

*This manual supersedes TM 10-8340-211-13/TO 35E5-1-101, dated 29 Sept 1972, including all changes.

TABLE OF CONTENTS (cont)

		Page
CHAPTER 4.	UNIT MAINTENANCE INSTRUCTIONS	
	Overview	4-1
Section I	Repair Parts, Special Tools, and Support Equipment	4-1
Section II	**Service Upon Receipt**	4-2
Section III	**Unit Preventive Maintenance Checks and Services (PMCS)**	4-21
Section IV	Unit Troubleshooting	4-22
Section V	**Unit Maintenance Procedures**	4-24
Section VI	Preparation for Shipment or Storage	4-40
CHAPTER 5.	DIRECT SUPPORT MAINTENANCE	
	Overview	5-1
Section I	Repair Parts, Special Tools and Support Equipment	5-1
Section II	Troubleshooting	5-1
Section III	Direct Support Maintenance	5-2
APPENDIX A	REFERENCES	A-1
APPENDIX B	**MAINTENANCE ALLOCATION CHART**	B-1
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS	C-1
APPENDIX D	ADDITIONAL AUTHORIZATION LIST	D-1
APPENDIX E	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST	E-1
APPENDIX F	LIST OF MANUFACTURED/FABRICATED TENT LINES AND COVERS	F-1

LIST OF ILLUSTRATIONS

Figure Number	Title	Page
1-1	Tent, General Purpose	1-0
1-2	Small General Purpose Tent	1-3
1-3	Medium General Purpose Tent	1-4
1-4	Large General Purpose Tent	1-4
2-1	Small Tent, Door Closed	2-2
2-2	Tent Door Closed (Inside View)	2-4
2-3	Tent and Liner, Doors Open with Flaps Rolled and Tied	2-6
2-4	Ventilator Duct, Inside View/Outside View (Small Tent)	2-8
2-5	Roof Ventilator and Raps, Outside View	2-9
2-6	Stovepipe Opening Closed (Outside View)	2-10
2-7	Stovepipe Opening - Small Tent (Inside View)	2-11
2-8	Double Door Entrance (Medium and Large Tents)	2-12

LIST OF ILLUSTRATIONS (cont)

Figure Number	Title	Page
2-9	Left and Right Screen Doors (Medium and Large Tents)	2-13
2-10	Stovepipe Opening Open (Medium and Large Tents)	2-14
2-11	Windows (Large Tent)	2-15
2-12	Opening Tent Door (Small Tent)	2-21
2-13	Opening Screen (Small Tent)	2-22
2-14	Opening Ventilator Duct (Small Tent)	2-23
2-15	Opening Ventilator Flap	2-23
2-16	Opening Doors (Medium and Large Tents)	2-24
2-17	Opening Screens (Medium and Large Tents)	2-25
2-18	Opening Windows (Large Tent)	2-26
2-19	Opening Stovepipe Flaps	2-27
4-1	Small General Purpose Tent, Packed for Shipment	4-2
4-2	Ground Plan of Small General Purpose Tent (with Vestibule)	4-5
4-3	Erection of Small General Purpose Tent	4-6
4-4	Ground Plan of Medium General Purpose Tent	4-7
4-5	Erection of Medium General Purpose Tent	4-8
4-6	Ground Plan of Large General Purpose Tent	4-9
4-7	Erection of Large General Purpose Tent	4-10
4-8	Small Tent with Liner	4-12
4-9	Erection of Liner in Medium Tent	4-14
4-10	Folding Medium Tent Liners	4-15
4-11	Erecting Liner in Large Tent	4-16
4-12	Folding the Large Tent Liner	4-18
4-13	Joining Vestibule to Small Tent, or Two Small Tents in Tandem	4-19
4-14	Cross Section of Trench Around Tent	4-20
4-15	Trenching Around Tent	4-21
4-16	Tent Body	4-27
4-17	Ventilator Flap Line Replacement (Small Tent)	4-28
4-18	Wood Toggles	4-29
4-19	Corner Hook	4-30
4-20	Grommets	4-31
4-21	Dual Eave, Corner and Guy Lines	4-33
4-22	Fairleads	4-34
4-23	Peak Plate	4-35
4-24	Ridge Plate	4-36
4-25	Slide Fasteners and Thongs	4-37
4-26	Vestibule	4-38
4-27	Folding the Small Tent	4-42
4-28	Folding the Medium Tent	4-44
4-29	Folding the Large Tent	4-46
5-1	Stovepipe Opening Shield	5-6
5-2	Cover for Medium Tent or Liner for Large Tent	5-8

LIST OF TABLES

Table Number	Title	Page
2-1	Operator Preventive Maintenance Checks and Services (PMCS)	2-18
3-1	Operator Troubleshooting	3-2
4-1	Unit Preventive Maintenance Checks and Services (PMCS)	4-22
4-2	Unit Troubleshooting	4-23
F-1	List of Manufactured/Fabricated Tent Liners and Covers	F-1

HOW TO USE THIS MANUAL

This manual is designed to help you keep your general purpose tents in good operating condition. The front cover index is provided for quick reference to important information. There is also an index located in the final pages for use in locating specific items of information.

A warning page is located in the front of this manual. You should learn the warnings before performing any maintenance on the equipment.

Paragraphs in this manual are numbered by chapter and order of appearance within a chapter. A subject index appears at the beginning of each chapter listing sections that are included in that chapter. A more specific index is located at the beginning of each section to help you find the exact paragraph you are looking for.

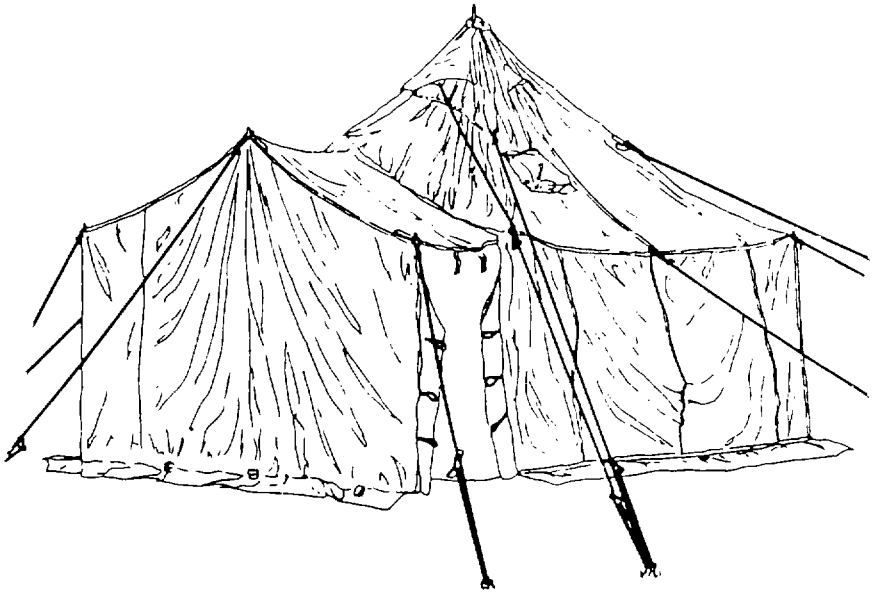

SMALL

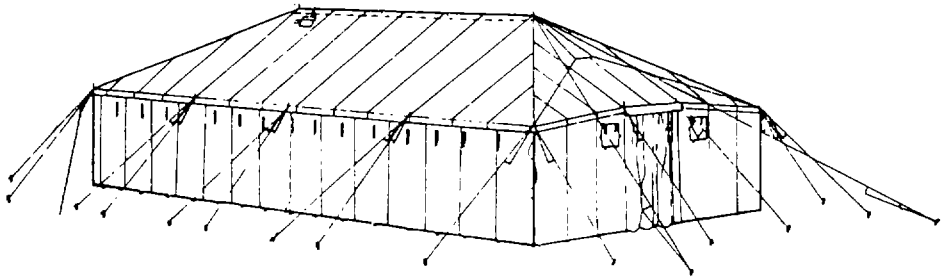

MEDIUM

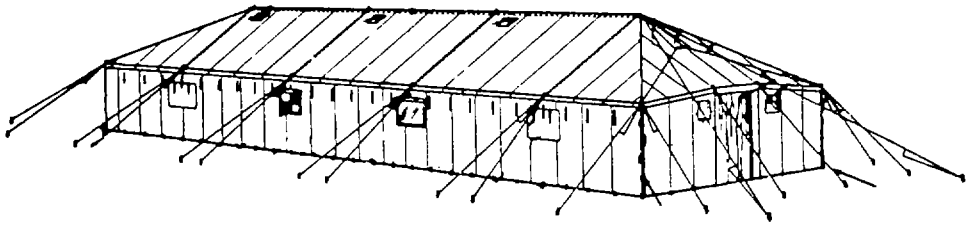

LARGE

Figure 1-1. Tent, General Purpose.

CHAPTER 1
INTRODUCTION

Page

OVERVIEW 1-1
SECTION I. General Information 1-1
SECTION II. Equipment Description and Data 1-2
SECTION III. Principles of Operation 1-6

OVERVIEW

This chapter contains general information pertinent to the General Purpose Tents and describes the components to enhance the understanding of their use and function.

Section I. GENERAL INFORMATION

1-1. Scope.

a. Type of Manual. This technical manual includes operator, unit and direct support (DS) maintenance procedures for the three General Purpose Tents (small, medium, and large). Additional maintenance data relevant to a designated tent can be found in the applicable end item technical manual.

b. Equipment Name and Model Numbers. This technical manual covers the Tent, General Purpose, Small (NSN 8340-00-740-2335), Medium (NSN 8340-00-482-3963), and Large (NSN 8340-00-470-2342) (figure 1-1).

c. Purpose of Equipment. The General Purpose tents are designed to provide shelter, be easily portable and very durable when properly maintained.

1-2. Maintenance Forms and Records. Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, The Army Maintenance Management System (TAMMS). Refer to the latest issue of DA Pam 25-30 (Consolidated Index of Army Publications and Blank Forms) to determine if there are new editions, changes or additional publications pertaining to the equipment. Air Force personnel will use AFR 66-1 for maintenance reporting and TO-00-35D54 for unsatisfactory equipment reporting.

1-3. Destruction of Army Materiel to Prevent Enemy Use. Destruction of Army equipment to prevent enemy use shall be in accordance with TM 750-244-3.

1-4. Preparation for Shipment or Storage. Refer to paragraph 4-35 for shipment and storage preparation data.