TECHNICAL MANUAL

OPERATOR'S MANUAL

TENT, GENERAL AND SPECIAL USE,
POLE SUPPORTED: ARTIC, 10-MAN
NSN 8340-00-262-2877
ASSEMBLY, M-1942, NSN 8340-00-262-2877;
COMMAND POST, M-1945, NSN 8340-00-269-1370;
HEXAGONAL, LIGHTWEIGHT, M-1950,
NSN 8340-00-269-1372

This reprint includes all changes in effect at the time of publication. See inside front cover for details.

HEADQUARTERS, DEPARTMENT OF THE ARMY

21 NOVEMBER 1972

TECHNICAL MANUAL
No. 10-8340-222-10

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 21 November 1972

OPERATOR'S MANUAL
TENT, GENERAL AND SPECIAL USE, POLE SUPPORTED: ARTIC, 10-MAN NSN 8340-01-059-4075, NSN 8340-00-262-3685; ASSEMBLY, M-1942, NSN 8340-00-262-2877; COMMAND POST, M-1945, NSN 8340-00-269-1370; HEXAGONAL, LIGHTWEIGHT, M-1950, NSN 8340-01-026-6095

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

		Paragraph	Page
CHAPTER 1.	INTRODUCTION		
SECTION I.	General		
	Scope	1-1	1-1
	Maintenance forms and records	1-2	1-1
	Reporting of errors	1-3	1-1
	Equipment serviceability criteria (ESC)	1-4	1-1
II.	Description and Data		
	General	1-5	1-1
	Tent, arctic, 10-man	1-6	1-5
	Tent, assembly, M-1942	1-7	1-6
	Tent, command post, M-1945	1-8	1-6
	Tent, hexagonal, lightweight, M-1950	1-9	1-6
	Tabulated data	1-10	1-7
CHAPTER 2.	OPERATING INSTRUCTIONS		
SECTION I.	Operating Procedures		
	Site selection	2-1	2-1
	Erecting (pitching) 10-man arctic tent	2-2	2-1
	Striking 10-man arctic tent	2-3	2-5
	Folding 10-man arctic tent	2-4	2-5
	Erecting (pitching) assembly tent M-1942	2-5	2-7
	Striking assembly tent M-1942	2-6	2-11
	Folding assembly tent M-1942	2-7	2-11
	Erecting (pitching) command post tent M-1945	2-8	2-13
	Striking command post tent M-1945	2-9	2-18
	Folding command post tent M-1945	2-10	2-18
	Erecting (pitching) lightweight tent M-1950	2-11	2-20
	Striking lightweight tent M-1950	2-12	2-22
	Folding lightweight tent M-1950	2-13	2-22
II.	Operation Under Unusual Conditions		
	Using the tent in cold climates	2-14	2-24
	Using the tent in wet climates	2-15	2-24

		Paragraph	Page
CHAPTER 3.	MAINTENANCE INSTRUCTIONS		
SECTION I.	Lubrication Instructions		
II.	Preventive Maintenance Checks and Services		
	General	3-1	3-1
	Preventive maintenance checks and services (table 3-1)	3-2	3-1
SECTION III.	Troubleshooting		
	General	3-3	3-3
	Troubleshooting (table 3-2)	3-4	3-3
IV.	Maintenance Procedures		
	Protection of tent against damage	3-5	3-3
	Protection of pins, poles, and lines against damage	3-6	3-4
APPENDIX A.	REFERENCES		A-1

LIST OF ILLUSTRATIONS

Figure	*Caption*	*Page*
1-1	Tent, arctic, 10-man	1-2
1-2	Tent, assembly, M-1942	1-3
1-3	Tent, command post, M-19-4	1-4
1-4	Tent, hexagonal, lightweight, M-1950	1-5
2-1	Ground plan, arctic 10-man tent	2-2
2-2	Steps in pitching tent, arctic 10-man	2-3
2-3	Joining two tents together by chain-lacing beckets through grommets	2-5
2-4	Steps in folding tent, arctic, 10-man	2-6
2-5	Ground plan, assembly tent M-1942	2-7
2-6	Steps in pitching tent, assembly, M-1942 (sheet 1 of 2)	2-8
2-6	Steps in pitching tent, assembly, M-1942 (sheet 2 of 2)	2-9
2-7	Preparing center pole for erection of tent, assembly, M-1942	2-9
2-8	Steps in lacing top sections together (tent, assembly, M-1942)	2-10
2-9	Lacing sections to bail rings (tent, assembly, M-1942)	2-11
2-10	Steps in folding tent, assembly, M-1942	2-12
2-11	Ground plan of tent, command post, M-1945	2-13
2-12	Steps in pitching tent, command post, M-1945	2-15
2-13	Steps in attaching liner to tent, command post, M-1945	2-17
2-14	Attaching screens to sidewalls of tent, command post, M-1945	2-18
2-15	Steps in folding tent, command post, M-1945	2-19
2-16	Ground plan of tent, hexagonal, lightweight, M-1950	2-20
2-17	Steps in pitching tent, hexagonal, M-1950	2-21
2-18	Steps in folding tent, hexagonal, M-1950	2-23

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1-1. Scope
This manual is for your use in erecting, striking and maintaining the 10-man arctic tent, assembly tent M1942, command post tent M1945, and the lightweight hexagonal tent M1950.

1-2. Forms and Records
Maintenance forms and records that you are required to use are explained in TM 38-750.

1-3. Reporting Errors and Recommending Improvements
You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

1-4. Equipment Serviceability Criteria (ESC).
This equipment is not covered by an ESC.

Section II. DESCRIPTION AND TABULATED DATA

1-5. General
Refer to figures 1-1 through 1-4 for an illustrated description of the 10-man arctic tent, assembly tent M1942, command post tent M1945, and the lightweight tent M1950. The following paragraphs provide a general description for each tent.

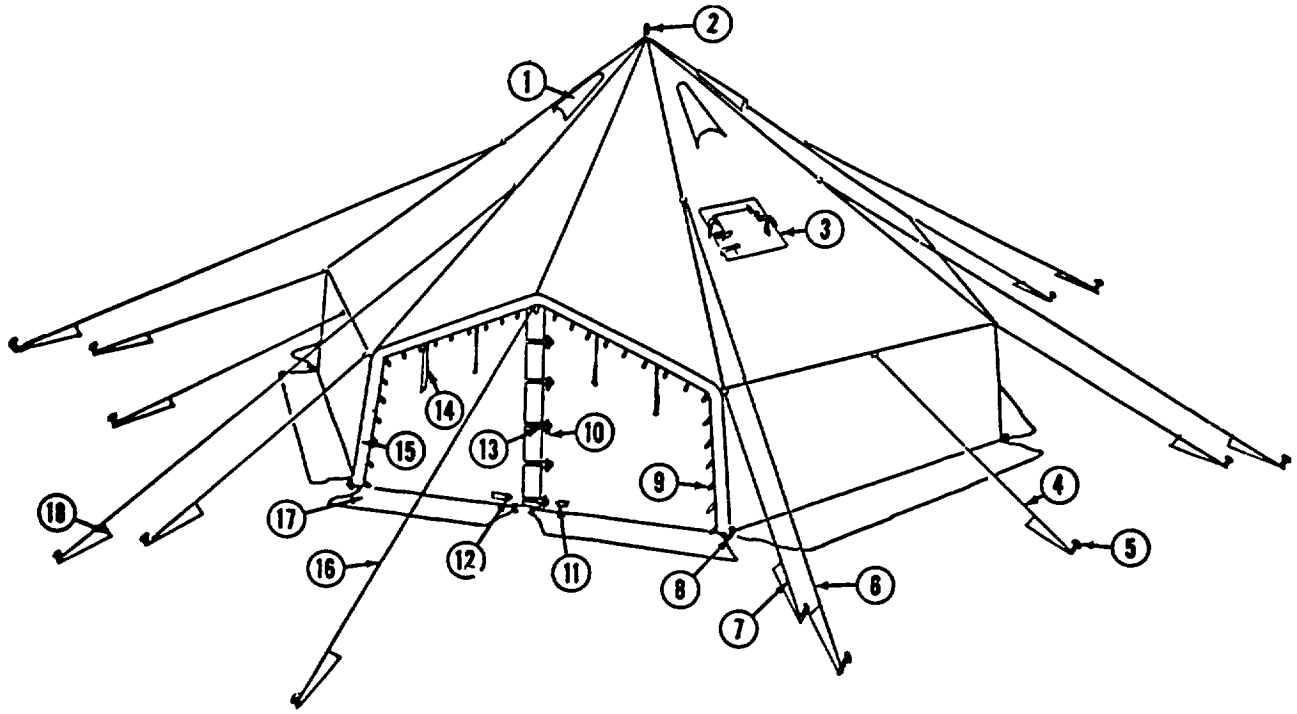

1	Ventilator	7	Tent line, corner eave	13	Toggle loop
2	Telescopic tentpole	8	Footstop	14	Tie tape
3	Stovepipe opening	9	Becket	15	Tent lug
4	Tent line, eave	10	Wood toggle	16	Tent line, door eave
5	Aluminum tent pin	11	Chape snap	17	Snow cloth
6	Tent line, corner	12	D-ring	18	Tent slip

ME 8340-22-10/1-1

Figure 1-1. Tent, arctic, 10-man.