ARMY
AIR FORCE
NAVY

***TM 10-8340-224-13**
TO 35E5-6-1
NAVFAC-P-337.A

TECHNICAL MANUAL

OPERATOR, UNIT, AND DIRECT SUPPORT MAINTENANCE MANUAL FOR TENT, EXTENDABLE, MODULAR, PERSONNEL (TEMPER)

TYPE I, 64 x 20 SURGICAL WORK, GREEN, NSN: 8340-01-185-2616
TYPE II, 64 x 20 MEDICAL. GREEN, NSN: 8340-01-185-2617
TYPE Ill, 48 x 20 UTILITY, GREEN, NSN: 8340-01-185-2615
TYPE IV. 32 x 20 PERSONNEL, GREEN, NSN: 8340-01-196-6272
TYPE V, 16 x 20 MEDICAL. GREEN, NSN: 8340-01-185-2614
TYPE VI, 16 x 20 CENTRAL MED SUPPLY, GREEN, NSN: 8340-01-185-2618
TYPE VII, 16 x 20 UTILITY. GREEN, NSN: 8340-01-185-2613
TYPE VIII, 96 x 20 MEDICAL WARD, GREEN, NSN: 8340-01-257-8468
TYPE IX, 80 x 20 MEDICAL SURGICAL. GREEN, NSN: 8340-01-257-8469
TYPE X. 64 x 20 MEDICALSUPPORT, GREEN, NSN: 8340-01-257-8470
TYPE XI. 32 x 20 MEDICAL SUPPORT, GREEN, NSN: 8340-01-257-8471
TYPE XII, 16 x 20 CS SUPPORT, GREEN, NSN: 8340-01-257-8472
TYPE XIII, 96 x 20 MEDICAL WARD TROP., GREEN, NSN: 8340-01-257-8473
TYPE XIV. 32 x 20 MEDICAL SUPPORT TROP., GREEN, NSN: 8340-01-257-8474
TYPE XV, 48 x 20 KITCHEN, GREEN, NSN: 8340-01-325-0131
TYPE XVI, 32 x 20 SANITATION CENTER, GREEN, NSN: 8340-01-324-7971

TYPE I, 64 x 20 SURGICAL WORK, TAN, NSN: 8340-01-212-9468
TYPE II, 64 x 20 MEDICAL, TAN, NSN: 8340-01-212-9469
TYPE Ill, 48 x 20 UTILITY, TAN, NSN: 8340-01-212-9470
TYPE IV, 32 x 20 PERSONNEL, TAN, NSN: 8340-01-185-2628
TYPE V, 16 x 20 MEDICAL, TAN, NSN: 8340-01-212-9471
TYPE VI, 16 x 20 CENTRAL MED SUPPLY, TAN, NSN: 8340-01-212-9472
TYPE VII, 16 x 20 UTILITY, TAN, NSN: 8340-01-212-9473
TYPE VIII, 96 x 20 MEDICAL WARD, TAN, NSN: 8340-01-257-8475
TYPE IX, 80 x 20 MEDICAL SURGICAL. TAN, NSN: 8340-01-257-8476
TYPE X. 64 x 20 MEDICAL SUPPORT, TAN, NSN: 8340-01-257-8477
TYPE XI. 32 x 20 MEDICAL SUPPORT, TAN, NSN: 8340-01-257-8478
TYPE XII. 16 x 20 CS SUPPORT, TAN, NSN: 8340-01-257-8479
TYPE XIII, 96 x 20 MEDICAL WARD TROP., TAN, NSN: 8340-01-258-6482
TYPE XIV, 32 x 20 MEDICAL SUPPORT TROP., TAN, NSN: 8340-01-257-8480
TYPE XV, 48 x 20 KITCHEN. TAN, NSN: (UNASSIGNED)
TYPE XVI, 32 x 20 SANITATION CENTER, TAN, NSN: (UNASSIGNED)

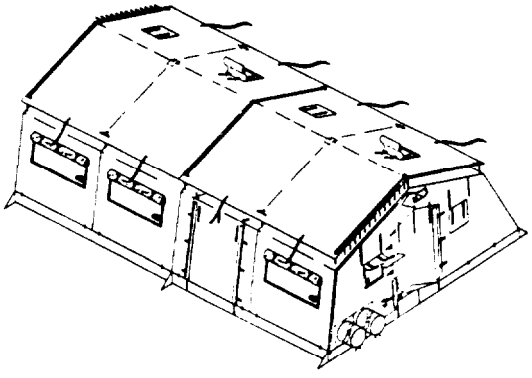

INTRODUCTION	1-1
OPERATOR INSTRUCTIONS	2-1
OPERATOR MAINTENANCE INSTRUCTIONS	3-1
UNIT MAINTENANCE INSTRUCTIONS	4-1
DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
REFERENCES	A-1
MAINTENANCE ALLOCATION CHART	B-1
COMPONENTS OF END ITEM LIST AND BASIC ISSUE ITEM LIST	C-1
ADDITIONAL AUTHORIZATION LIST	D-1
EXPENDABLE/DURABLE SUPPLIES & MATERIALS LIST	E-1
ILLUSTRATED LIST OF MANUFACTURED ITEMS	F-1
GLOSSARY	GLOSSARY-1
ALPHABETICAL INDEX	INDEX-1

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

* This manual together with TM 10-8340-224-23P, dated 31 October 1994, supersede TM 10-8340-224-13&P, dated 28 February 1986.

HEADQUARTERS, DEPARTMENT OF THE ARMY, AIR FORCE AND NAVY

1 MARCH 1993

TECHNICAL MANUAL

NO. 10-8340-224-13

HEADQUARTERS
DEPARTMENTS OF THE ARMY,
AIR FORCE AND NAVY
WASHINGTON D.C., 1 MARCH 1993

TECHNICAL MANUAL

Operator, Unit, Direct Support Maintenance Manual

For

TENT, EXTENDABLE, MODULAR, PERSONNEL (TEMPER)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

Chapter/Section			PAGE
CHAPTER 1		INTRODUCTION	1-1
	Section I	General Information	1-1
	Section II	Equipment Description	1-3
	Section III	Technical Principles of Operation	1-18
CHAPTER 2		OPERATING INSTRUCTIONS	2-1
	Section I	Description and Use of Operator's Controls and Indicator	2-2
	Section II	Operator Preventive Maintenance Checks and Services (PMCS)	2-4
	Section III	Operations Under Usual Conditions	2-17
	Section IV	Operations Under Unusual conditions	2-76
CHAPTER 3		OPERATOR MAINTENANCE INSTRUCTIONS	3-1
	Section I	Lubricating Instructions	3-1
	Section II	Operator Troubleshooting Procedures	3-1
	Section III	Operator Maintenance Procedures	3-5

*** This manual together with TM 10-8340-224-23P, dated 31 October 1994, supersede TM 10-8340-224-13&P, dated 28 February 1986.**

TABLE OF CONTENTS CONT'D.

Chapter/Section		Page
CHAPTER 4	UNIT MAINTENANCE INSTRUCTIONS	4-1
Section I	Repair Parts, Special Tools, TMDE and Support Eqipment	4-2
Section II	Service Upon Receipt	4-2
Section III	Unit Troubleshooting	4-3
Section IV	Unit Maintenance Procedures	4-4
Section V	Preparation for Storage or Shipment	4-11
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
Section I	Repair Parts, Special Tools; Test Measurement Diagnostic Equipment (TMDE) and Support Equipment	5-1
Section II	Troubleshooting	5-1
Section III	Maintenance Procedures	5-2
APPENDIX A	REFERENCES	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART	B-1
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LIST	C-1
APPENDIX D	ADDITIONAL AUTHORIZATION LIST	D-1
APPENDIX E	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST	E-1
APPENDIX F	ILLUSTRATED LIST OF MANUFACTURED ITEMS	F-1

*U.S. GOVERNMENT PRINTING OFFICE: 1995-655-121/20030

TABLE OF CONTENTS CONT'D.

Chapter/Section **Page**

GLOSSARY GLOSSARY-1

ALPHABETICAL INDEX INDEX-1

HOW TO USE THIS MANUAL

This manual, (TM 10-8340-224-13), contains general information, operating instructions, PMCS instructions, troubleshooting steps, and maintenance instructions for the Tent, Extendable, Modular, Personnel (TEMPER). Use the front cover index and thumb bleeds at the edge of the pages to quickly find the sections of the manual shown on the cover.

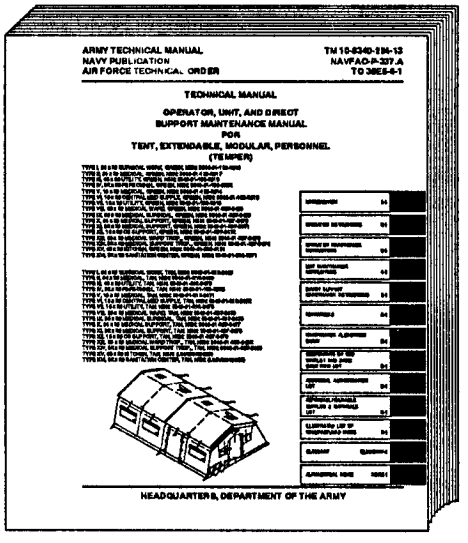

The manual has been divided into chapters, sections and paragraphs that are numbered in sequence. Pages, paragraphs, and illustrations are numbered by chapter. For example, chapter 2, page 3 is marked 2-3; chapter 3, paragraph 5 is marked 3-5; figure 2-3 is the third illustration in chapter 2. To quickly find specific information, use the table of contents. For example, the front cover index states that chapter 1 begins on page 1-1. The table of contents on page i tells you the exact page where the paragraph you want is located.

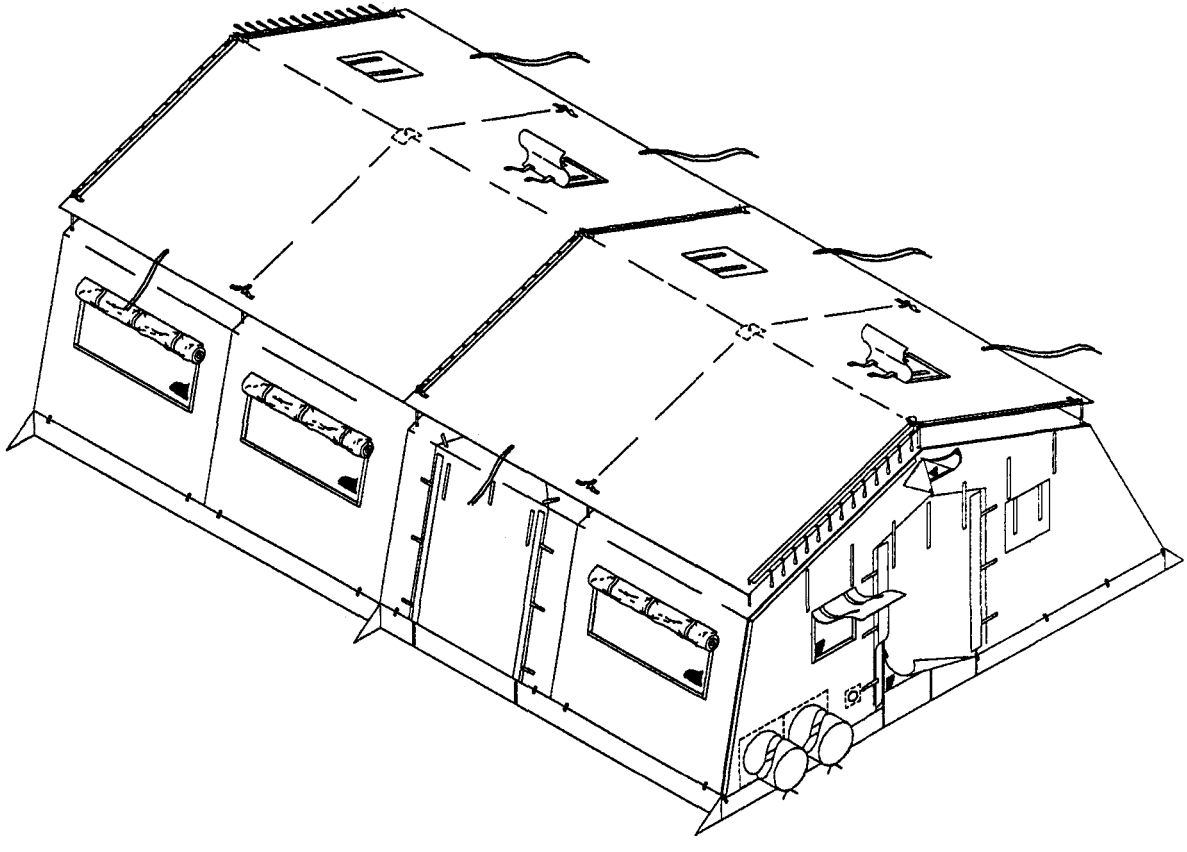

TENT, EXTENDABLE, MODULAR, PERSONNEL (TEMPER)

CHAPTER 1

INTRODUCTION

Subject — Section/Paragraph

General Information. I
Scope 1-1
Maintenance Forms and Records 1-2
Corrosion Prevention and Control (CPC) 1-3
Destruction of Material to Prevent Enemy Use 1-4
Preparation for Storage or Shipment 1–5
Quality Assurance (QA) 1-6
Reporting Equipment Improvement Recommendations (EIR) 1-7
Warranty Information 1–8
Nomenclature Cross-Reference 1-9
List of Abbreviations and Terms 1–10
Equipment Description II
Equipment Characteristics, Capabilities and Features 1-11
Location and Description of Major Parts 1-12
Differences Between Models 1-13
Equipment Data 1-14
Technical Principles of Operation III
Operation of the TEMPER. 1-15

Section I. GENERAL INFORMATION

1-1. SCOPE.

a. Type of Manual. Operator, Unit, and Direct Support Maintenance Manual that provides instructions for the set-up, operation, take down, maintenance, and repair procedures for all components of the Tent, Extendable Modular (TEMPER).

b. Purpose of Equipment. Provide environmental protection to support command and control, medical, supply and personnel housing operations.

c. Special Feature. Tent sections allow the tent layout to be configured as necessary to suit tactical considerations.

d. Model Number and Equipment Name. Figure 1-6 shows the various tent configurations and nomenclature.

1-2. MAINTENANCE FORMS AND RECORDS. Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750, The Army Maintenance Management System (TAMMS).