DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL

INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS)

RIFLE, 7.62-MM, M14, W/E

(1005- 589-1271)

RIFLE, 7.62-MM, M14A1, W/E

(1005-072- 5011)

BIPOD, RIFLE, M2

(1005-711-6202)

HEADQUARTERS, DEPARTMENT OF THE ARMY

AUGUST 1972

TECHNICAL MANUAL
NO. 9-1005-223-34

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C. *2 August 1972*

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

RIFLE, 7.62-MM: M14, W/E

RIFLE, 7.62-MM: M14A1, W/E

BIPOD, RIFLE: M2

This manual is current as of 27 June 1971

			Paragraph	Page	Illus. fig
CHAPTER	1.	INTRODUCTION			
Section	I.	General	1-1—1-3	3	1-1
	II.	Description and data	1-4—1-5	3,4	1-2
CHAPTER	2.	DIRECT SUPPORT AND GENERAL SUPPORT INSTRUCTIONS			
Section	I.	Repair parts, special tools, and equipment	2-1	5	
	II.	Troubleshooting	2-2—2-3	5	
	III.	Preembarkation inspection of materiel in units alerted for overseas movement	2-4	6	2-1
	IV.	General maintenance	2-5—2-8	8,9	
	V.	Removal and installation of major components and auxiliaries	2-9—2-10	9	
CHAPTER	3.	REPAIR OF MAGAZINE ASSEMBLY			
Section	I.	Disassembly and assembly	3-1—3-4	11	3-1
	II.	Cleaning, inspection and repair	3-5—3-7	11	
CHAPTER	4.	REPAIR OF THE FIRING MECHANISM			
Section	I.	Disassembly and assembly	4-1—4-4	13	
	II.	Cleaning, inspection and repair	4-5—4-7	13	
CHAPTER	5.	REPAIR OF STOCK AND HAND GUARD ASSEMBLIES			
Section	I.	Disassembly and assembly	5-1—5-4	15	
	II.	Cleaning, inspection and repair	5-5—5-7	15	
CHAPTER	6.	REPAIR OF THE OPERATING ROD AND CONNECTOR GROUP			
Section	I.	Disassembly and assembly	6-1—6-4	17	
	II.	Cleaning, inspection and repair	6-5—6-7	17	

*** This manual supersedes TM 9-1005-223-35, 1 July 1968 including changes.**

			Paragraph	Page	Illus. fig
CHAPTER	7.	REPAIR OF BLOT ASSEMBLY			
Section	I.	Disassembly and assembly	7-1—7-4	19	
	II.	Cleaning, inspection and repair	7-5—7-7	19,20	7-1,7-2, 7-3
CHAPTER	8.	REPAIR OF BARREL AND RECEIVER GROUP			
Section	I.	Disassembly and assembly	8-1—8-4	21	
	II.	Cleaning, inspection and repair	8-5—8-7	21—24	8-1,8-2, 8-3,8-4
CHAPTER	9.	REPAIR OF RIFLE BIPOD			
Section	I.	Disassembly and assembly	9-1—9-4	25	9-1
	II.	Cleaning, inspection and repair	9-5—9-7	25	
CHAPTER	10.	MAINTENANCE OF MATERIEL USE IN CONJUNCTION WITH MAJOR ITEM			
Section	I.	Introduction	10-1	27	
	II.	Grenade Launcher M76	10-2—10-7	27	10-1
	III.	Grenade Launcher Sight, M15	10-8—10-14	28	10-2,10-3, 10-4
	IV.	Bayonet-Knife, M6	10-15—10-21	28-30	10-5
CHAPTER	11.	FINAL INSPECTION	11-1—11-3	33	
APPENDIX	A.	REFERENCES	A-1—A-3	35	
APPENDIX	B.	DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)			
Section	I.	Introduction	B-1—B-6	37—39	
	II.	Repair Parts List			
		Major groups and assemblies—Rifle M14		56	1
		Major groups and assemblies—Rifle M14A1		57	2
		Firing mechanism		58	3
		Stock assembly with butt plate—Rifle M14		59	4
		Shoulder gun stock assembly—Rifle M14A1		60	5
		Operating rod and connector group		61	6
		Bolt assembly		61	7
		Barrel and receiver group		62	8
		Stabilizer assembly		62	9
		Rifle Bipod. M2		63	10
		Combination tool		63	11
		Kit, Winter Trigger		63	12
		Tools and Equipment Authorized for Unit Replacement		63,64	12,13,14
		Special Tools and Equipment		65	15
	IV.	Federal Stock Number and Reference Number Index		66	

CHAPTER 1

INTRODUCTION

Section I. GENERAL

1-1. Scope

These instructions are in accordance with the maintenance allocation chart (TM 9-1005-223-20) and are published for the use of direct support and general support personnel maintaining the 7.62-MM Rifle. M14, M14A1 and Rifle Bipod, M2. They provide information on the maintenance of the equipment, which is beyond the scope of the tools,/equipment, personnel, or supplies normally available to operator and for organizational maintenance.

1-2. Forms and Records

Maintenance forms, records, and reports which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750.

1-3. Reporting of Errors

Report of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028, Recommended Changes to Publications, and forwarded direct to: Commanding General, US Army Weapons Command, ATTN: AMSWE-MAS/SP, Rock Island, Illinois 61201.

Section II. DESCRIPTION AND DATA

1-4. Description.

Refer to TM 9-1005-223-10 and TM 9-1005-223-20 and figures 1-1 and 1-2.

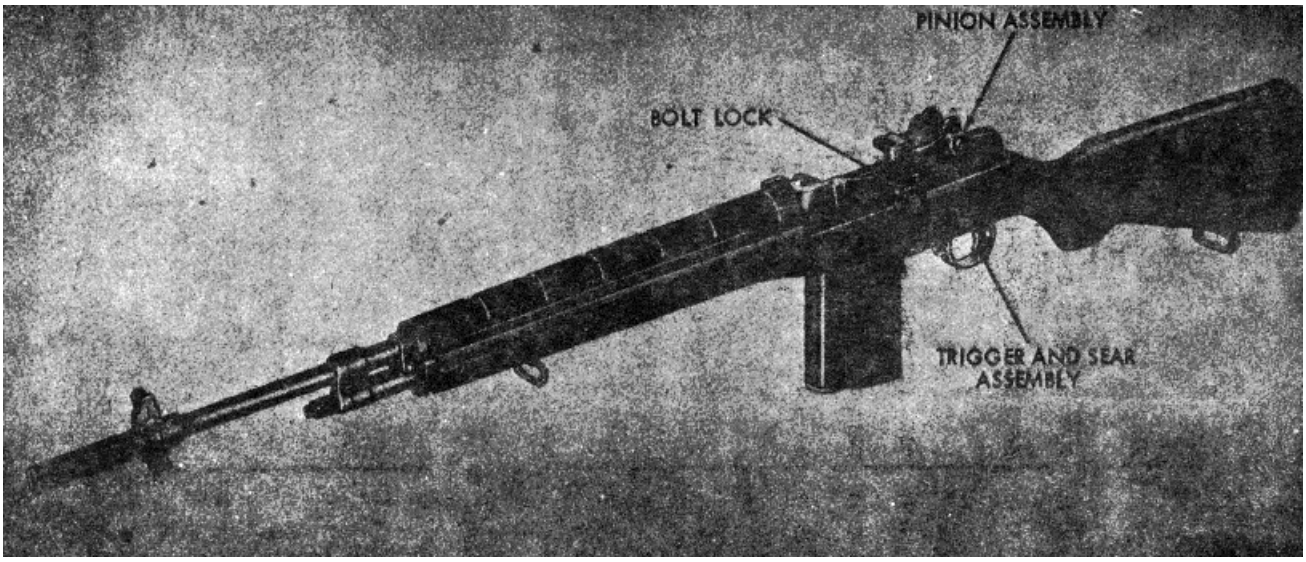

Figure 1-1. 7.62-MM Rifle. M14-left view.