DEPARTMENT OF THE ARMY TECHNICAL; MANUAL

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

40-MM GRENADE LAUNCHER M79

(1010-691-1382)

HEADQUARTERS, DEPARTMENT OF THE ARMY

JULY 1972

This reprint includes all changes in effect at the time of publication changes 1 through 3.

TECHNICAL MANUAL
No. 9-1010-205-24

HEADQUARTERS,
DEPARTMENT OF THE ARMY
WASHINGTON. D.C., *13 July 1972*

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST) FOR 40-MM GRENADE LAUNCHER M79 (1010-691-1382)

Current as of 6 April 1972

			Paragraph	Page
CHAPTER	1.	INTRODUCTION		4
Section	I.	General	1-1	4
	II.	Description and data	1-5	5
CHAPTER	2.	ORGANIZATIONAL MAINTENANCE INSTRUCTIONS		6
Section	I.	Service upon receipt of materiel	2-1	6
	II.	Repair parts, special tools, and equipment	2-2	6
	III.	Lubrication instructions	2-3	6
	IV.	Preventive maintenance checks and services	2-4	6
	V.	Troubleshooting	2-5	7
	VI.	Organizational maintenance procedures	2-6	7
CHAPTER	3.	DIRECT SUPPORT AND GENERAL SUPPORT		
Section	I.	MAINTENANCE INSTRUCTIONS		12
	II.	Repair parts, special tools, and equipment	3-1	12
	III.	Troubleshooting	3-2	13
	IV.	Maintenance inspections	3-3	14
		General maintenance	3-4	16
CHAPTER	4.	DIRECT SUPPORT AND GENERAL SUPPORT REPAIR INSTRUCTIONS		17
	5.	FINAL INSPECTION	5-1	36
	6.	ADMINISTRATIVE STORAGE		39
APPENDIX	A.	REFERENCES	A-1	40
	B.	MAINTENANCE ALLOCATION CHART		41
Section	I.	Introduction	B-1	41
	II.	Maintenance allocation chart		42

*This manual supersedes TM 9-1010-205-12, 3 February 1961, including changes; TM 9-1010-205-24P, 26 June 1968; and TM 9-1010-205-34, 28 June 1966**,** including changes.

			Paragraph	Page
APPENDIX	C.	COMBINED ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)		43
Section	I.	Introduction	C-1	43
	II.	Repair parts list for organizational maintenance		47
	III.	Special tools, test and support equipment for organizational maintenance		48
	IV.	Repair parts list for direct support and general support maintenance		49
	V.	Special tools, test and support equipment for direct support and general support maintenance		55
	VI.	Federal stock number and reference number index		60

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1.	40-MM grenade launcher M79-right rear view.	4
1-2.	40-MM grenade launcher M79-left front view.	4
2-1.	40-MM grenade launcher M79-partial disassembly.	8
2-2.	Removing or installing firing pin retainer.	10
2-3.	Receiver group-partially exploded view.	11
3-1.	Improvised tool for assembly and installation of hammer and cocking lever.	12
3-2.	Using fabricated pin to assemble hammer, cocking lever, and allied parts	12
3-3.	Alignment of fabricated pin with associated parts	12
3-4.	Bore gage.	13
3-5.	Measuring trigger pull with trigger pull measuring fixture 4933-647-3696.	15
4-1.	Scribing front sight and barrel.	20
4-2.	Removing or installing front sight and rear sight assemblies.	20
4-3.	Inspection points of barrel group and front sight assembly.	21
4-4.	Rear sight assembly-exploded view.	22
4-5.	Inspection points of rear sight assembly.	23
4-6.	Expanding rear sight base to free it from groove in barrel.	23
4-7.	Barrel group and front sight-exploded view.	24
4-8.	Receiver group-exploded view.	31
4-9.	Inspection points of receiver group.	32
4-10.	Depressing latch lock to return barrel locking latch to firing position.	33
4-11.	Removing or installing safety actuator and spring.	33
4-12.	Removing safety spring	33
4-13.	Using punch to separate detent from retainer.	34
4-14.	Stock assembly--exploded view	34
4-15.	Inspection points of stock and fore end assemblies.	35
4-16.	Fore end assembly-exploded view.	35
C-1.	Rear sight assembly-exploded view.	56
C-2.	Barrel group and front sight-exploded view.	57
C-3.	Stock assembly-exploded view.	57
C-4.	Receiver group-exploded view.	58
C-5.	Fore end assembly and screwdriver and wrench combination-exploded view.	59
C-6.	Tools and equipment for 40-MM grenade launcher M79.	59

LIST OF TABLES

Number	Title	Page
2-1.	Service Upon Receipt of Materiel	6
2-2.	Organizational Preventive Maintenance Checks and Services	7
2-3.	Troubleshooting-Organizational	7
2-4.	Organizational Maintenance Procedures of Fore End Assembly and Receiver Group.	9
3-1.	Improvised Tools	12
3-2.	Troubleshooting-Direct Support and General Support	14
3-3.	Initial Inspection Procedures	15
4-1.	Repair Instructions for Front Sight Assembly	17
4-2.	Repair Instructions for Rear Sight Assembly.	17
4-3.	Repair Instructions for Barrel Group.	19
4-4.	Repair Instructions for Receiver Group	25
4-5.	Repair Instructions for Stock Assembly	29
4-6.	Repair Instructions for Fore End Assembly	30
5-1.	Final Inspection	37

CHAPTER, 1

INTRODUCTION

Section I. GENERAL

1-1. Scope

This manual contains instructions for organizational, direct support, and general support maintenance personnel maintaining the 40-MM grenade launcher M79 (figs. 1-1 and 1-2). It also contains lists of repair parts and special tools.

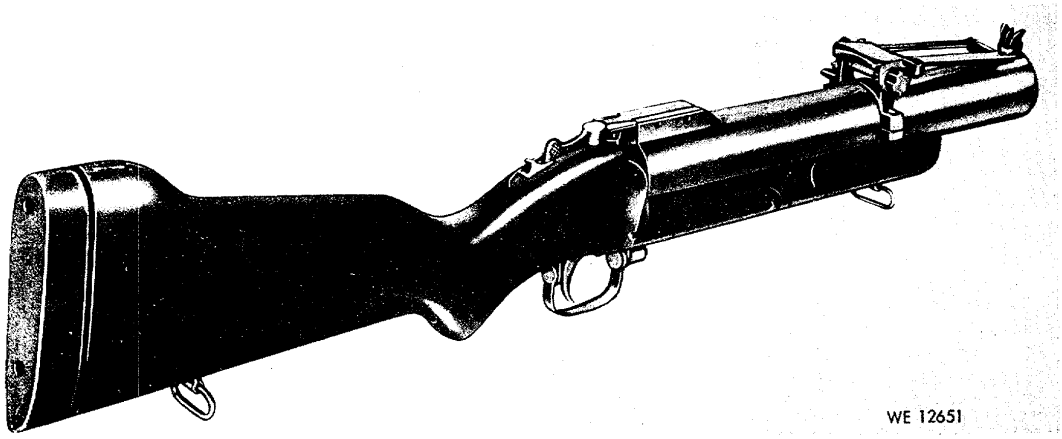

Figure 1-1. 40-MM grenade launcher M79-right rear view.

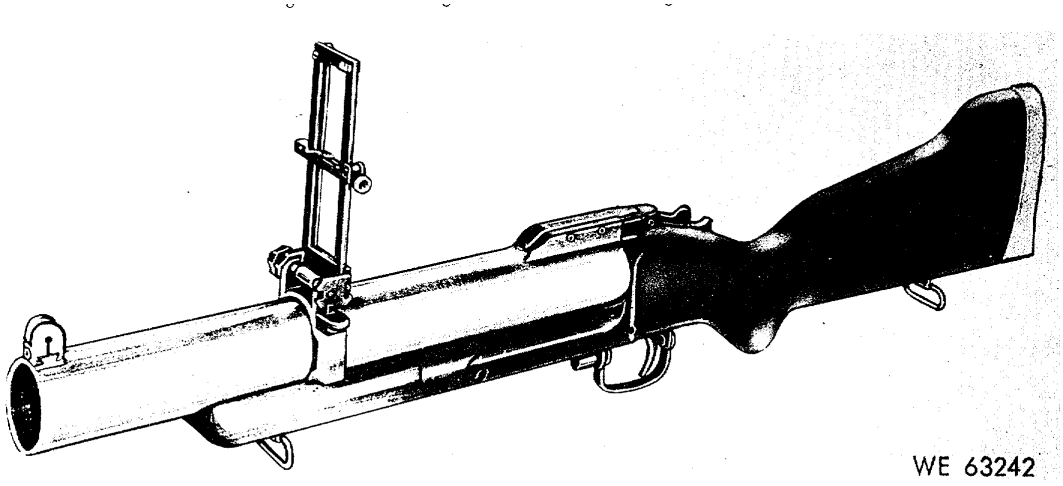

Figure 1-2. 40-MM grenade launcher M79-left front view.